



TRACKER LOCK

Quick guide



 
Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPods, Mac, macOS and watchOS are trademarks of Apple Inc., registered in the U.S. and other countries. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

open or download the free Apple Find My app from the App Store.



switch on:
press for 5 seconds.
open Apple Find My App.
top: Items *+*
top: Add Other Item (+)
BOOMPDS LOCK will now show top: Connect.

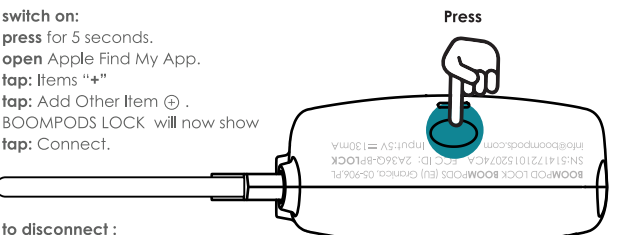


to disconnect:
press 5 times quickly.
to factory reset:
first remove from Find My App.
press 2 times, then immediately press and hold for 8 seconds.



battery capacity: 3.7V 150mAh.
working time: depending on buzzer usage 5-6 months per charge.
charge time: 1.5 hours.
waterproof: IPX6.
USB-Type C: over voltage protection.
built in buzzer: 100 db sound.

 charging:
use supplied USB-C cable.

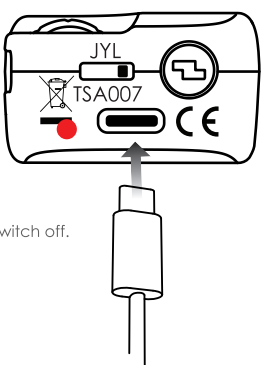

red LED will appear.
once charged LED will switch off.

Please read instructions before use, and keep for future reference.

WARNING:
Keep away from children. If swallowed or inserted, seek immediate medical attention.
Product not a toy or edible. Mobile device coatings can weaken signal and reduce visibility. Avoid large metal objects near device and Boompods lock. Interference with Bluetooth signal.
Caution: Lithium battery inside. Risk of explosion with incorrect use. Avoid direct heat and mechanical stress. Do not disassemble Boompod. Risk of electric shock and voiding warranty.

Warranty- UK & Europe
Your BOOMPDS product is guaranteed against any defects in material or workmanship for 2 years from the date of original purchase providing it has not been disassembled and it has not suffered accidental damage.

Warranty- US & Canada
Your BOOMPDS product is guaranteed against any defects in material or workmanship for 1 years from the date of original purchase providing it has not been disassembled and it has not suffered accidental damage.

The device must be used in accordance with the user manual. The warranty is subject to presentation of the original invoice or receipt from the retailer and does not apply to normal wear and tear or to any device that has been misused or tampered with. It should be returned to the local service centre, the service centre will not bear any shipping cost of the returned item.

Please check www.boompods.com for your local service centre
The Declaration of Conformity can be found at: <https://www.boompods.com/product/boompods-lock>
Hereby, Boompods declares that the radio equipment type [Tracker with Bluetooth] is in compliance with Directive 2014/53/EU.



Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device complies with portable exposure condition without restriction.

www.boompods.com

BOOMPDS is a trademark of BOOMPDS LTD. BOOMPDS® ©2024 All Rights.
BOOMPDS (EU), Gronica, 05-804, PL.
info@boompods.com. Registered No: 0847066. Made in China.






TRACKER LOCK

Using this Travel Sentry® Approved lock allows your luggage to be unlocked and inspected by security authorities without damage.

Setting your own combination

The factory combination number is set at 0-0-0.

To set your own number:

- (1) Keep at the factory 0-0-0 setting; slide the combination "SET" switch (left) so the word "SET" disappears.
- (2) Turn the number wheels, to set your number. NOTE, this is the window on the side of the lock.
- (3) Slide the combination "SET" switch (right) so you can see the word "SET". Your new number is now fixed.

You can change your combination and reset your lock by following the above steps as often as you like.

Keep your combination in a safe and accessible place for future reference.

(1).

(3).

(2).

using the cable

Now that you have set your combination number, you can use the cable lock.

- (1) Slide the right side of the cable over to the left, and then pull up.
- (2) To lock, simply place the cable back into the larger hole, and it will automatically slide into the locked position.

(1) OPEN.

(2) LOCK.

No Key is provided. There is no possibility to reset the lock if you have forgotten the code, so please record your combination in a safe and accessible place for future reference.

I HAVE FORGOTTEN MY COMBINATION

Unfortunately, once you set your combination on your lock, it cannot be overridden. You may be able to recover your combination if you have some time and patience. If your lock is a 3 digit combination lock, and you have about 30 minutes to spare, then please try all of the possible combinations from 000-999 (000, 001, 002, 003 through to 999). You may think this will take a long time, but it should not take you more than 30 minutes, and if you can remember the first digit of your forgotten code then it will take significantly less than 30 minutes. Try it out, as it will save you from potentially having to buy a new lock.



TRACKER LOCK

Schnellstartanleitung



Works with Apple Find My

Die Verwendung des "Works with Apple"-Abzeichens bedeutet, dass ein Produkt speziell für die Zusammenarbeit mit der in dem Abzeichen identifizierten Technologie entwickelt wurde und vom Produkt-Hersteller zertifiziert wurde, um den Produktspezifikationen und -anforderungen des Apple Find My-Netzwerks zu entsprechen. Apple ist nicht verantwortlich für den Betrieb dieses Geräts, die Verwendung dieses Produkts oder dessen Einhaltung von Sicherheits- und Regularisierungsstandards.

 
Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPodOS, Mac, macOS und watchOS sind Marken von Apple Inc., die in den USA und anderen Ländern registriert sind. iOS ist eine Marke oder eingetragene Marke von Cisco in den USA und anderen Ländern und wird unter Lizenz verwendet.

Kurzanleitung:
Öffne die iOS App „Wo ist?“ oder
downloade diese aus dem App Store.



Download on the App Store

Einschalten:
Für 5 Sekunden gedrückt halten
Öffne die Apple „Wo ist?“ App
Tippe: Geräte
Tippe: Anderes Objekt hinzufügen
LOCK wird nun angezeigt
Tippe: Verbinden

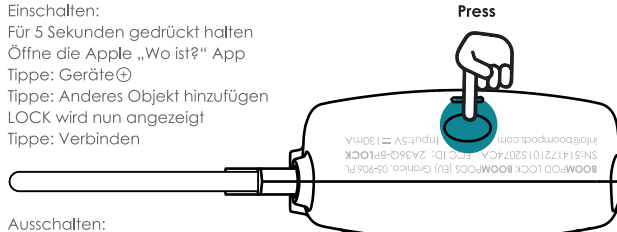


Ausschalten:
5 x kurz drücken
Reset: LOCK in den Auslieferungszustand zu versetzen:
2 x kurz drücken, dann sofort 8 Sekunden gedrückt halten



battery capacity: 3.7V 150mAh,
working time: depending on buzzer usage 5-6 months per charge,
charge time: 1.5 hours.
waterproof IPX6,
USB- Type C: over voltage protection,
batt in buzzer: 100 db sound.

 Laden:
Verwenden Sie das mitgelieferte USB-C-Kabel.

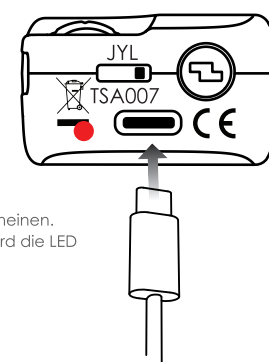

Die rote LED wird erscheinen.
Sobald geladen ist, wird die LED
sich ausschalten.

Bitte lesen Sie die Anleitung vor der Verwendung und bewahren Sie sie zur späteren Referenz auf.

WARNUNG:
Von Kindern fernhalten. Bei Verschlucken oder Einführen sofort medizinische Hilfe aufsuchen. Dieses Produkt ist kein Spielzeug oder essbar. Handhygiene können das Signal schwächen und die Sichtbarkeit reduzieren. Vermeiden Sie große Metallobjekte in der Nähe des Geräts und des Boompods. Störung des Bluetooth-Signals möglich.

Vorsicht: Lithiumbatterie im Inneren. Explosionsgefahr bei unsachgemäßer Verwendung. Direkte Hitze und mechanischen Stress vermeiden. Boompods lock nicht zerlegen. Stromschlaggefahr und Verlust der Garantie.

Garantie - Großbritannien & Europa
Ihr BOOMPÖDS-Produkt ist für 2 Jahre ab Kaufdatum gegen Material- oder Verarbeitungsfehler garantiert, sofern es nicht zerlegt wurde und keinen Unfall- oder Wasserschaden erlitten hat.

Garantie - USA & Kanada
Ihr BOOMPÖDS-Produkt ist für 1 Jahr ab Kaufdatum gegen Material- oder Verarbeitungsfehler garantiert, sofern es nicht zerlegt wurde und keinen Unfall- oder Wasserschaden erlitten hat.

 
 
 
Das Gerät muss gemäß dem Benutzerhandbuch verwendet werden. Die Garantie gilt nur bei Vorlage der Originalrechnung oder des Kassenbelegs des Händlers und nicht bei normaler Abnutzung oder bei unsachgemäßer Verwendung oder Manipulation des Geräts. Es sollte an das lokale Servicezentrum zurückgegeben werden; das Servicezentrum übernimmt keine Versandkosten für das zurückgesandte Gerät.

Bitte besuchen Sie www.boompods.com für Ihr lokales Servicezentrum. Die Konformitätsprüfung finden Sie unter: <https://www.boompods.com/product/boompods-lock>
Hiermit erklärt Boompods, dass der Funkkonfigurations [Tracker mit Bluetooth] der Richtlinie 2014/53/EU entspricht.

Más informació • Plus d'informations
Mehr Informationen • Ulteriori informazi
Mais informações • Więcej informacji
Meer informatie • Daha fazla bilgi....



www.boompods.com

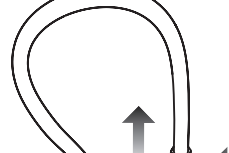 TRACKER LOCK  BLOOMPODS® Using this Travel Sentry® Approved lock allows your luggage to be unlocked and inspected by security authorities without damage.	Einstellung Ihrer eigenen Kombination Die Werkseinstellung der Kombination ist auf 0-0-0 gesetzt.  Um Ihre eigene Nummer einzustellen: (1) Halten Sie die Werkseinstellung 0-0-0 bei und schieben Sie den Kombinations-"SET"-Schalter (links), sodass das Wort "SET" verschwindet. (2) Drehen Sie die Zahlenräder, um Ihre Nummer einzustellen. Hinweis: Dies ist das Fenster an der Seite des Schlosses. (3) Schieben Sie den Kombinations-"SET"-Schalter (rechts), sodass Sie das Wort "SET" sehen können. Ihre neue Nummer ist jetzt festgelegt. Sie können Ihre Kombination ändern und Ihr Schloss zurücksetzen, indem Sie die obigen Schritte so oft wie gewünscht wiederholen. Bewahren Sie Ihre Kombination an einem sicheren und zugänglichen Ort für die zukünftige Verwendung auf.	 (1).  (2).  (3).	Verwendung des Kabels Nun, da Sie Ihre Kombinationsnummer eingestellt haben, können Sie das Kabelschloss verwenden. (1) Schieben Sie die rechte Seite des Kabels nach links und ziehen Sie es dann nach oben. (2) Zum Verriegeln legen Sie das Kabel einfach wieder in das größere Loch, und es wird automatisch in die verriegelte Position gleiten.   (1) OFFEN. (2) SCHLIESSEN.	Es wird kein Schlüssel mitgeliefert. Es besteht keine Möglichkeit, das Schloss zurückzusetzen, wenn Sie den Code vergessen haben. Bitte notieren Sie daher Ihre Kombination an einem sicheren und zugänglichen Ort für die zukünftige Verwendung.  I HAVE FORGOTTEN MY COMBINATION Leider kann Ihre Kombination nach dem Einstellen nicht überschrieben werden. Sie können Ihre Kombination möglicherweise wiederherstellen, wenn Sie etwas Zeit und Geduld haben. Wenn Ihr Schloss eine dreistellige Kombination hat und Sie etwa 30 Minuten Zeit haben, versuchen Sie bitte alle möglichen Kombinationen von 000 bis 999 (000, 001, 002, 003 bis 999). Sie denken vielleicht, dass dies lange dauern wird, aber es sollte nicht länger als 30 Minuten dauern. Wenn Sie sich an die erste Ziffer Ihres vergessenen Codes erinnern können, dauert es sogar deutlich weniger als 30 Minuten. Probieren Sie es aus, da es Ihnen möglicherweise den Kauf eines neuen Schlosses erspart. Bitte notieren Sie Ihre Kombination an einem sicheren und zugänglichen Ort für die zukünftige Verwendung.
--	---	--	---	---