

46695 RADIO CONTROL VEHICLES

FCC DECLARATION OF CONFORMITY

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :
(1) this device may not cause harmful interference , and (2) this device must accept any interference received ,
including interference that may cause undesired operation .

Product : Radio control vehicles Model : 46695 Responsible Party: 602 Edgemoor Hopkins MN. 55305, USA. Phone : 1-800-567-1774

THE FCC WANTS YOU TO KNOW

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Recipient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- If you cannot eliminate the interference , the FCC requires that you stop using your jalopy .
Changes or modifications not expressly approved by Supreme Toy may cause interference and void the user's authority to operate the equipment .

INSTALLING BATTERIES

You need two AA batteries to power the jalopy , and one 9-volt battery for its transmitter .

When the jalopy stops operating properly, replace the batteries .

1. Slide ON / OFF on the bottom of the jalopy to OFF .
2. Use a screwdriver to remove the battery compartment cover's screw from the bottom of the jalopy , then remove the cover .
3. Place the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside .
4. Replace the cover and secure it with the screw .

IN THE TRANSMITTER

The transmitter requires one 9 - volt battery (not supplied) . For best performance and longest life , we recommend Supreme Toys alkaline batteries .

1. Use a screwdriver to remove the battery compartment cover's screw , then remove the cover .
2. Place a battery in the compartment according to the polarity symbols (+ and -) marked inside .
3. Replace the cover and secure it with the screw .

OPERATION

1. Slide ON / OFF on the bottom of the jalopy to ON .
2. Hold down ▲ to move forward . The headlights turn on and move .
3. Release ▲ to move forward . The headlights turn on and move .
4. Hold down ▼ to circle backward . The headlights turn on and move .
5. When you finish driving the jalopy , slide ON /OFF to OFF .

HELPFUL HINTS

These hints can help you get the most enjoyment from your jalopy .

- Running your jalopy continuously for long periods generates high heat levels . Heat cause wear and tear on the motor . To help keep heat levels down , when your jalopy's battery power dies , let the jalopy cool at least 10 minutes before installing new batteries .
- If the jalopy's motor runs but the jalopy does not respond to the transmitter , move the transmitter closer to the jalopy and try again . The control distance is about 30 feet .
- If someone uses a CB nearby , it might interfere with control of the jalopy . If this happens , move the jalopy away from the CB .
- You cannot operate your jalopy near devices with transmitters that use the same frequency (27 or 49 MHz) . Check the jalopy's box to see which frequency your jalopy uses .

CARE

Keep the jalopy dry ; if it gets wet , wipe it dry immediately . Use and store the jalopy only in normal temperature environments . Handle the jalopy carefully ; do not drop it . Keep the jalopy away from dust and dirt , and wipe it with a damp cloth occasionally to keep it looking new .

SERVICE AND REPAIR

If your jalopy is not performing as it should , take it to your local Supreme Toys for assistance . Modifying or tampering with the jalopy's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it .