

# 260mm

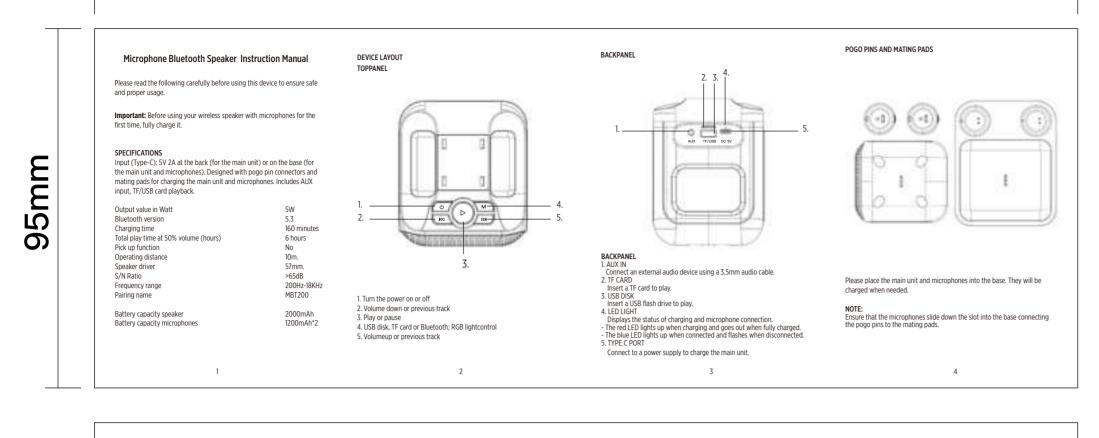

MICROPHONE PANEL 1. To control power and various volume settings: Turn the power on or off.
 Switch between music volume, micro volume, and reverberation volume. Play or pause by double-clicking.2. To increase volume or move to the next track. 3. To decrease volume or go to the previous track.

4. To control the microphone:
Switch between "original sound on" and "original sound off"

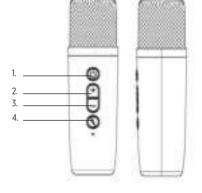

# POWER ON

To power on the device and enter Bluetooth pairing mode, press and hold the power button for 3 seconds. USING

# NOTES:

- Only one sound source can be played at a time. The priority order is TE/LISB / RILLETOOTH/ALIX Starting a source with higher priority will always interrupt a source with lower priority. - To start a source with lower priority, stop the source with higher priority

## BLUETOOTH CONNECTION:

- You can use the speaker with your Bluetooth-enabled smartphone or tablet. - Choose "MBT200" on your Bluetooth device to connect. - Once successfully connected, you can stream audio from your Bluetooth device to this speaker.

- To terminate the Bluetooth-enabled device: • Turn off this speaker or

Disable Bluetooth on your device.

- To reconnect the Bluetooth-enabled device: • When you turn on this speaker next time, it tries to reconnect the last

6

connected device automatically. • If not, manually select "MBT200" on your Bluetooth device

to connect.

### TF/USB CONNECTION Insert a TF card or USB storage device containing playable audio content into the TF card slot or USB port of the speaker. The speaker will switch to the TF card or USB source automatically. Audio playback will begin automatically

MUSIC CONTROL Press the "play" button once to pause or resume playback.

AUX CONNECTION Attach an external audio device to the speaker using a 3.5 mm AUX cable (cable not included).
 Once playback from any other source has been stopped, commence audio playback on the external device.

# MIXING SOUND WITH A MICROPHONE When utilizing a microphone, you have the ability to blend sound with an audio source.

NOTES: - Prior to connecting or disconnecting the microphone, ensure that the microphone volume is set to the minimum level When not in use, always switch off the microphone.

#### CONNECTING THE MICROPHONE The wireless microphone is pre-paired with the speaker by default at the factory. Turn on the speaker and then the supplied wireless microphones one by one You will hear a prompt tone once the wireless connection is successfully

SING THROUGH THE MICROPHONE To adjust the volume of the audio source, press the "+" or "-" button once to increase or decrease it.

#### LIGHT EFFECT You can switch between seven performance styles by double-clicking "M".

Press and hold the "M" button for 3 seconds to turn off the light. RECHARGING YOUR MAIN UNIT AND MICROPHONES: To recharge your main unit and microphones, place them into the base and use the provided USB cable to connect the Type-C port on the base to a USB wall charging adapter. During the recharge process, the red LEDs will be illuminated. Once the main unit and microphones are fully charged, all red LEDs will turn off. You can also charge the main unit separately by connecting the supplied USB cable to the Type-C port on the back of the

## NOTICE

 Keep the product dry; do not place the product in damp places.
 Keep out of direct sunlight and high temperatures. High temperatures may result in damage.


- Keep out of cold temperatures; this will help avoid internal damage.
   Improper usage can lead to explosions or the risk of chemical burns. When damaged, batteries can cause chemical burns upon contact with human skin. 5. Do not disassemble the product.
- 6. Avoid dropping the product.

main unit to a USB wall charging adapter.

- Production of the product over 10 hours.
   When charging use the Type-C charging cable that came with the product.
- 9. Only charge with devices rated and marked with 5V to avoid damage to the speaker.
- Battery life and number of charge cycles varies by use and settings.
   Keep away from small children. This is not a toy. 12. To maintain good battery health, the item should be recharged every
- 6 months. The battery will lose capacity when stored without charging.

8

# 260 x 95mm 70g书写纸 双面印刷

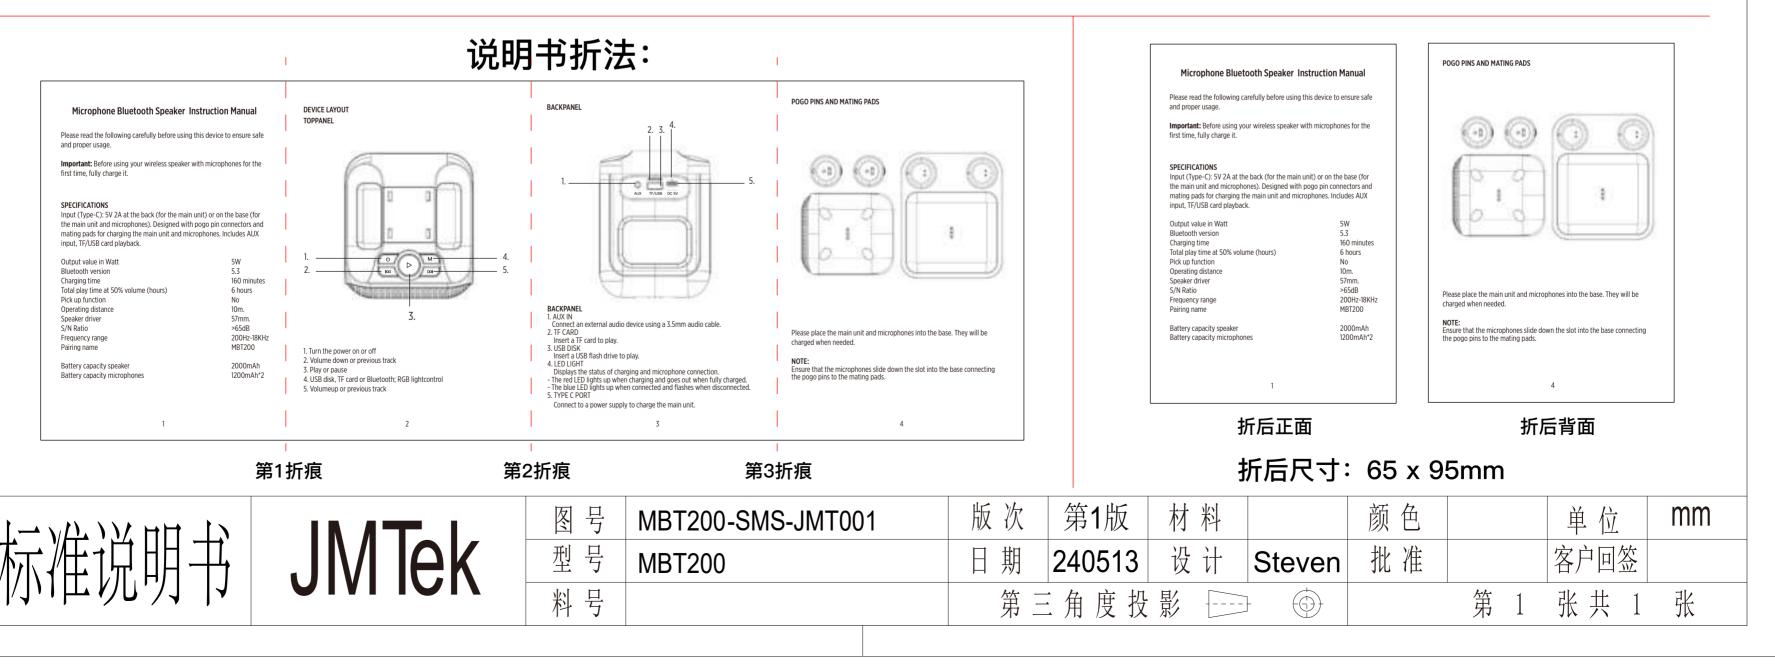

# PDF

# 正面 (Front)



# FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and

This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.