

Hisense

4.1.2 channel ATMOS Wireless Home Theater Model: HT Saturn

EN

RU



 **Dolby Atmos**

 **Bluetooth®**

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

dtshd

USER MANUAL



Before using the soundbar, please read this manual thoroughly and retain it for future reference.

Contents

| | |
|---|-----------|
| 1. Important Safety Instructions | 3 |
| 1.1 Safety..... | 3 |
| 1.2 Caution | 4 |
| 1.3 Warning | 4 |
| 2. What's in the Box | 5 |
| 3. Identifying the Parts | 6 |
| 3.1 Satellite Speaker | 6 |
| 3.2 Wireless Subwoofer..... | 6 |
| 3.3 Main unit..... | 6 |
| 3.4 Remote Control | 7 |
| 3.5 Prepare the Remote Control | 8 |
| 4. Placement and Mounting | 9 |
| 4.1 Placement..... | 9 |
| 4.2 Wall Mounting (if using option-B)..... | 9 |
| 5. Connections | 10 |
| 5.1 Dolby Atmos® | 10 |
| 5.2 DTS: X | 10 |
| 5.3 Use the HDMI Socket..... | 10 |
| 5.4 Use the Hisense EzPlay Function..... | 10 |
| 5.5 Hi-Concerto function..... | 11 |
| 5.6 Use the OPTICAL Socket..... | 11 |
| 5.7 Connect Power | 12 |
| 5.8 Adapter connect power | 12 |
| 5.9 Pair up with the Subwoofer/Satellite Speaker and Main unit..... | 12 |
| 6. Basic Operation | 13 |
| 6.1 Standby/ON | 13 |
| 6.2 Automatic Power Off Function | 13 |
| 6.3 Select Modes | 13 |
| 6.4 Adjust the Volume | 13 |
| 6.5 Select Equalizer (EQ) Effect..... | 13 |
| 6.6 Setup menu | 13 |
| 7. OPTICAL / HDMI Operation..... | 13 |
| 8. Bluetooth Operation | 14 |
| 8.1 Pair Bluetooth-enabled Devices..... | 14 |
| 8.2 Listen to Music from Bluetooth Device..... | 14 |
| 9. Troubleshooting | 15 |
| 10. Specifications..... | 16 |

1. Important Safety Instructions



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1.1 Safety

- 1 **Read these instructions** – All the safety and operating instructions should be read before this product is operated.
- 2 **Keep these instructions** – The safety and operating instructions should be retained for future reference.
- 3 **Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
- 4 **Follow all instructions** – All operating and usage instructions should be followed.
- 5 **Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool and the like.
- 6 **Clean only with a dry cloth.**
- 7 **Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety.

If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.



- 12 Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

- 13 Unplug the apparatus during lightning storms or when unused for long periods of time.

- 14 Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.

- 15 ☐ This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

- 16 The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.

- 17 Minimum distance around the apparatus for sufficient ventilation is 5cm.

- 18 The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

- 19 No naked flame sources, such as lighted candles, should be placed on the apparatus.

- 20 Batteries should be recycled or disposed of as per state and local guidelines.

- 21 The use of apparatus in moderate climates.

EN

RU

1.2 Caution

- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on apparatus.
- The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

1.3 Warning

- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- Do not place this unit close to strong magnetic fields.
- Do not place this unit on the amplifier or receiver.
- If any solid object or liquid falls into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not attempt to clean the unit with chemical solvents as this may damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
- The rating label is pasted on the bottom or back of the equipment.



Battery usage CAUTION

To prevent battery leakage which may result in bodily injury, property damage, or damage to the apparatus:

- Install all batteries correctly, + and - as marked on the apparatus.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon-Zinc) or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Remove batteries when the unit is not used for a long time.



 
Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.




We hereby declares that this product is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/EU and UK Radio Equipment Regulations 2017.


2. What's in the Box

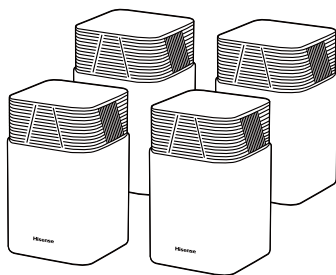

Satellite Speaker x 4

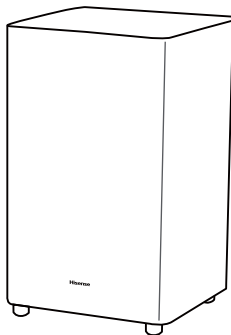 


Wireless Subwoofer x 1

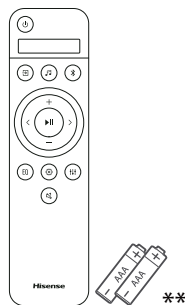 


Remote Control /
AAA Batteries x 2



 
Main Unit x 1

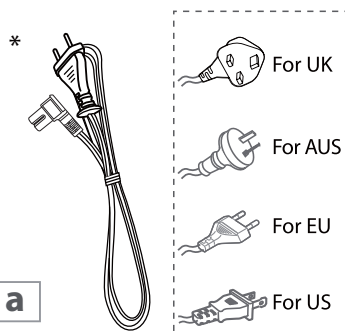


AC Power Cord x 5

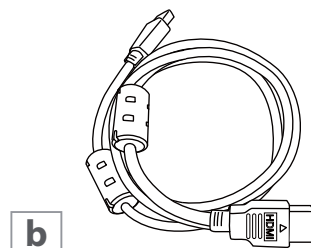 


HDMI Cable x 1

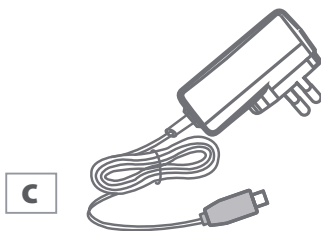 


Adapter x1

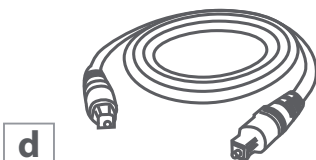 

OPTICAL Cable x 1

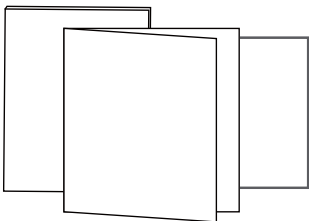 

 User Manual/Warranty card
/Quick start guide

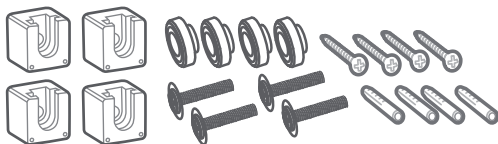


Wall Mount Kit x 1

- * Power cord quantity and plug type vary by regions. **The accessories may be different from the list above due to different models, countries/ regions, please refer to the actual accessory bag.
- Images, illustrations and drawings shown on this User Manual are for reference only, actual product may vary in appearance.

3. Identifying the Parts

3.1 Satellite Speaker

 
- 1 **LED Indicators**
- 2 **Wall Mounting Bracket Screw Hole**
- 3 **PAIR button**
- 4 **Floor Stand Screw Hole**
Used to install a floor support.
- 5 **AC~ Socket**
Use to connect the power cable.

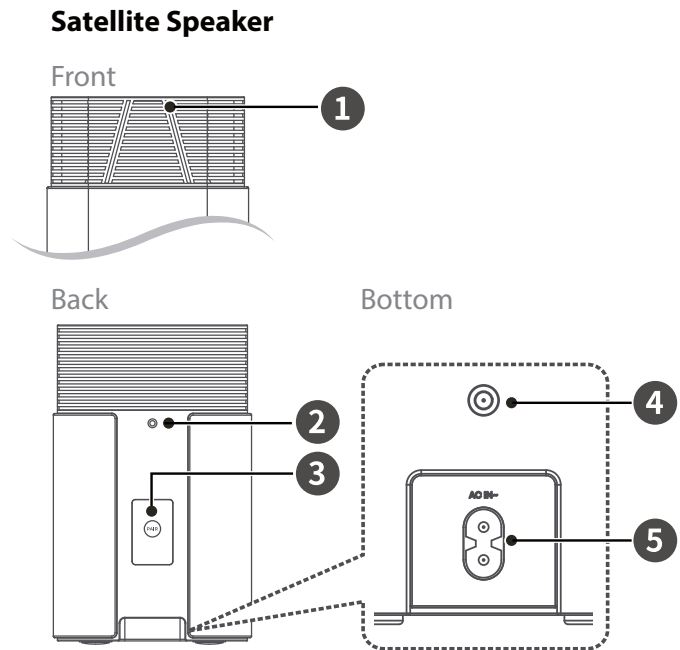

3.2 Wireless Subwoofer

- 6 **PAIR button**
- 7 **AC~ Socket**
Use to connect the power cable.
- 8 **LED Indicators**

  
Wireless Subwoofer

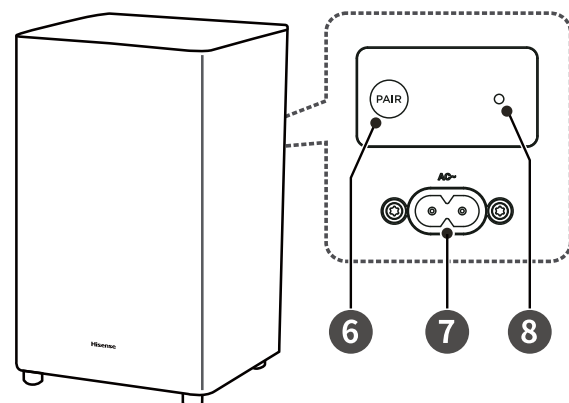







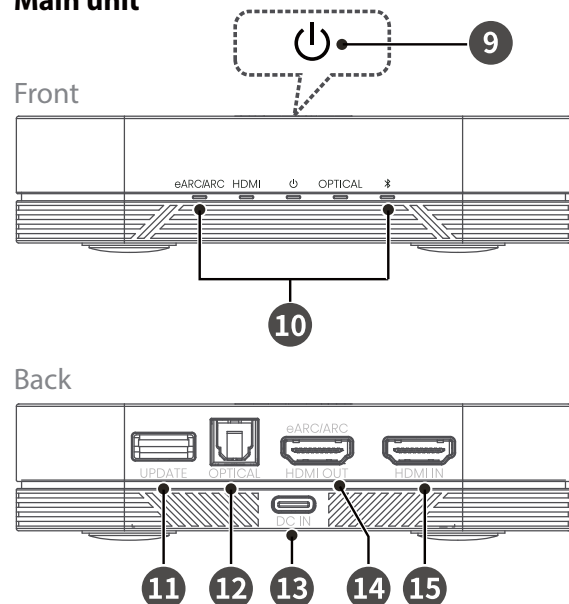

3.3 Main unit

 
- 9 **⏻ (ON/OFF) button**
 - Press and hold for 3 seconds to switch on/off the main unit.
 - Press to select the play function.
- 10 **LED Indicators**
Switch the playback source and the front indicator lights up accordingly. The indicator light on the front of the main unit will show which mode is currently in use.
- 11 **UPDATE Socket**
For maintenance and upgrade services.
- 12 **OPTICAL Socket**
Use to connect the main unit to a OPTICAL OUT socket on an external device.
- 13 **DC IN Socket**
Use to connect the adapter.
- 14 **HDMI OUT (eARC/ARC) Socket**
- 15 **HDMI IN Socket**

Main unit








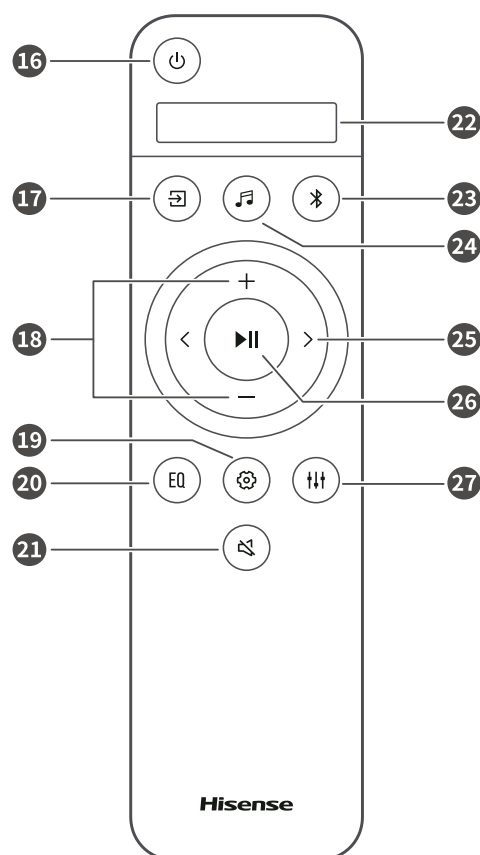


3.4 Remote Control

 
- 16**  Switch the main unit between ON and STANDBY mode.
- 17**  Press to select the play function.
- 18** **+/-**
- Increase/decrease the volume level.
 - Navigate up/down in menu structure.
- 19**  Enter setup menu.
- 20** **EQ**
Select Equalizer (EQ) Effect (STANDARD, MOVIE, MUSIC, GAME, SPORT).
- 21**  **(MUTE)**
Mute or resume the sound.
- 22** **Display Window**
Show the current status.
- 23**  Select the Bluetooth mode. Press and hold to activate the pairing function in Bluetooth mode or disconnect the existing paired Bluetooth device.
- 24**  Sound effects settings menu.
- 25** **< / >**
- Skip to previous/next track in Bluetooth mode.
 - Navigate left/right in menu structure.
- 26**  Play/pause/resume playback in Bluetooth mode.
- 27**  Level settings menu.



EN

RU

| Button | Bluetooth remote control | IR remote control |
|---|--------------------------|-------------------|
|  | √ | √ |
|  | √ | √ |
|  | √ | -- |
|  | √ | √ |
| +/- / < / > | √ | √ |
|  | √ | √ |
| EQ | √ | √ |
|  | √ | -- |
|  | √ | -- |
|  | √ | √ |

- Press and hold the **- (VOL)** and  buttons of the remote control at the same time to switch between Bluetooth remote control or IR remote control.

 
3.5 Prepare the Remote Control

Introduction the remote control


This remote control is a fully functional and easy to operate Bluetooth remote control, convenient for users to wireless control sound system ON/OFF, function switching, volume adjustment and other functions.

Replace the Remote Control Battery

1. Press and slide the back cover to open the battery compartment of the remote control.
2. Insert two **AAA** size batteries (included). Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.
3. Close the battery compartment cover.

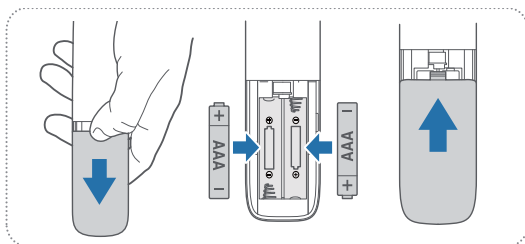

Pair up with the Main Unit

1. Make sure the wireless subwoofer/satellite speaker and main unit are powered on and the remote control is equipped with batteries.
2. The Bluetooth remote control will be automatically connected when powered on. When the Bluetooth pairing of the remote control is not successful within 2S, the remote control will be converted to IR remote control.
3. Press and hold the **-(VOL)** and  buttons of the remote control at the same time to switch between Bluetooth remote control or IR remote control.

Tip:

- When the battery is low, the remote control slowly flashes the empty battery icon three times and then turns off the screen.

Precautions Concerning Batteries

 
- Be sure to insert the batteries with correct positive “ \oplus ” and negative “ \ominus ” polarities.
- Use batteries of the same type. Never use different types of batteries together.
- Either rechargeable or non-rechargeable batteries can be used. Refer to the precautions on their labels.
- Be aware of your fingernails when removing the battery cover and the battery.
- Do not drop the remote control.

- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- Do not use any batteries other than those specified.
- Do not mix new batteries with old ones.
- Never recharge a battery unless it is confirmed to be a rechargeable type.

4. Placement and Mounting


4.1 Placement

- A Placed on a table.
- B Hang on the wall.
- C Mounting on the Floor Stand (Floor Stand Sold Separately).

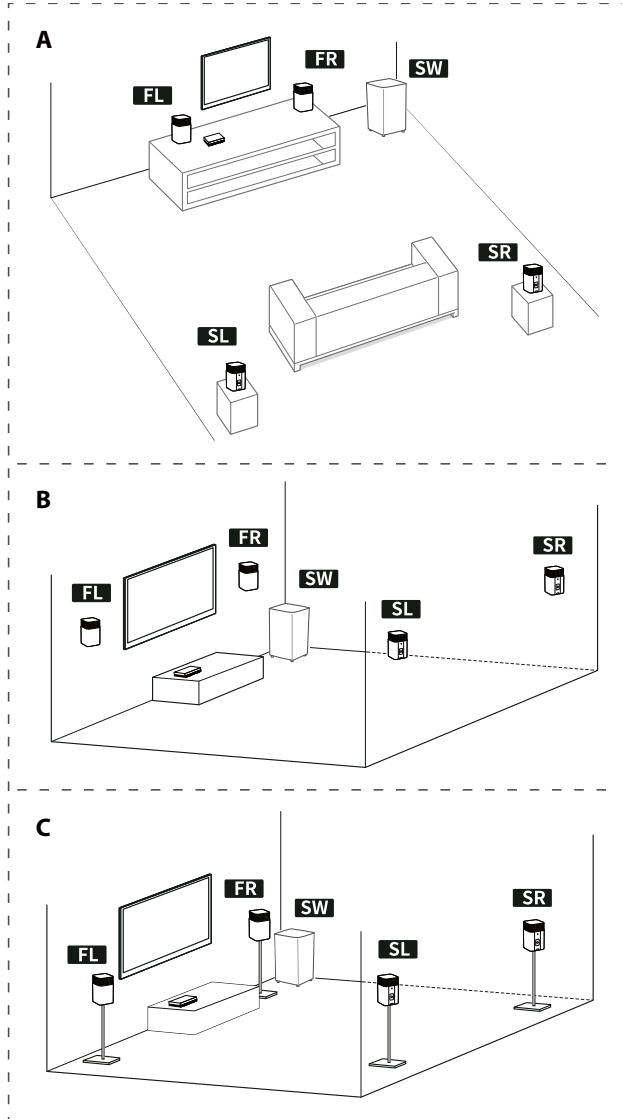

- If required, satellite speaker can be mounted on the floor stand (sold separately).

 Note:

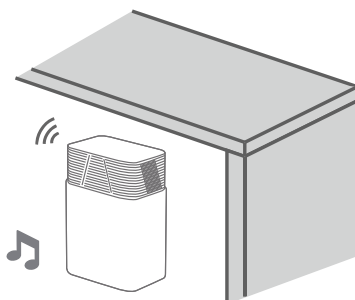

- Do not install the speakers in a cabinet or directly under the ceiling. Doing so may obstruct the sound output from the speaker.

- Do not place metal objects near the speaker system. Wireless functions may become unstable.

 
4.2 Wall Mounting (if using option-B)

- Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the satellite speaker and wall brackets.
- Additional tools (not included) are required for the installation.
- Do not overtighten screws.
- Keep this instruction manual for future reference.
- Use an electronic stud finder to check the wall type before drilling and mounting.

WARNING

- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Suggested wall mounting height: ≤ 1.5 meters.

1. The satellite speaker can be fixed to the wall using the included wall mount package.
2. **Note:** Before installing the wall bracket, you need to connect the power cables of the satellite speaker.

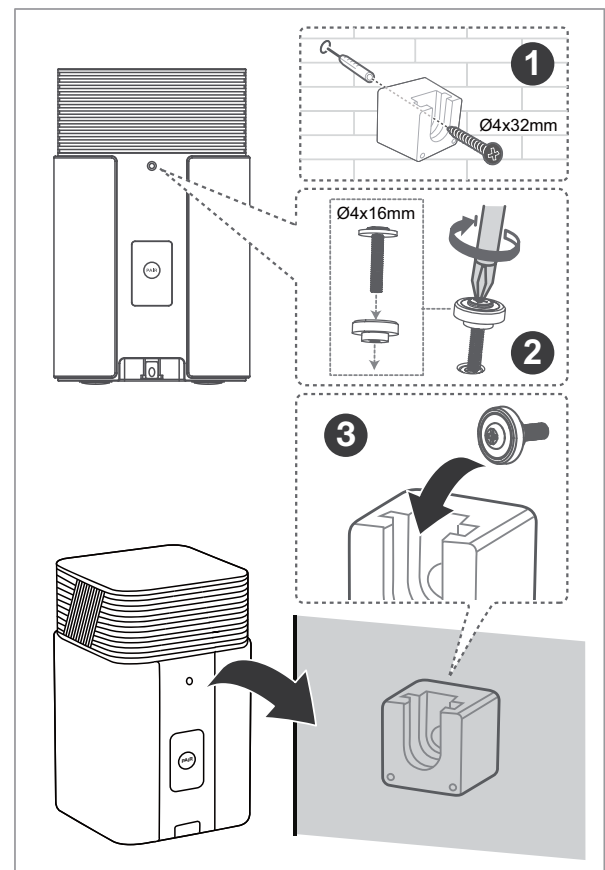

EN

RU

5. Connections

5.1 Dolby Atmos®

Dolby Atmos gives you Immersive listening experience by delivering sound in three dimensional space, and all the richness, clarity, and power of Dolby sound. For more information, please visit dolby.com/technologies/dolby-atmos

5.2 DTS: X

DTS: X The border sound is no longer constrained by fixed-position speaker placement or specific channel signals. It can be flexibly debugged according to the playback environment to achieve the best sound performance in this environment.

5.3 Use the HDMI Socket


Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.

Using HDMI to connect the main unit, AV equipment and TV:

Method 1: ARC (Audio Return Channel)

The ARC (Audio Return Channel) function allows you to send audio from your ARC- compliant TV to your main unit through a single HDMI connection. To enjoy the ARC function, please ensure your TV is both HDMI-CEC and ARC compliant and set up accordingly. When correctly set up, you can use your TV remote control to adjust the volume output (VOL +/- and MUTE) of the sound system.

 - Connect the HDMI cable from main unit **HDMI OUT (eARC/ARC)** socket to the HDMI eARC/ARC socket on your ARC compliant TV. Then press the remote control to select **HDMI eARC/ARC**.

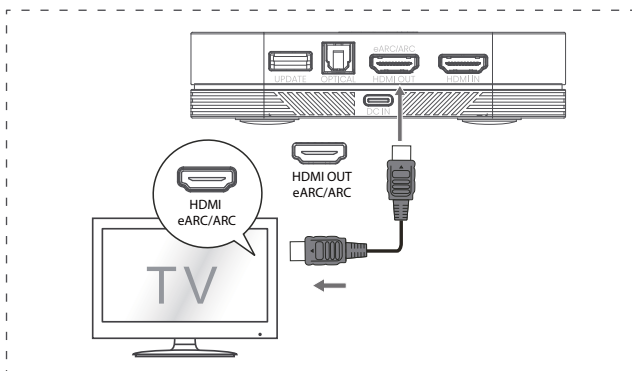


Tips:

- Your TV must support the HDMI-CEC and ARC function. HDMI-CEC and ARC must be set to On.

- The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about ARC function, please refer to the owner's manual.


Method 2: Standard HDMI

 - If your TV is not HDMI ARC-compliant, connect your main unit to the TV through a standard HDMI connection.
- 1. Use an HDMI cable to connect the main unit **HDMI OUT (eARC/ARC)** socket to the TV's HDMI eARC/ARC socket.
- 2. Use an HDMI cable to connect the main unit **HDMI IN** socket to your external devices (e.g. games consoles, DVD players and blu ray).

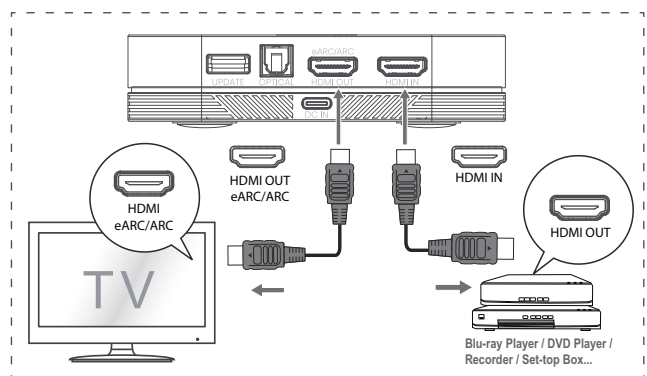


5.4 Use the Hisense EzPlay Function

 For Hisense EzPlay, when the main unit connects with a Hisense TV via HDMI eARC/ARC, there will be a main unit Setting menu on the TV, and you can control this menu via your TV remote to control most of the main unit features.

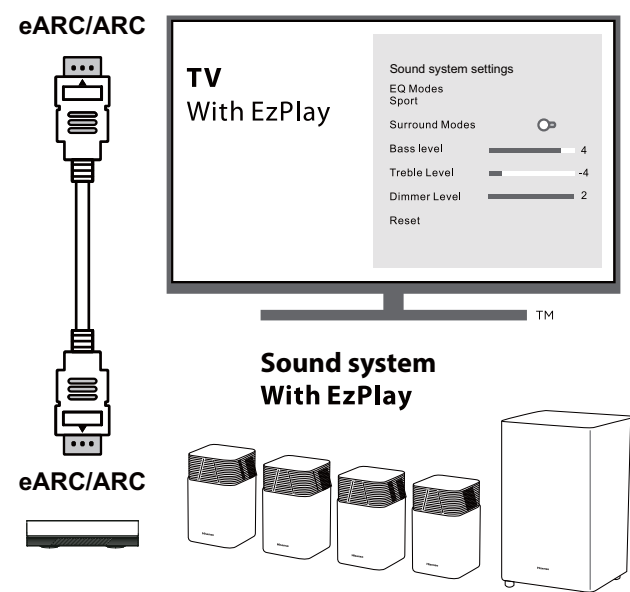

TV menu example (different models may have different menus) :

 Setting--sound--Sound system Setting.

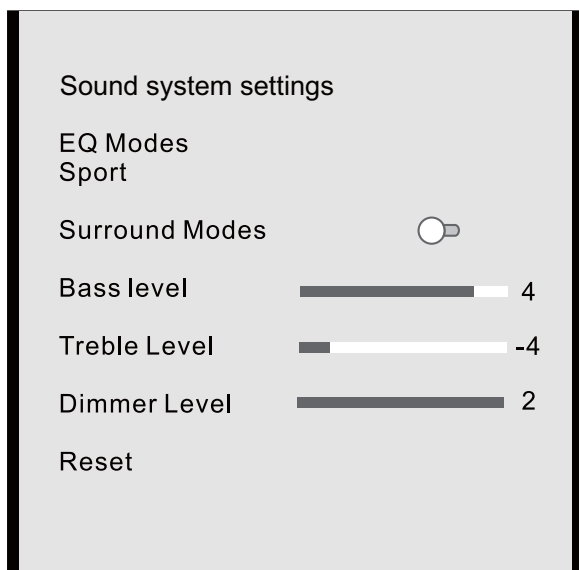


Note:

- This function is available only when both main unit and TV support Hisense Ezplay.
- This function requires main unit and TV connected via HDMI eARC/ARC, and the CEC of the TV must be turned ON.
- If everytime setting right, for the first time connect, there would be a tip on the TV screen to guide you find the main unit setting menu.

5.5 Hi-Concerto function

When connected to a Hisense TV that supports Hi-Concerto function, the speaker plays audio in sync with the TV, enhancing your sound experience by providing a richer and more immersive auditory soundscape.

 To use this function, when the main unit is connected to the TV for the first time, simply select the "TV Speaker with Speaker (Hi-Concerto)" option from the Audio Output menu of the TV.

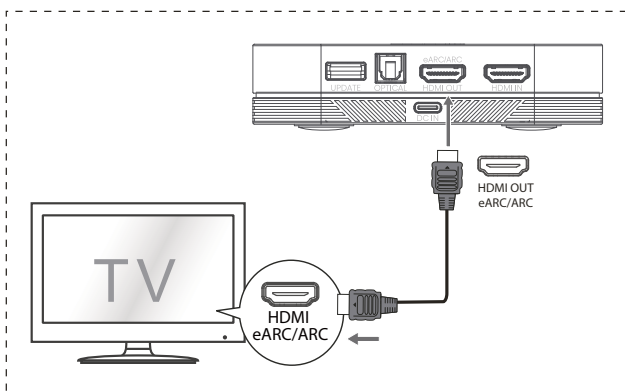

Note:

 
- This function is only supported in eARC mode, so please make sure TV's eARC function is enabled.
- The message displayed may differ with TV model.
- Ensure that TV and main unit is connected with HDMI cable.
- This function is available in some Hisense TV and some speaker models.

EN

RU

5.6 Use the OPTICAL Socket


- You can connect an OPTICAL cable to the TV's OPTICAL OUT socket and the **OPTICAL** socket on the main unit.

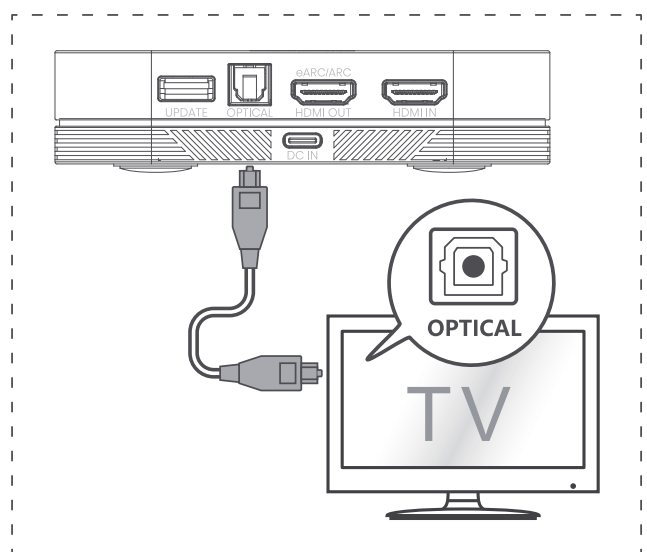

5.7 Connect Power


Risk of product damage!

 - Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the satellite speaker.
- **Satellite Speaker**
Connect the mains cable to the AC~ socket of the satellite speaker and then into a mains socket.
- **Subwoofer**
Connect the mains cable to the AC~ socket of the subwoofer and then into a mains socket.

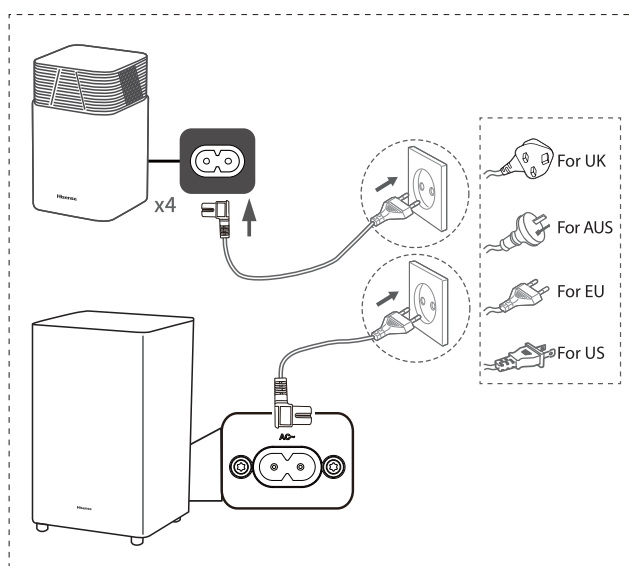

5.8 Adapter connect power

 - Connect the adapter to the power supply port of main unit and then into a mains socket.

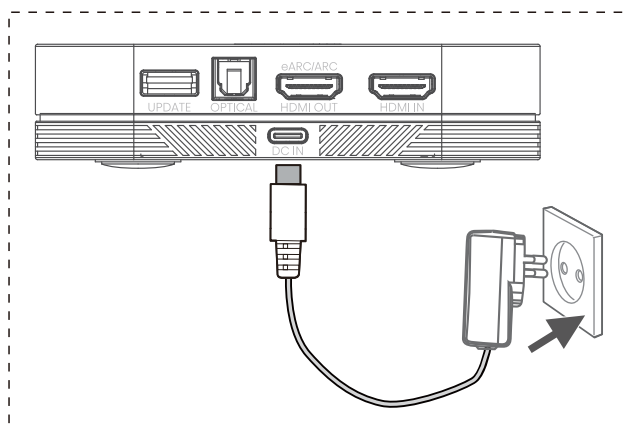

5.9 Pair up with the Subwoofer/Satellite Speaker and Main unit

Automatic pairing

The subwoofer / satellite speaker and main unit will automatically pair when both main units are plugged into the mains sockets and turned on.

- Determine the status based on the wireless subwoofer or satellite speaker indicator.

| LED State | Status |
|-------------|------------------------------|
| Solid white | Pairing unsuccessful |
| Flash green | Pairing partially successful |
| Solid green | All pairings successful |

Note:

- If the automatic pairing fails, pair manually.

Manual pairing

1. Ensure that all the cables are well connected and the sound system is in ON mode.
2. Press and hold the PAIR button on the rear of the subwoofer / satellite speaker for a few seconds. The subwoofer / satellite speaker will enter the pairing mode and the Pair Indicator will blink slowly for 30 seconds.
3. Press and hold the \cup button on the main unit or press the \cup button on the remote control to switch the main unit on.
4. Press the \otimes button to select the menu.
5. Press the **+/- and < / >** buttons to select the Speaker Link ON, then press the \blacktriangleright button to enter the pairing mode.
6. After the wireless connection is successful, the Pair Indicator will light up.
7. If the Pair indicator blinks, the wireless connection has failed. Unplug the cable of the subwoofer / satellite speaker and then reconnect the main cable after 4 minutes. Repeat step 1 ~ 6.



Note:

- Make sure that the main unit is at least 1m away from wireless devices such as routers.
- If the pairing connection fails again, check for electrical interference (e.g., from an electronic device) in the surrounding area, clear the interference, and repeat the above steps.

6. Basic Operation

6.1 Standby/ON

When you connect the sound system to the mains socket, the sound system will switch on automatically.




- Press and hold the  button on the main unit or press the  button on the remote control to switch the sound system back to STANDBY mode.
- Disconnect the mains plug from the mains socket if you want to switch the sound system OFF completely.

6.2 Automatic Power Off Function



The sound system automatically turns to **Standby** mode after about 15 minutes if the TV or the external sound system is disconnected, switched off or the volume is too close to mute.

- To switch the sound system off completely, remove the mains plug from the mains socket.
- Please turn the sound system off completely to save energy when not in use.

6.3 Select Modes

Press the  (SOURCE) button repeatedly on the remote control or press the  button repeatedly on the main unit to select the **HDMI eARC/ARC**, **HDMI IN**, **OPTICAL** and  (**Bluetooth**) mode. The selected mode will show on the display and the indicator light on the front of the main unit will show which mode is currently in use.

6.4 Adjust the Volume




- Press the **+ / -(VOL)** button on the remote control to adjust the volume.
- If you wish to turn the sound off, press the  (MUTE) button on the remote control. Press the  (MUTE) button again or press the **+ / -(VOL)** buttons to resume normal listening.




6.5 Select Equalizer (EQ) Effect

- While playing, press the **EQ** button on the remote control to select desired preset equalizers:
STANDARD, MOVIE, MUSIC, GAME, SPORT

6.6 Setup menu


The main unit allows you to configure advanced settings to provide you with an even better experience.

1. Press the  /  /  button to select the menu to be adjusted: **Menu, Level, Effect**.
2. Change the initial values for each of the settings with the **+ / -** and **< / >** buttons, and save the current settings in real time.

| | |
|---|---|
| Menu  | Auto Standby, Auto Wake, Latency, Speaker Link, Channel Inspection, Neural:X, Reset Menu, Other |
| Level  | Dimmer, Bass, Treble, Dialogue, Height, Subwoofer, SLR, Reset Level |
| Effect  | Surround, Night, Voice, AI, Virtual:X |

- If no button is pressed within 10 seconds, the system will automatically exit the menu.

7. OPTICAL / HDMI Operation

1. Ensure that the main unit is connected to the TV or audio device.
2. Press the  button repeatedly on the main unit or on the remote control to select the **HDMI eARC/ARC**, **HDMI IN**, **OPTICAL** mode.
3. Operate your audio device directly for playback features.
4. Press the **+ / -(VOL)** buttons to adjust the volume to your desired level.

Tip:




- The main unit may not be able to decode all digital audio formats from the input source. In this case, the main unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** or **Dolby Digital** (Refer to the user manual of the input source device for its audio setting details) with eARC/ARC, HDMI IN, OPTICAL input.

8. Bluetooth Operation


8.1 Pair Bluetooth-enabled Devices

Through Bluetooth, connect the main unit with your Bluetooth device (such as an iPad, iPhone, iPod touch, Android phone, or laptop), and then you can listen to the music on your Bluetooth device through your speakers.

Note:

- The operational range between this player and a Bluetooth device is approximately 26 feet (8m) (without any object between the Bluetooth device and the main unit).
 - Before you connect a Bluetooth device to this main unit, ensure you know the device's capabilities.
 - Compatibility with all Bluetooth devices is not guaranteed.
 - Any obstacle between this main unit and a Bluetooth device can reduce the operational range.
 - If the signal strength is weak, your Bluetooth receiver may disconnect, but it will re-enter pairing mode automatically.
1. During ON mode, Press the  (BT) button on the remote control or press the  button repeatedly on the main unit to select the Bluetooth mode. The Blue indicator will flash slowly.
 2. Activate your Bluetooth device and select the search mode. "**Hisense HT Saturn**" will appear on your Bluetooth device list.
 - If you cannot find the main unit, press and hold the  (BT) button on the remote control to be searchable. the Blue indicator will slow rapidly.
 3. Select "**Hisense HT Saturn**" in the searching list. After successful pairing, the Blue indicator will light up solidly.
 4. Play music from the connected Bluetooth device.




To disconnect the Bluetooth function, you can :

- Switch to another function on the main unit.
- Disable the function from your Bluetooth device.
- Press and hold the  (BT) button on the remote control.

Tips:




- If no other Bluetooth device pairs with this speaker within two minutes, the speaker will recover its previous connection.
- During the Bluetooth pairing process, the distance between the Bluetooth device and the main unit is recommended to be within 1m to increase the pairing success rate.
- The speaker will also be disconnected when your device is moved beyond the operational range.
- If you want to reconnect your device to this speaker, place it within the operational range.
- If the device is moved beyond the operational range, when it is brought back, please check if the device is still connected to the speaker.
- If the connection is lost, follow the instructions above to pair your device to the speaker again.

8.2 Listen to Music from Bluetooth Device

- If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the speaker.
1. Pair your device with the speaker.
 2. Play music via your device (if it supports A2DP).
 3. Use supplied remote control to control play (if it supports AVRCP).
- To pause/resume play, press the  button on the remote control.
 - To skip to a track, press the  /  buttons on the remote control.

9. Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this speaker, check the following points before requesting service.

| Problem | Solution |
|---|--|
| No power | <ul style="list-style-type: none"> • Ensure that the AC cord of the apparatus is properly connected . • Ensure that there is power at the AC outlet. • Press  (standby) button to turn the main unit on. |
| Remote control does not work | <ul style="list-style-type: none"> • Before you press any playback control button, first select the correct source. • Reduce the distance between the remote control and the main unit. • Insert the battery with its polarities (+/-) aligned as indicated. • Replace the battery. • Aim the remote control directly at the sensor on the front of the main unit. |
| No sound | <ul style="list-style-type: none"> • Make sure that the speaker is not muted. Press MUTE or + / -(VOL) button to resume normal listening. • Press  button on the remote control to switch the main unit to standby mode. Then press the  button again to switch the main unit on. • Unplug both the satellite speaker, main unit and the subwoofer from the mains socket, then plug them again. Switch on the main unit. • Ensure the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby Digital mode while using digital (e.g. HDMI, OPTICAL) connection. • The subwoofer is out of range, please move the subwoofer closer to the main unit and satellite speaker. Make sure the subwoofer is within 5 m of the main unit and satellite speaker (the closer the better). • The main unit and satellite speaker may have lost connection with the subwoofer. Re-pair the main unit and satellite speaker by following the steps on the section "Pair up with the Subwoofer/Satellite Speaker and Main unit". • The main unit may not be able to decode all digital audio formats from the input source. |
| TV has display problem while viewing HDR content from HDMI source. | <ul style="list-style-type: none"> • Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV. |
| I can't find the Bluetooth name of this main unit on my Bluetooth device for Bluetooth pairing | <ul style="list-style-type: none"> • Ensure the Bluetooth function is activated on your Bluetooth device. • Ensure you have paired the main unit with your Bluetooth device. • The main unit has a Bluetooth® function that can receive a signal within 8 metres. Keep a distance within 8 metres between the main unit and your Bluetooth® device. |
| This is a 15 mins power off function, one of the ERPII standard requirement for saving power | <ul style="list-style-type: none"> • When the main unit's external input signal level is too low, the main unit will be turned off automatically in 15 minutes. Please increase the volume level of your external device. |

EN

RU

10.Specifications

Satellite Speaker

| | |
|-----------------------|--|
| Power | 100-240V~ 50/60Hz |
| Power Consumption | 20 W < 0.5 W (StandBy) |
| Impedance | 8Ω |
| Frequency response | 120 Hz - 20 KHz |
| Dimension (WxHxD) | 4.8" x 7.74" x 4.8" (122 x 196.5 x 122 mm) |
| Net weight | 3.35 lbs x 4 (1.52 kg x 4) |
| Operating temperature | 0°C - 45°C |

Wireless Subwoofer

| | |
|--------------------|---|
| Power | 100-240V~ 50/60Hz |
| Power Consumption | 40 W < 0.5 W (StandBy) |
| Impedance | 3Ω |
| Frequency response | 40 Hz - 120 Hz |
| Dimension (WxHxD) | 9.45" x 15.35" x 9.45" (240 x 390 x 240 mm) |
| Net weight | 11.79 lbs (5.35 kg) |

Main unit

| | |
|-------------------------------------|--|
| Adapter Mode • Input • Output | FX18U-050200K 100-240V~ 50/60Hz, 0.5A (Max) < 0.5 W (StandBy) 5V \equiv 2A \diamond \oplus 10W |
| USB | 5V \equiv 500mA |
| Dimension (WxHxD) | 4.65" x 1.06" x 4.65" (118 x 27 x 118 mm) |
| Net weight | 0.77 lbs (0.35 kg) |
| Audio input sensitivity | 500mV |
| Frequency response | 120 Hz - 20 KHz |

Wireless Specification

| | |
|--|--|
| Bluetooth version / profiles Bluetooth frequency range Bluetooth Max. transmitting power | V 5.3 (A2DP, AVRCP) 2400 MHz ~ 2483.5 MHz $\leq 10\text{dBm}$ |
| 5G Wireless frequency range Transmitter power (EIRP) | 5150 MHz ~ 5250 MHz; $\leq 10\text{dBm}$ 5725 MHz ~ 5850 MHz; $\leq 12\text{dBm}$ |
| Modulation Type | GFSK, $\pi/4$ DQPSK; 8-DPSK |

Remote Control

| | |
|---|--|
| Model | EN412H2H |
| Frequency range Transmitter power (EIRP) | 2400 MHz ~ 2483.5 MHz $\leq 10\text{dBm}$ |
| Battery type | AAA (1.5V x 2) |

- Design and specifications are subject to change without notice.

Trademarks



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by The HISENSE International Industries, Incorporated is under license. Other trademarks and trade names are those of their respective owners.

EN

RU



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2024 Dolby Laboratories. All rights reserved.



For DTS patents, see <http://xperi.com/dts-patents/>. Manufactured under license from DTS, Inc. and its affiliates. DTS, DTS:X, the DTS:X logo, Virtual:X, and the DTS Virtual:X logo are registered trademarks or trademarks of DTS, Inc. and its affiliates in the United States and/or other countries. © DTS, Inc. and its affiliates. ALL RIGHTS RESERVED.





WARNING: This product can expose you to chemicals, including styrene, which is known to the State of California to cause cancer, and Bisphenol A, which is known to the State of California to cause birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

EN

FCC INFORMATION (for US customers)

NOTE:

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio / TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

IC Notice: CAN ICES (B) / NMB (B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Warning:

- This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

Operations in the 5.15-5.25GHz band are restricted to indoor use only.



FR

Réglement de la FCC (pour les clients américains)

REMARQUE :

- Ce dispositif a été testé et déclaré conforme aux limites d'un dispositif numérique de classe B, conformément à la partie 15 des règles de la FCC.
Ces limites ont pour but d'assurer une protection raisonnable contre le brouillage nuisible dans une installation résidentielle. Cet équipement produit, utilise et peut émettre de l'énergie en radio fréquence et, s'il n'est pas installé et utilisé conformément aux directives, il peut causer un brouillage nuisible dans les communications radio.
- Cependant, il n'est pas garanti que des interférences ne se produiront pas dans une installation particulière. Si cet appareil provoque des interférences nuisibles à la réception radio ou de télévision, ce qui peut être déterminé en mettant l'appareil hors tension, l'utilisateur est encouragé à essayer de corriger l'interférence par une ou plusieurs des mesures suivantes :
 - Réorienter ou déplacer l'antenne de réception.
 - Augmenter la distance entre l'appareil et le récepteur.
 - Brancher l'appareil à une prise sur un circuit différent de celui sur lequel le récepteur est branché.
 - Consulter le revendeur ou un technicien radio/TV expérimenté.

Cet appareil est conforme à la partie 15 des règles de la FCC. Son fonctionnement est soumis aux deux conditions suivantes :

- (1) ce dispositif ne peut pas causer d'interférences nuisibles et
 - (2) cet appareil doit accepter toute interférence reçue, y compris les interférences qui peuvent causer un mauvais fonctionnement.
- Des câbles blindés doivent être utilisés avec cet appareil pour assurer la conformité avec les limites de la classe B de la FCC. fonctionnement de l'appareil.

Avis d'Industrie Canada: CAN ICES (B) / NMB (B)

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Avertissement :

- Pour rester en conformité avec les consignes d'exposition aux RF, placez le produit à au moins 20 cm des personnes proches.
- Les changements ou modifications de cet appareil non expressément approuvés par la partie responsable de la conformité pourraient annuler l'autorisation de l'utilisateur à utiliser l'équipement.

Les opérations dans la bande 5,15-5,25 GHz sont limitées à une utilisation en intérieur uniquement.

Hisense

HT Saturn