NOTE: THIS RELEASED DRAWING WAS PRODUCED BY COMPUTER, DO NOT UPDATE MASTER MANUALLY. ECN No. PREPARED BY **APPROVED BY** DESCRIPTION ITEM New released

材质: 105g铜版纸

Fold Line



HOW TO USE YOUR WIRELESS CHARGING PAD

Contents

· Protective plastic film

· Wireless charger · 6-inch micro USB cable

1. Remove the thin plastic film over the top of the charging pad—your phone won't charge if the plastic isn't removed.

2. Connect the supplied micro USB cable to the charging pad, then connect the cable to an AC wall adapter (sold separately). Plug the wall adapter into

3. Place your phone on top of the charging pad (the side with the printed design). Try to align the center of the device with the center of the charging

4. Wait for a green ring to appear around the edge of the charger—this indicates that charging has begun. The ring will disappear within 3 seconds, but charging is still occurring.

HOW TO TAKE CARE OF YOUR WIRELESS CHARGING PAD

 $\boldsymbol{\cdot}$ Store your wireless charging pad in a dry place, away from moisture and corrosive materials (such as cleaning materials and other chemicals).

· Keep the charging pad out of direct sunlight and other areas where intense heat is present.

· Clean the wireless charging pad with a soft, water-dampened cloth when necessary. Do not use any kind of chemicals, soaps, or detergents. · Do not bend, disassemble, or attempt to

repurpose or modify this device in any way. • Do not insert anything other than the micro

USB cable into the charging port. \cdot Do not submerge the charging pad in liquid.

· Monitor use with small children.

CONTACT US

If you have any questions or concerns about your Moxyo wireless charging pad, please contact us. Email: support@moxyo.com

Phone: 1.844.452.6337 Website: www.moxyo.com

WARNING

product may result in product damage, excessive heat, release of toxic fumes, or fire, for which damages you ("Purchaser") and not Moxyo ("Manufacturer") are responsible. This product is intended only for use with appropriate mobile devices. Please consult your device packaging or manufacturer's website to determine if this product is compatible with your specific device. Manufacturer is not responsible for any damages to any device incurred through the use of this product. Further, Manufacturer is not in any way liable to you or to any third party for damages you or any third party may suffer as a result of use, intended or unintended, or misuse of this product in conjunction with any device or accessory other than the appropriate

devices for which this product is designed. Manufacturer is not responsible for any damages you or any third party may suffer as a result of misuse of this product as outlined above. Purchaser agrees to indemnify Manufacturer for any damages arising from unintended use or misuse, including with an unintended device. If this device is accessible to a minor, the purchasing adult agrees to sole responsibility for providing supervision, instructions, and warnings of this product. Purchaser agrees to indemnify Manufacturer for any damages arising from unintended use or misuse of this product by a minor. Note: This device complex with Part 15 of the FCC Rules. Operation is subject to the following conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable generates, uses, and can radiate radio frequency and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try correcting the interference by one or more of the following

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the · Consult the dealer or an experienced radio/TV technician for help. the FCC Rules, this device must be used with certified peripherals and shielded cables. All peripherals must be grounded and shielded. Operation with non-certifie

备注:

- 1, 来料尺寸公差±1mm
- 2,来料品质要保证印刷优良,无刮花,无脏污,无破损

TECHEN®		DRAWN: Judy	DATE: 2018-09-27	TITLE			
TECYEA ELECTRONICS LTD		CHECK:	DATE:	WLC3L08_说明书			
UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE IN MM		APP:	DATE:	SIZE	SIZE THIS INFORMATION IS CONFIDENTIAL AND PROPRIETARY TO TECYEA AND SHALL NOT BE REPRODUCED OR FURTHER DISCLOSED TO ANYONE OTHER THAN TECYEA EMPLOYEES WITHOUT WRITTEN AUTHORIZATION FROM TECYEA ELECTRONICS LTD.		
TOLERANCES ANGULAR Unit: mm		PROJECT CODE		A4			
	THIRD ANGLE PROJECTION			DOC NO		SHEET	REV
SURFACE ROUGHNESS	BREAK ALL BURRS AND SHARP EDGES	WLC3L08		DWG-7040-0000076-0A		1 of 1	А
DO NOT SCALE DRAWING							