 



802.11ax-HE20 - Ant 0

Channel 181 (6855MHz)

The Reference Level

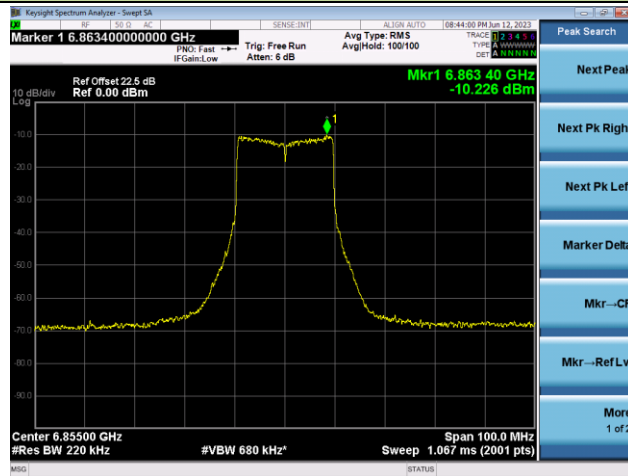


 The Mask Data

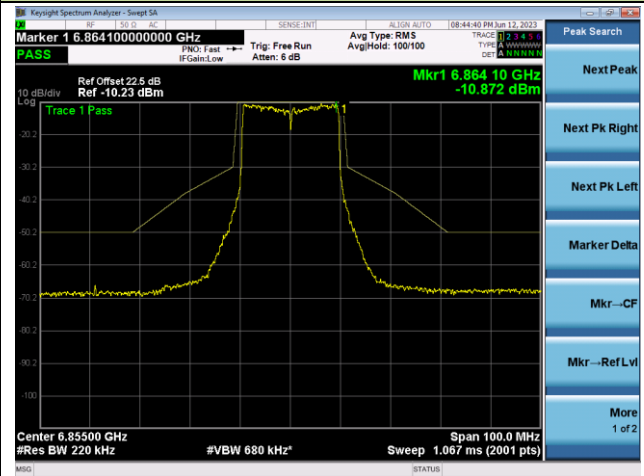


Channel 189 (6895MHz)

 The Reference Level

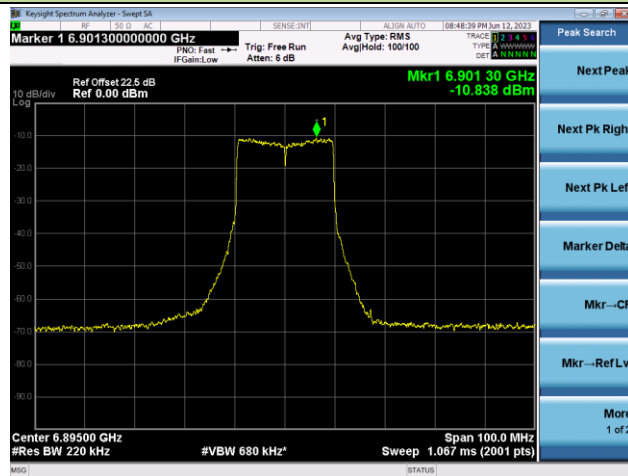


The Mask Data

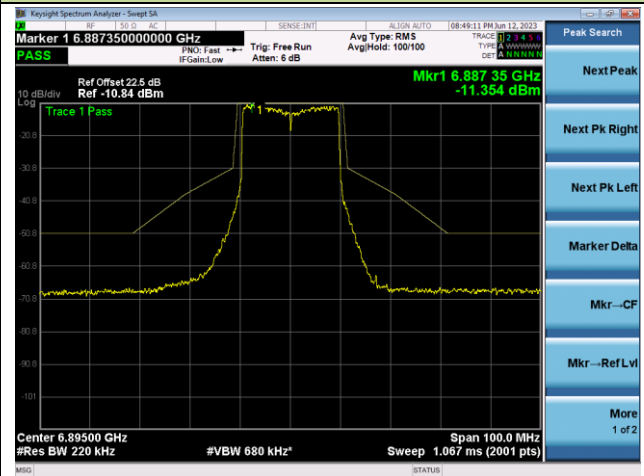 



Channel 209 (6995MHz)

 The Reference Level

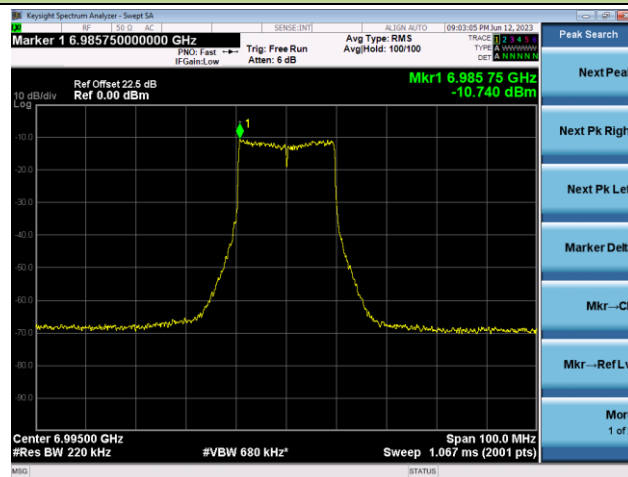

The Mask Data

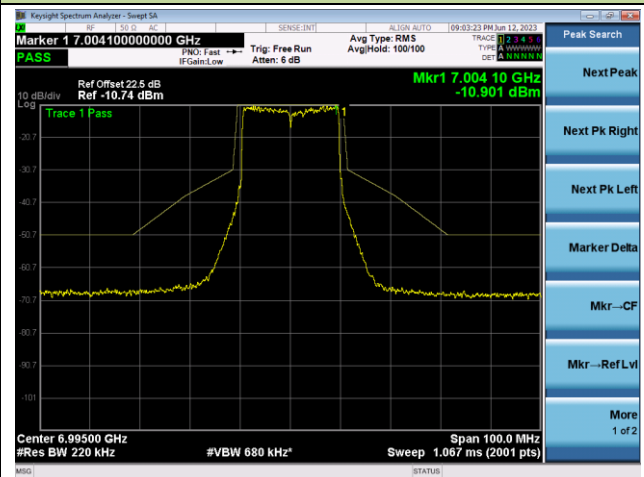 


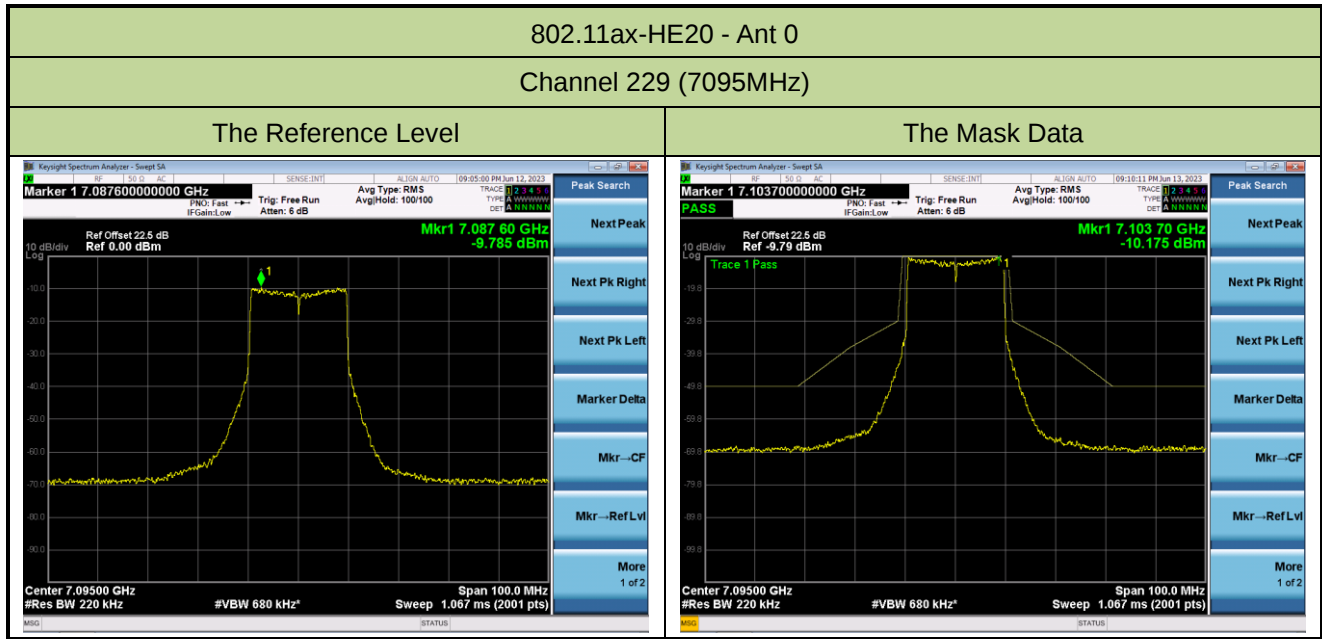 


802.11ax-HE40 - Ant 0

Channel 3 (5965MHz)

 The Reference Level

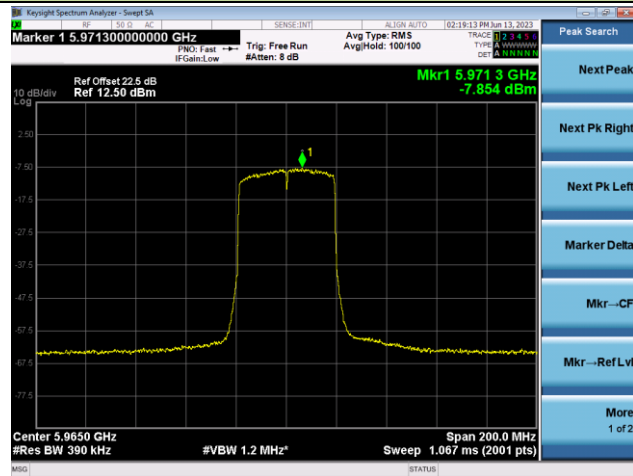


The Mask Data

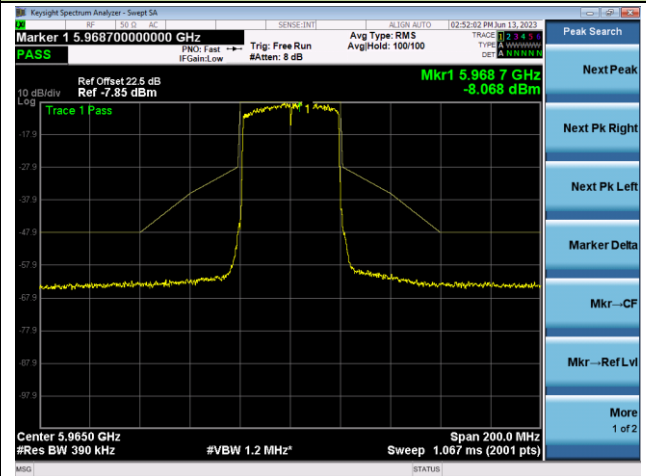 


Channel 51 (6205MHz)

 The Reference Level

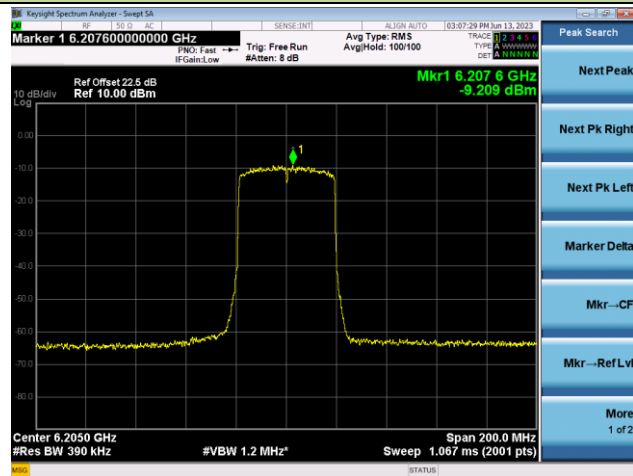


The Mask Data

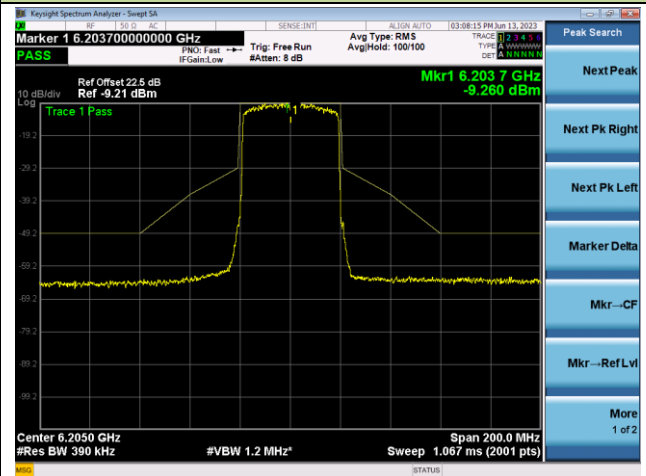 


Channel 91 (6405MHz)

 The Reference Level

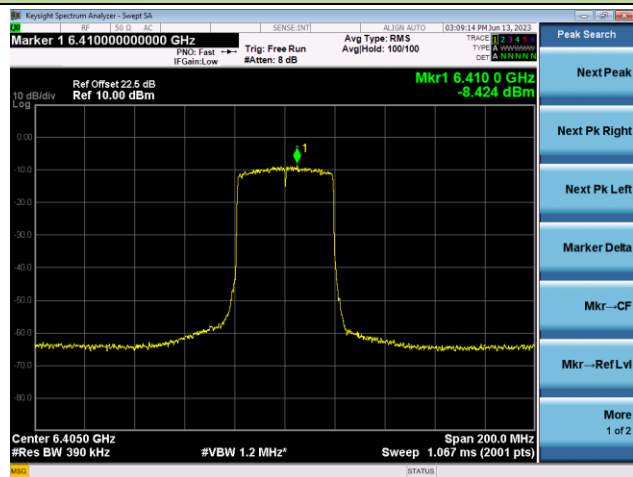


The Mask Data

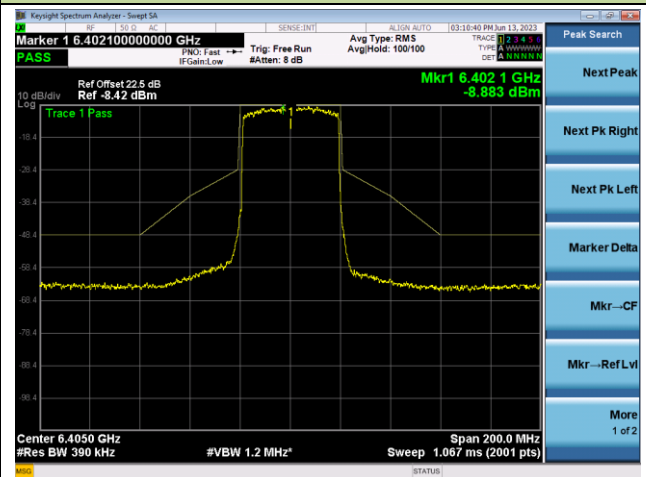 


802.11ax-HE40 - Ant 0

Channel 99 (6445MHz)

 The Reference Level

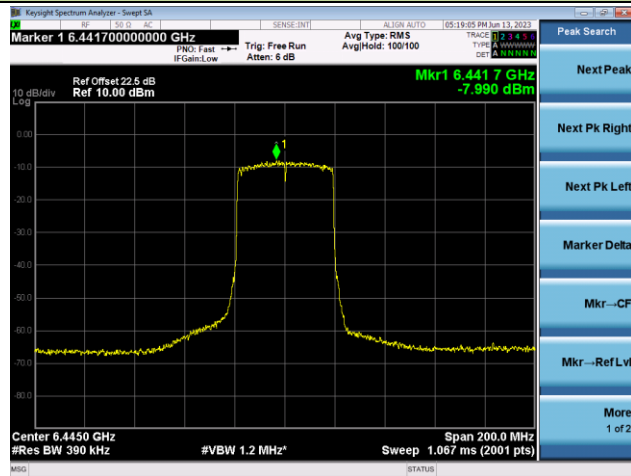


The Mask Data

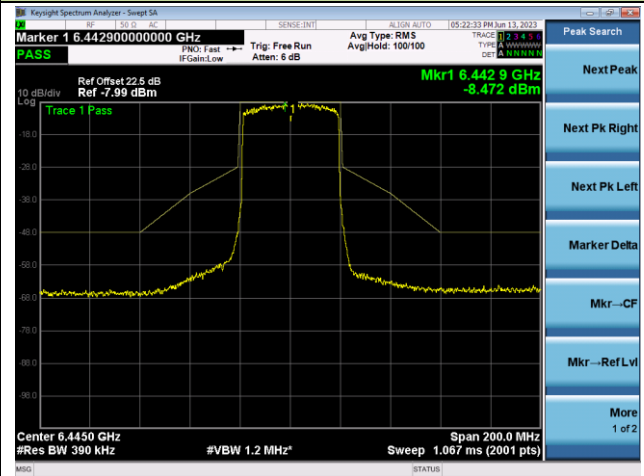 


Channel 107 (6485MHz)

 The Reference Level

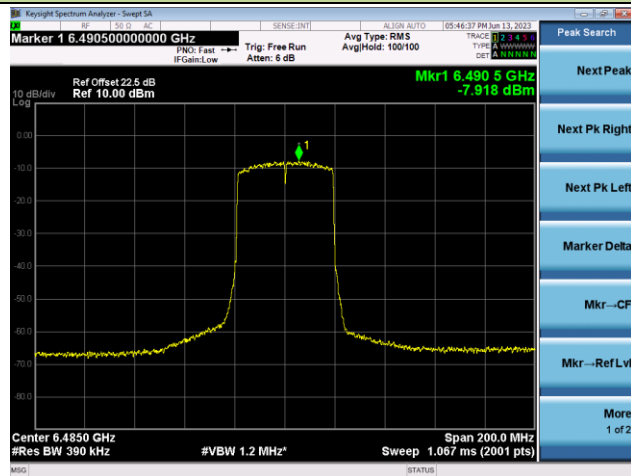


The Mask Data

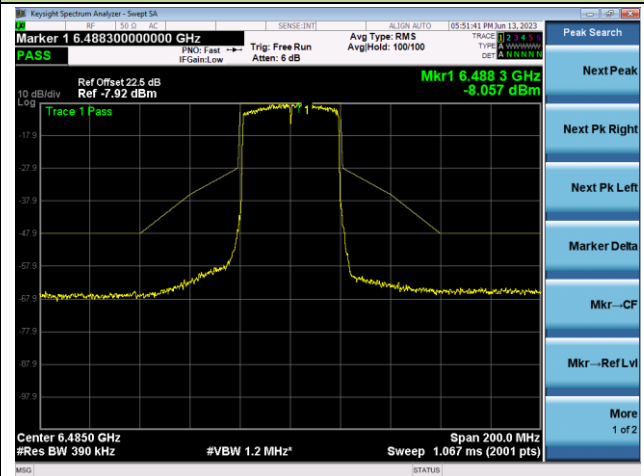 


Channel 115 (6525MHz)

 The Reference Level

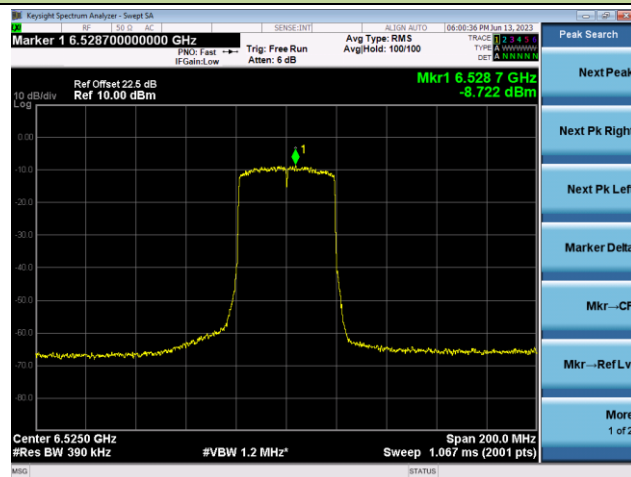


The Mask Data

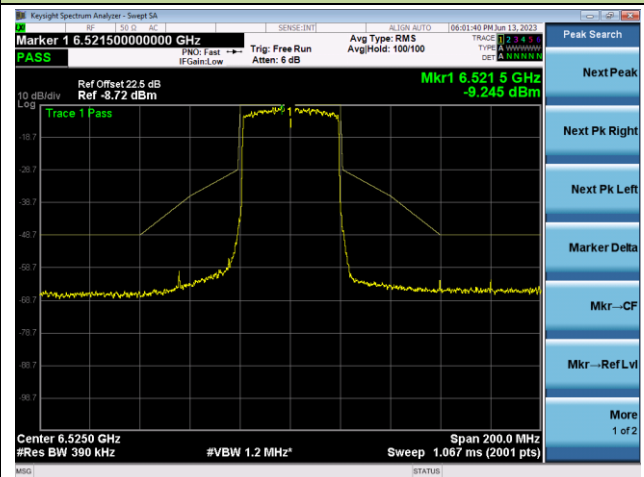 


802.11ax-HE40 - Ant 0

Channel 123 (6565MHz)

 The Reference Level

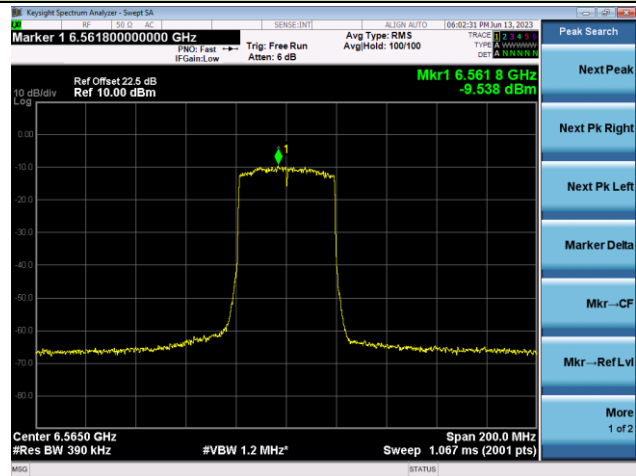


The Mask Data

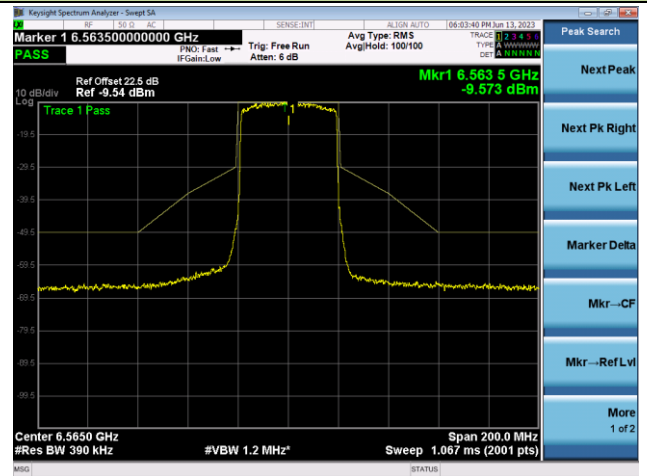 


Channel 147 (6685MHz)

 The Reference Level

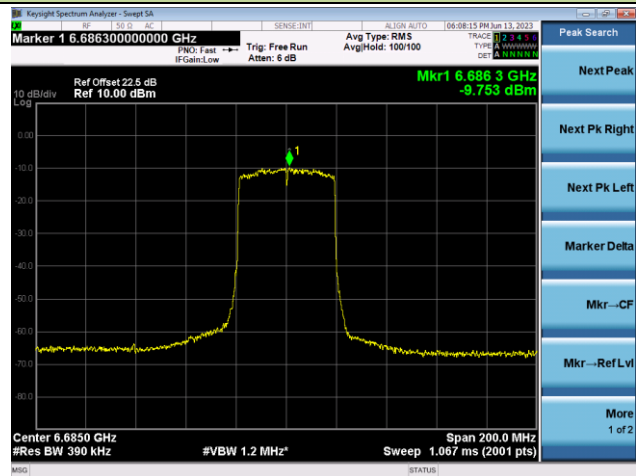


The Mask Data

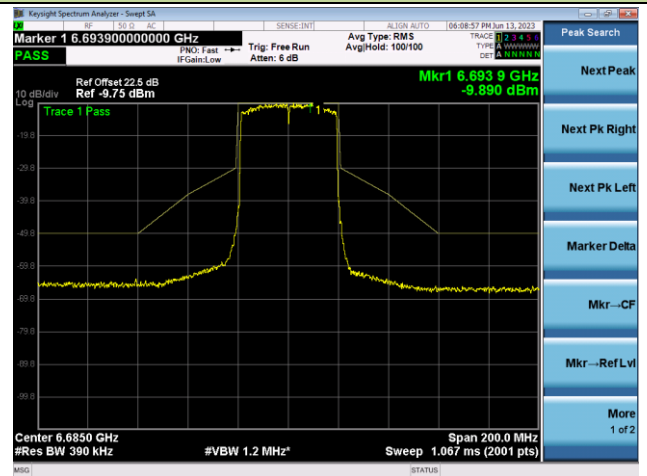 


Channel 187 (6885MHz)

 The Reference Level

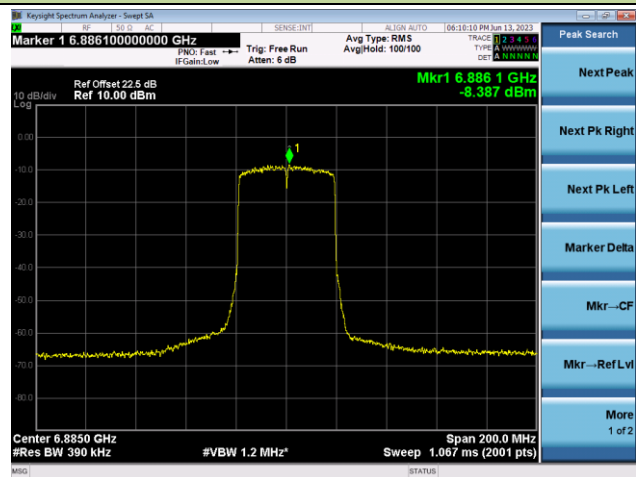


The Mask Data

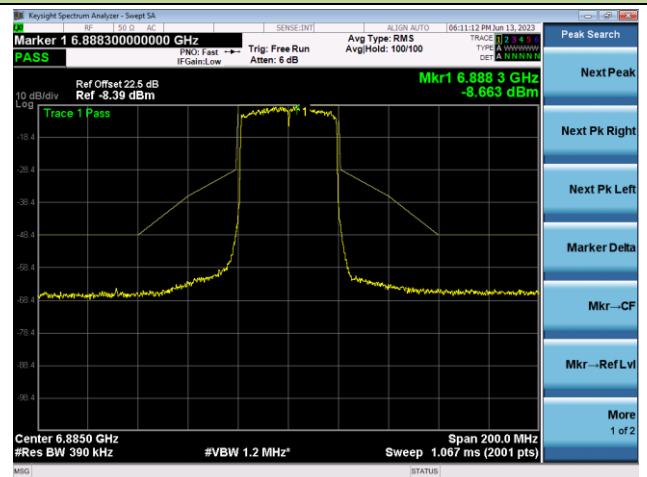 


802.11ax-HE40 - Ant 0

Channel 195 (6925MHz)

 The Reference Level

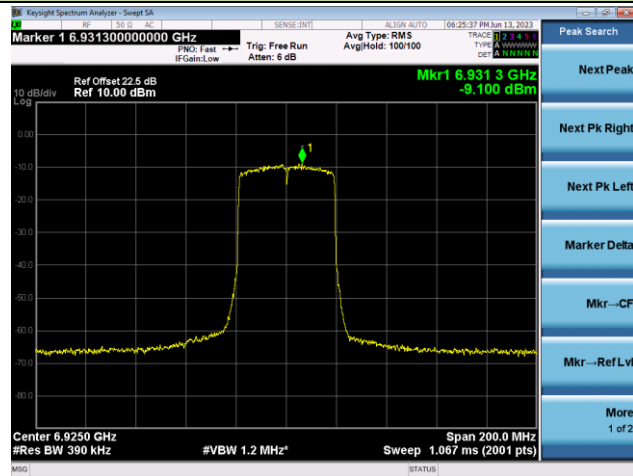


The Mask Data

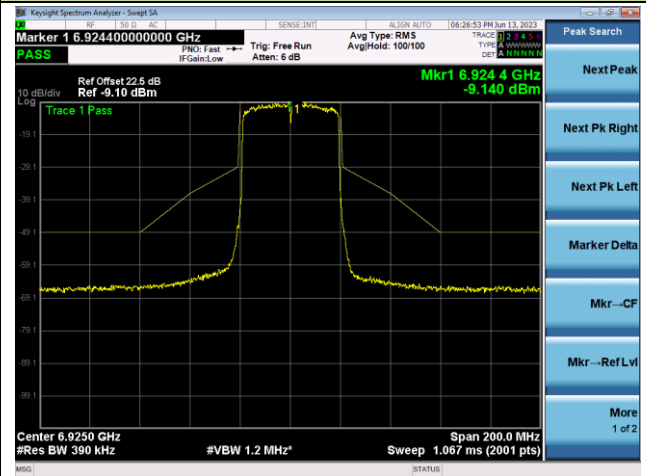 


Channel 211 (7005MHz)

 The Reference Level

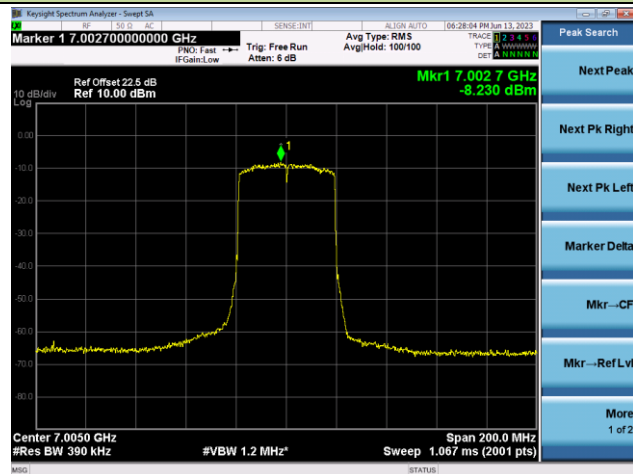


The Mask Data

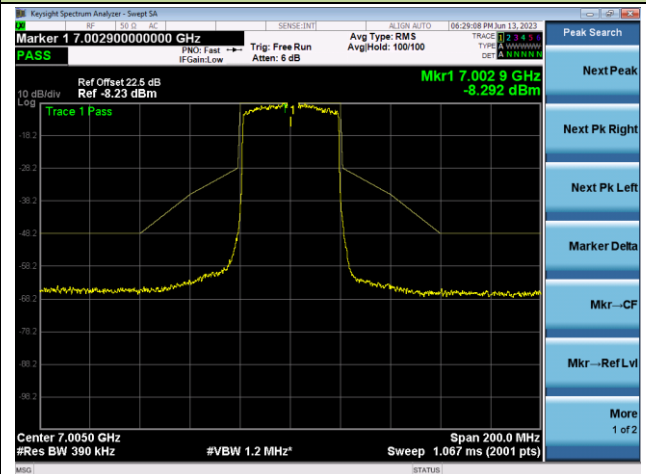 


Channel 227 (7085MHz)

 The Reference Level

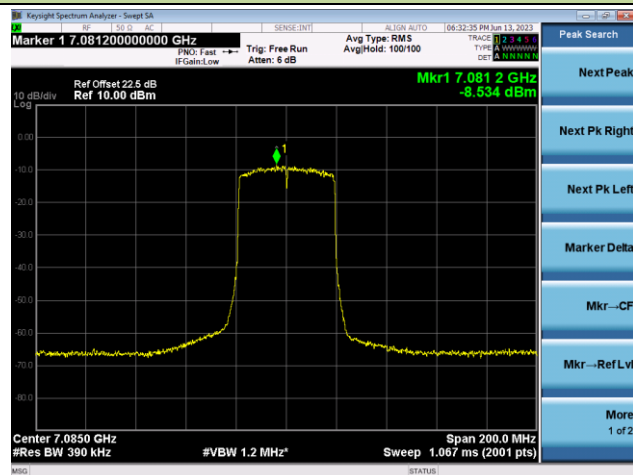


The Mask Data

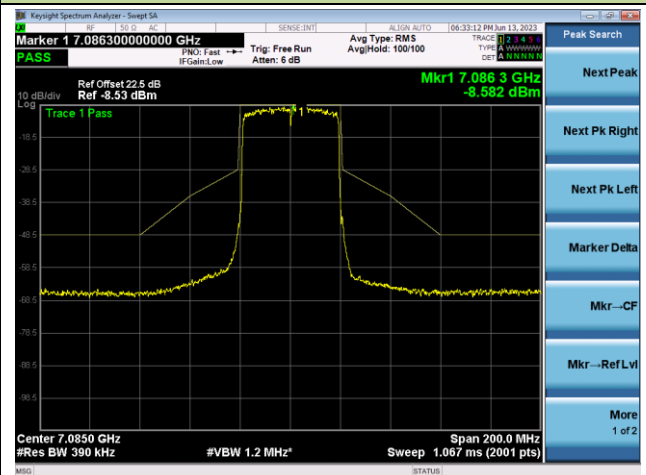 


802.11ax-HE80 - Ant 0

Channel 7 (5985MHz)

 The Reference Level

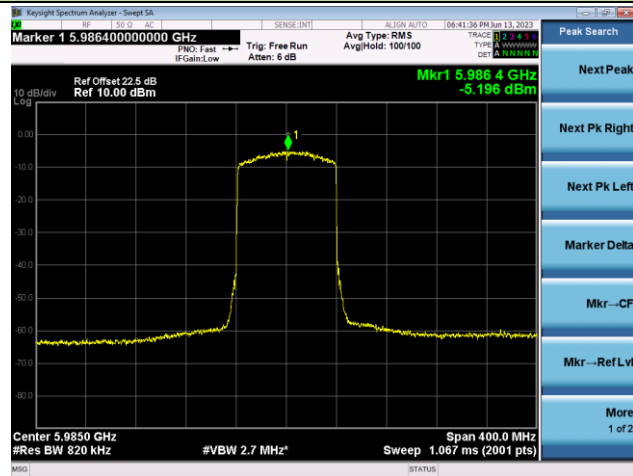


The Mask Data

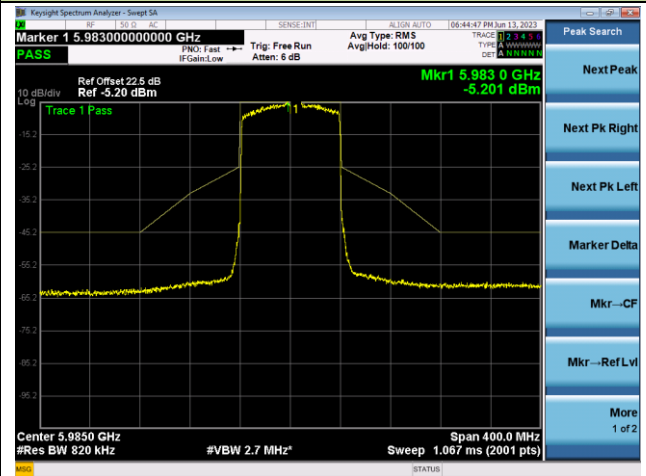 


Channel 55 (6225MHz)

 The Reference Level

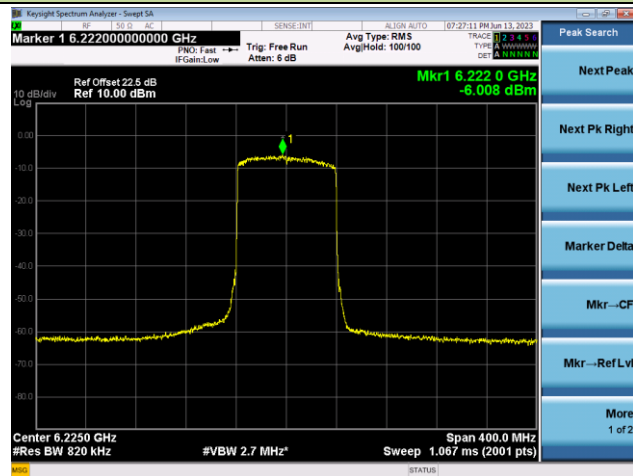


The Mask Data

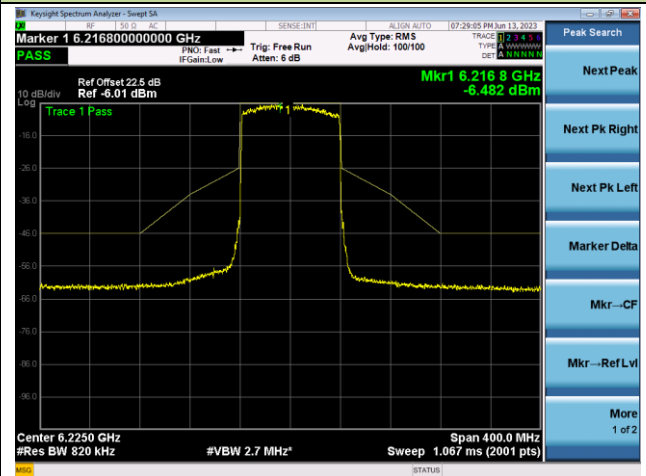 


Channel 87 (6385MHz)

 The Reference Level

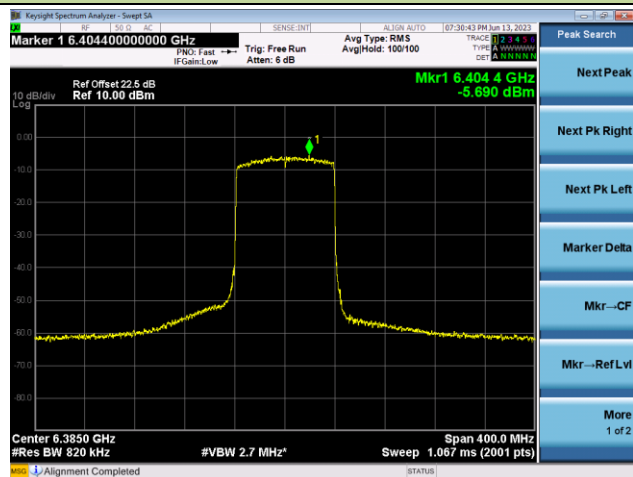


The Mask Data

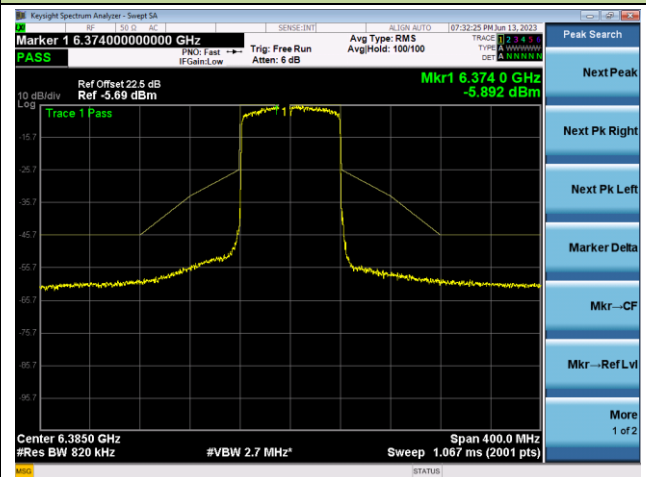 


802.11ax-HE80 - Ant 0

Channel 103 (6465MHz)

 The Reference Level

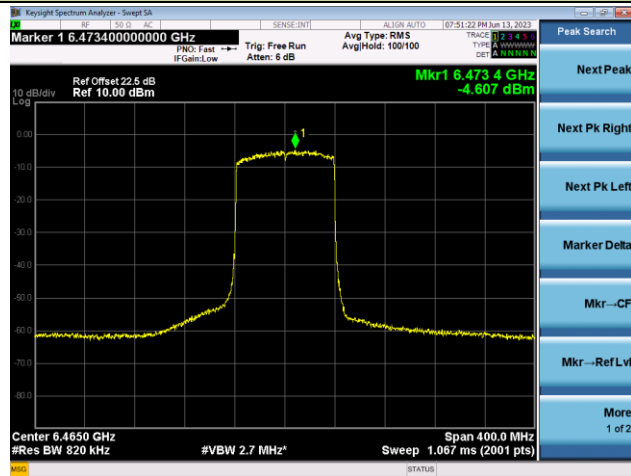


The Mask Data

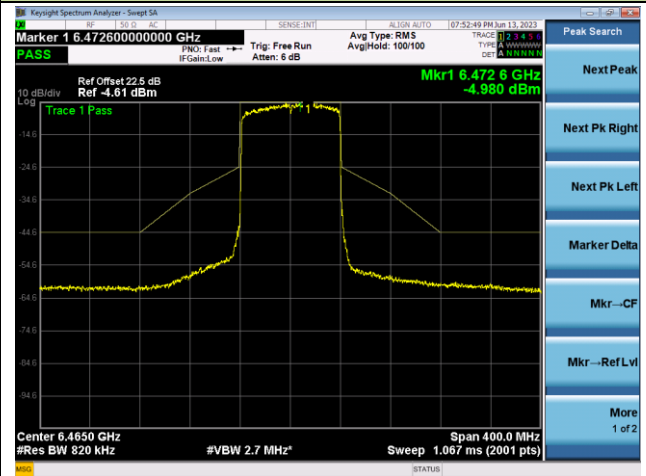 


Channel 119 (6545MHz)

 The Reference Level

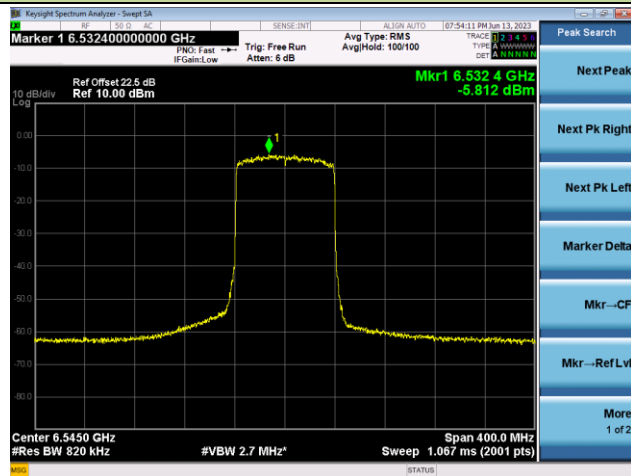


The Mask Data

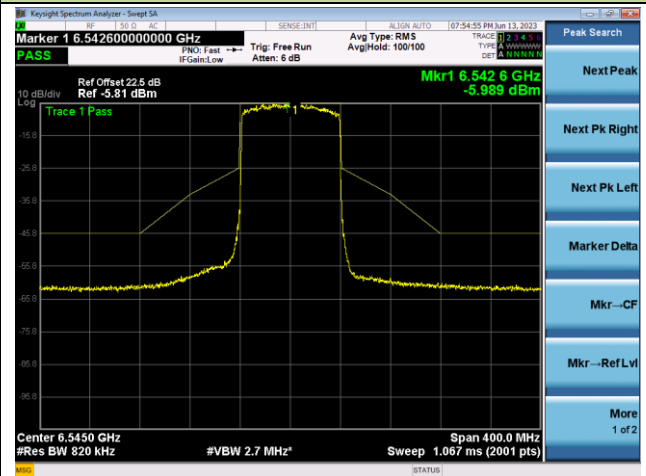 


Channel 135 (6625MHz)

 The Reference Level

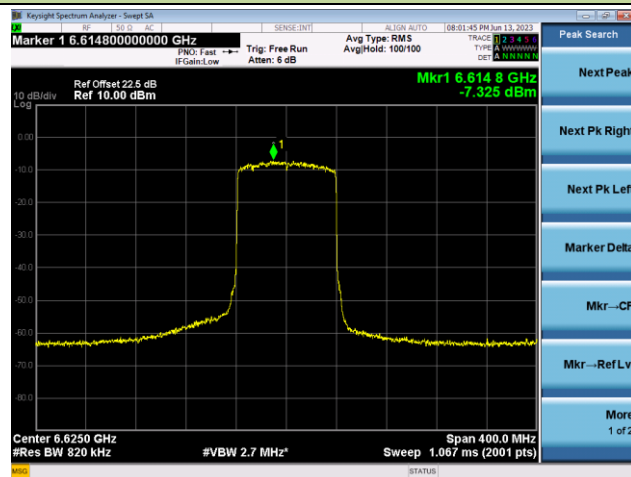


The Mask Data

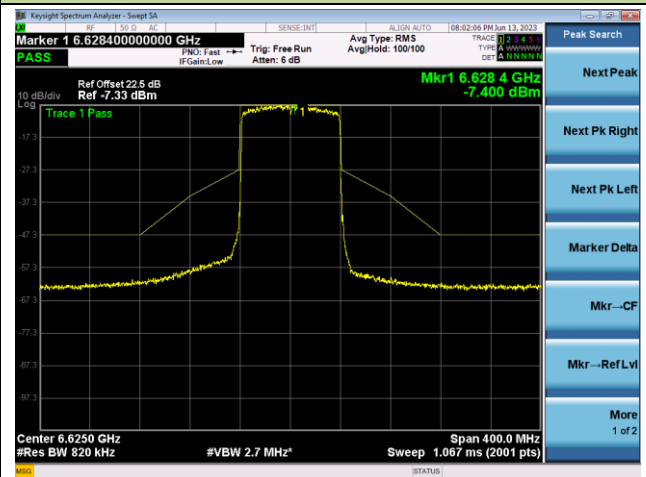 


802.11ax-HE80 - Ant 0

Channel 151 (6705MHz)

 The Reference Level

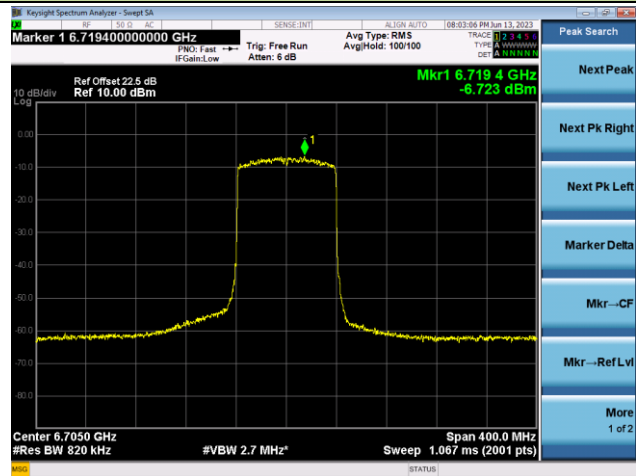


The Mask Data

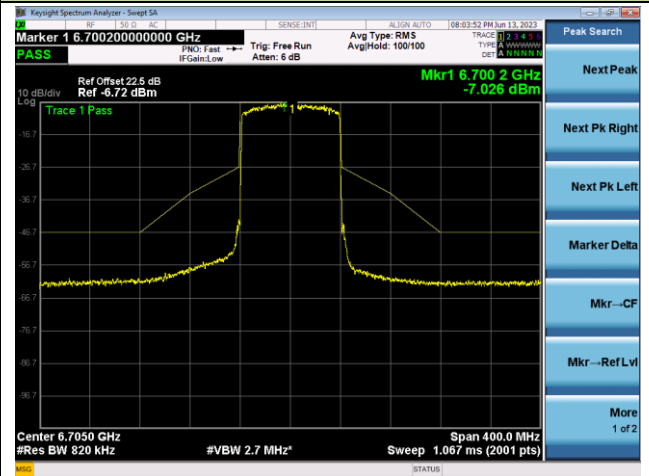 


Channel 167 (6785MHz)

 The Reference Level

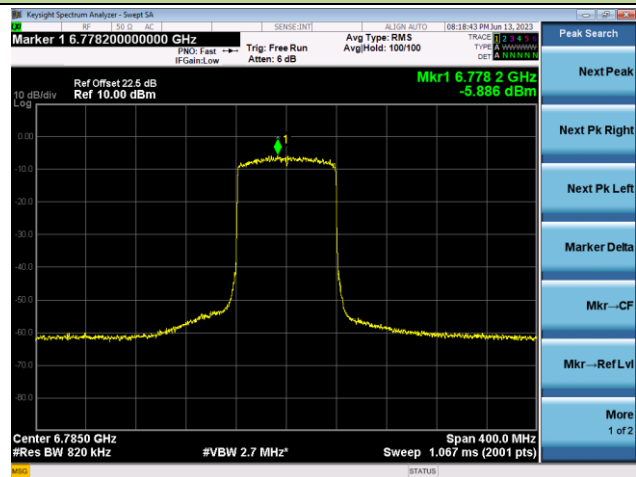


The Mask Data

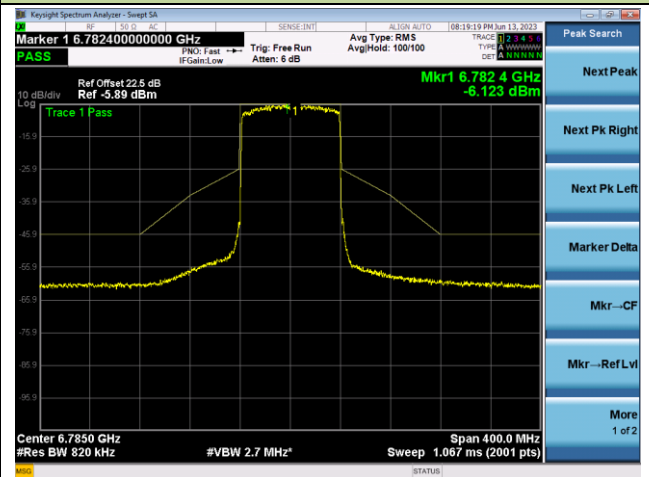 


Channel 183 (6865MHz)

 The Reference Level

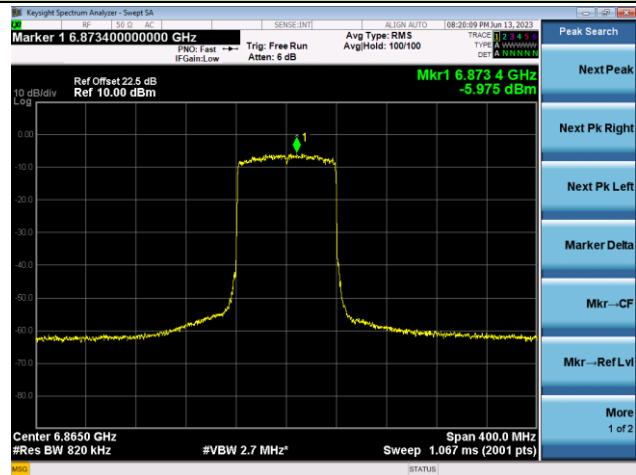


The Mask Data

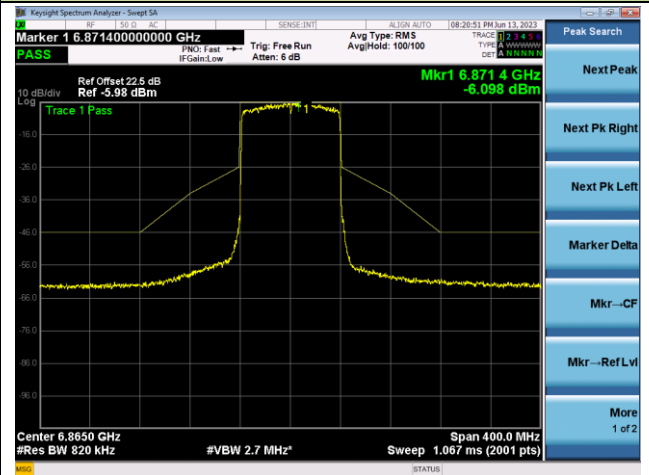 


802.11ax-HE80 - Ant 0

Channel 199 (6945MHz)

 The Reference Level

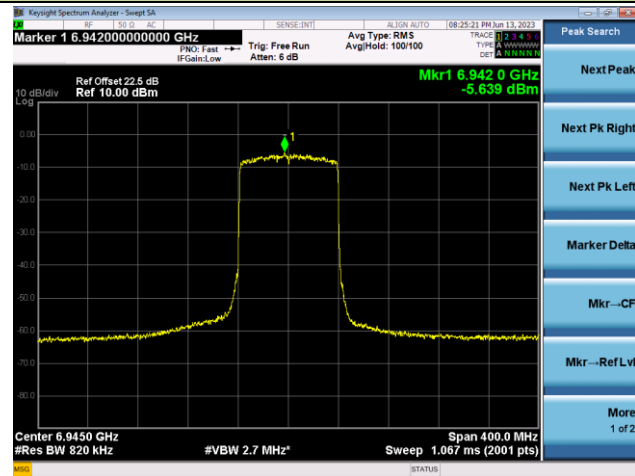


The Mask Data

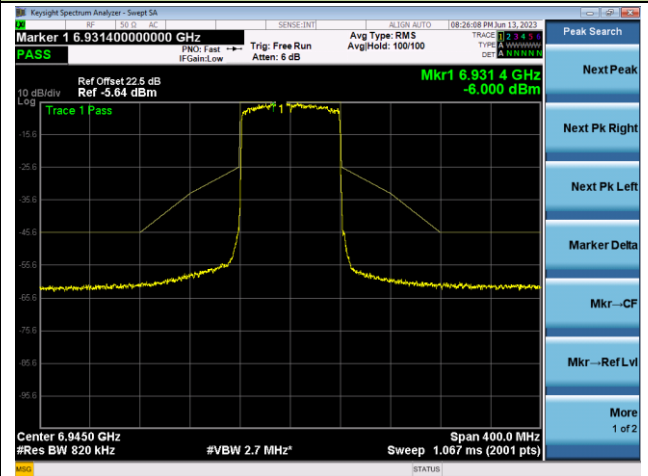 


Channel 215 (7025MHz)

 The Reference Level

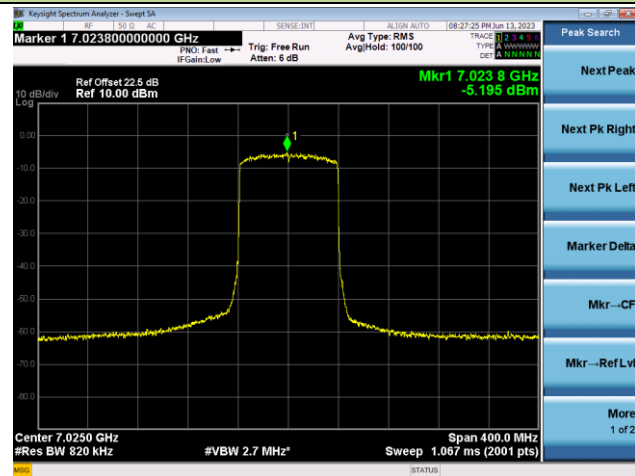


The Mask Data

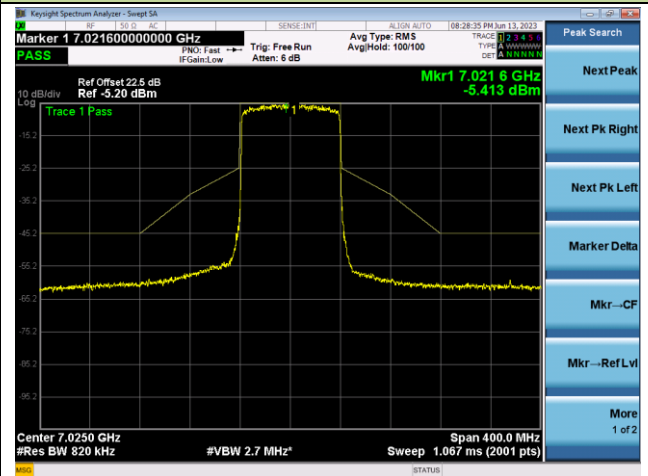 


802.11ax-HE160 - Ant 0

Channel 15 (6025MHz)

 The Reference Level

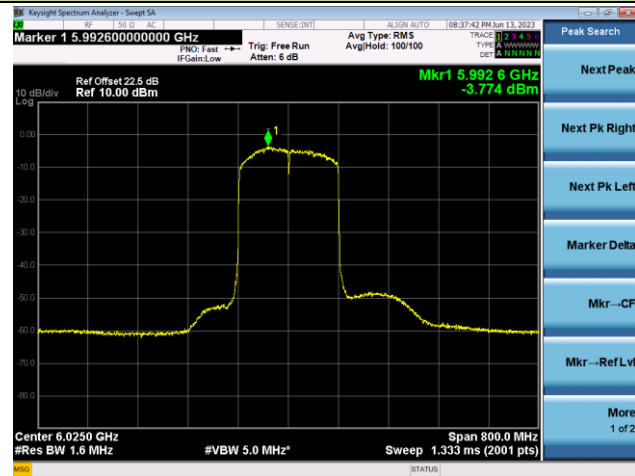


The Mask Data

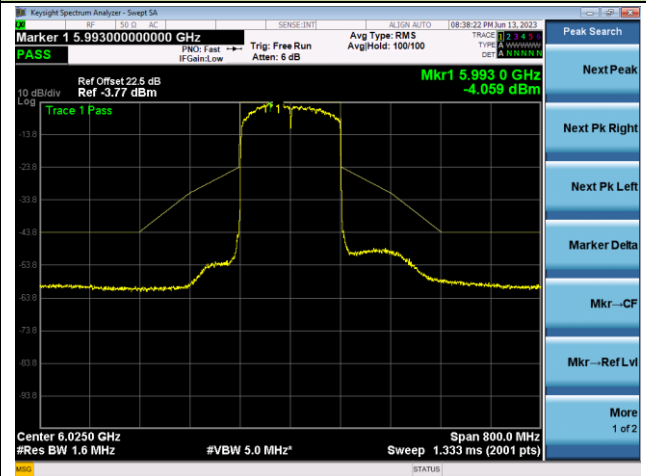 


Channel 47 (6185MHz)

 The Reference Level

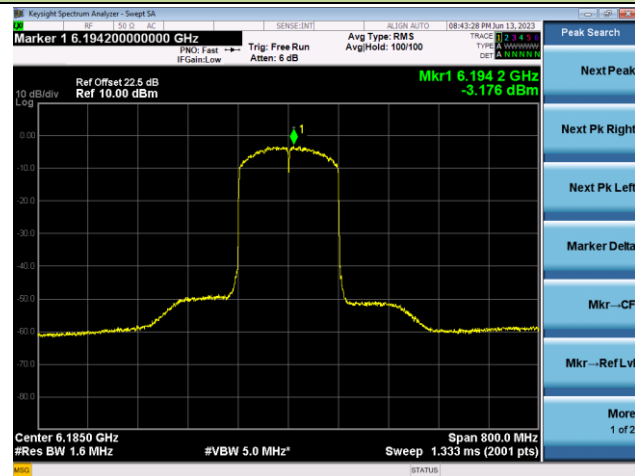


The Mask Data

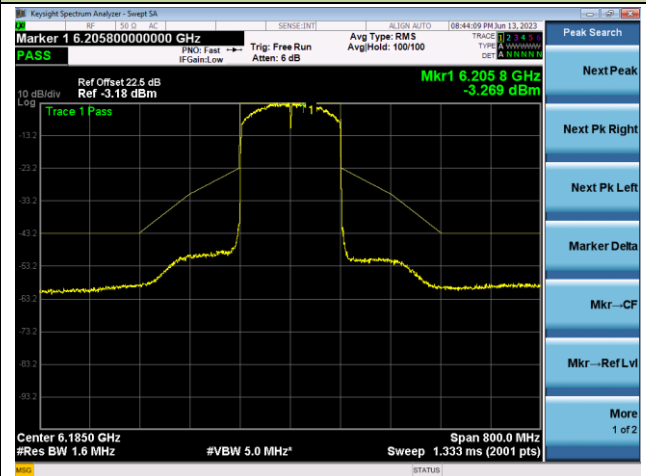 

Channel 79 (6345MHz)

 The Reference Level

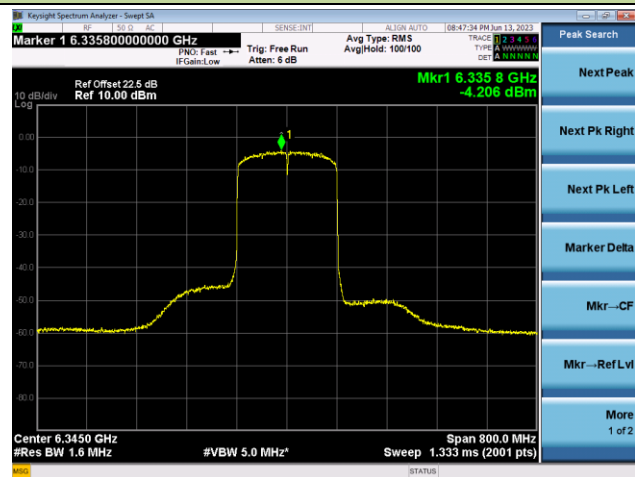

The Mask Data

