

HGP_1100E/1200E USER'S MANUAL

Hyundai introduces a PCS phone which will change your life. The Hyundai HGP-1100E/1200E PCS has the following main features.

- 8 informative icons with distinct and user-friendly design.
- Compact and slim design with flip-type cover.
- Easy-to-use menu-driven operation.
- 18 button keypad with backlight.

Description of buttons

❶ [▲]/[▼]

Adjust Earpiece, Ringer, Keytone and Handsfree volume.

❷ [PWR]

Turns power on/off.

❸ [SEND]

Places or receives a call.

❹ [STO]

Stores information in a memory location. In a menu, confirms a setting.

❺ [RCL]

Recalls information from a memory location.

❻ [MENU]

Selects menu mode. You have to press [

❼ [CLR]

Clears characters from the display or exits from the current menu structure during menu operation.

❽ [END]

Ends a call or exits from the current menu structure during menu operation.

❾ [

Edits and sends or receives SMS message.

❿ [▲*]/[▼#]

Scrolls through the menu.

Display Indicators



(Signal Indicator)

Indicates current signal strength.



(Roam Indicator)

Indicates when the phone is outside of its home area.



(Service status)

Indicates when the phone is out of the service area and when the phone is ready to place or receive a call.



is displayed



(SMS Message Indicator)

Indicates when SMS message is delivered.



(Voice message Indicator)

Indicates when Voice message is delivered.



(Bell or Melody On/Off Indicator)

If users select the buzzer for incoming call instead of vibration

If users select vibration,



is displayed



is displayed.



(Alarm Indicator)

Indicates when the user set the alarm and blink during alarm.



(Battery Indicator)

 
 
Indicates the battery charge level status with bar number (0 ~ 4)

Basic Operation

Turning the Phone On/Off

Turning On



- ① Press and hold the [PWR] button until the lamp turns on.

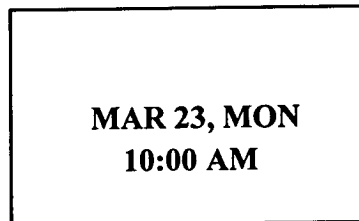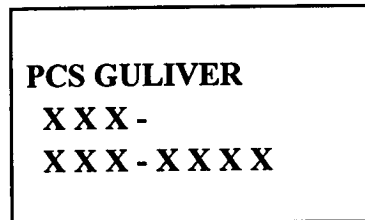

The LCD blinks and all indicators light momentarily and then the greeting message and the phone number appears on the LCD. After a moment, the display shows current time and data, RSSI and Battery level appears on the LCD. If the phone isn't in service area,  icon is displayed. If "—Locked—" appears on the screen, you should enter 4 digits unlock code to unlock the phone.

Turning Off

  - ① Press and hold the [PWR] button again until the lamp turns on.

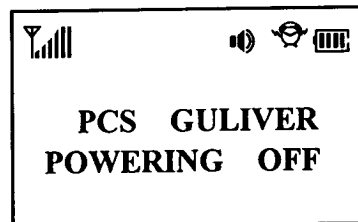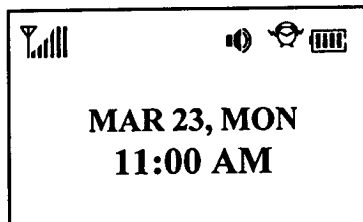



Making a Call

Check the icon . If  icon is displayed on the LCD, please move to another area until  appears.

- ❶ Enter the phone number you wish to dial. Remember to include the area code.

- To correct a mistake, press [CLR] to delete the last digit, or press and hold [CLR] to clear the whole display.

  - ❷ If the phone number is correct, press [SEND] to initiate a call.

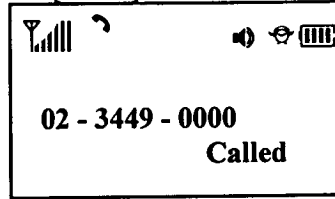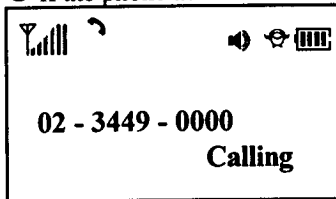

-  icon turns on and the call time shows if the call is connected.
- When a call isn't connected, **CALL FAILED** is displayed on the LCD.

One-Touch Dialing

For memory location 0 to 9, you can use one-touch dialing.

- ❶ Press and hold the button corresponding to the memory location.

- To use one-touch dialing, you should have stored the phone number in memory beforehand.

Two-Touch Dialing

For memory location 10 to 99, you can use two-touch dialing.

- ❶ Press the first digit and press and hold down the second digit.

- To use two-touch dialing, you should have stored the phone number in memory beforehand.

Last Number Re-dial

 
 
The phone stores automatically the last ten numbers which you have called or attempted to call.

To make a call to the number you called last;

- ❶ Press [SEND]

To make a call to any of the other(nine) last-dialed numbers;



- ❶ Press [RCL] and [1]

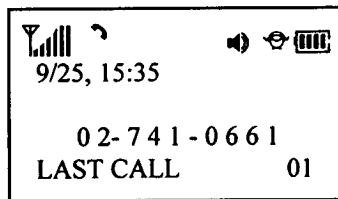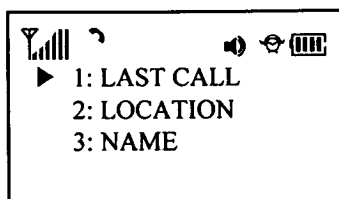

- ② Press scroll button([▲*]/[▼#]) to find the phone number, until the desired number is displayed.
- ③ Press [SEND] to make a call to the number displayed.

Receiving a Call

  - ① When the lamp blinks, "Incoming Call" is displayed on the LCD.
- ② Open the flip cover or press any key except [PWR] and [END] button to get a call.

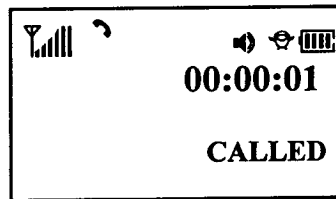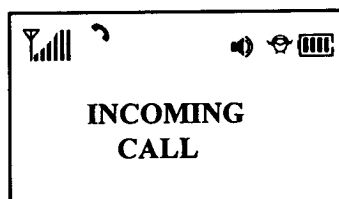

•  icon turns on and the call time shows if a call is connected.

- ③ Close the flip cover or press [END] to terminate a call.

Volume adjustment

On the side of the phone, press ▲ to increase or ▼ to decrease the volume.

Earpiece volume

- ① During conversation, you can adjust Earpiece volume in 5 steps.

Ringer volume

- ① When the bell rings, you can adjust Ringer volume in 5 steps.

Keytone volume

- ① During standby state, you can adjust Keytone volume in 6 steps including Mute.

Handsfree volume

 
- ① During conversation, you can adjust Handsfree volume in 5 steps.

Using the Memory


Storing Information

Maximum 100 phone numbers up to 32 digits in length can be stored in memory.

- ① Enter the phone number you wish to store and press [STO].

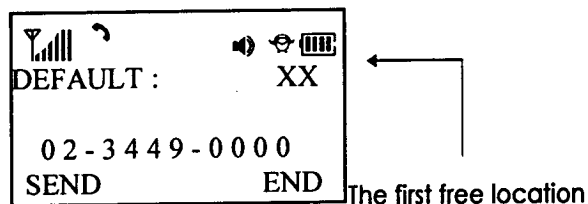


 - ② If you want to store the information in the memory location offered, just press [STO]. Otherwise, enter a memory location number of your choice.

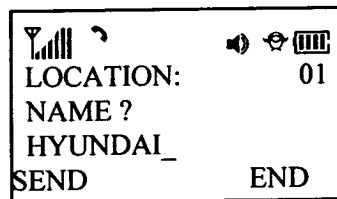

- If the location is already occupied when you store a new entry, **OVERWRITE?** Is displayed.
 - Select YES with scroll button if you want to replace the existing information.
 - Select NO with scroll button if you don't want to delete the existing information

 - ③ Enter a name of up to 14 characters and press [STO]/[SEND] then you can get following.

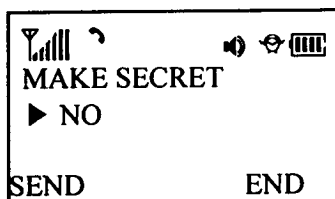

If you select YES, press [DT0]/[SEND] to store as secret number.

The stored name and "LOCKCODE ?" instead of phone number are displayed only on the LCD when you recall a phone number which stored as secret number..

How can I input and store characters?

1) Select character you want with table 1-1.

- [☒] button helps you to change capital character.
- Delete characters.

Delete one character : press [CLR] shortly or [▲*] button

Delete words : press [CLR] button longer.

2) Press [▼#] button to select next character.

3) repeat step1 and step2.

Table 1-1

Dial Button	Press 1 times	Press 2 times	Press 3 times	Press 4 times
1QZ&	Q	Z	&	1
2ABC	A	B	C	2
:	:	:	:	:
9WXYZ	W	X	Y	Z

 
 
Ref.: In case of 7 and 9 button you have to press 5 times to get number 7 and 9.

Recalling Information


You can recall the phone number you wish to find by memory location number, part of phone number or name in memory.

Recalling by memory location number

❶ Press [RCL] and [2].

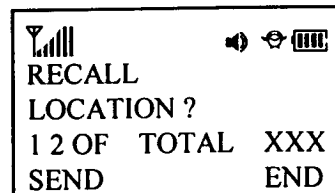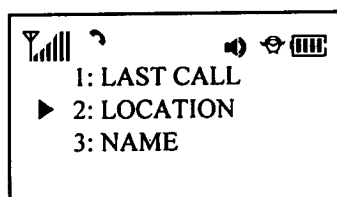

 - ② Enter the 2digit memory location number you want to recall in memory.


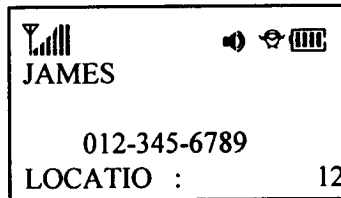


- The phone number stored in that memory location is displayed
- To display the other stored phone numbers, press scroll button([▲*]/[▼#]) until you find the number you are looking for.


- ③ Press [SEND] to call the number.

Recalling by name

  - ① Press [RCL] and [3].

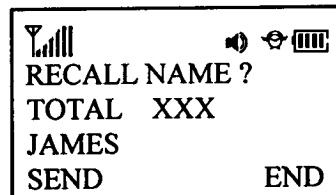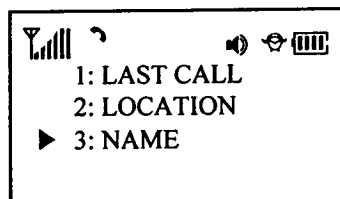

 - ② Enter the name or parts of the name you wish to recall in memory and press [STO].

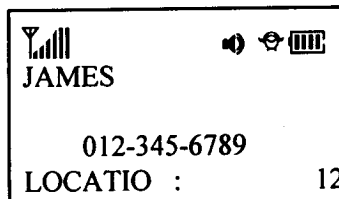

- The first location which includes this letter will appear on the display.
- Press scroll button([▲*]/[▼#]) until you find the name you are looking for. The number of the memory location in which each displayed name is stored will appear in the bottom right-hand corner of display

- ③ Press [SEND] to make the call.

Recalling by phone number

- 1 Press phone number and [RCL].

- The first location which includes this number will appear on the display.
- Press scroll button([▲*]/[▼#]) until you find the number you are looking for. The number of the memory location in which each displayed name is stored will appear in the bottom right-hand corner of display

- 2 Press [SEND] to make the call.

Clearing the Contents of a Memory Location

- 1 Choose a phone number, you want to clear, with previous menu.

- 2 Press [CLR] longer.

 
- 3 Press scroll button([▲*]/[▼#]) to select the option you want.

- YES : Clears the content of the memory location.
- NO : Retains the content of the memory location.

- 4 Press [STO] /[SEND]to confirm the setting.

Clearing the Contents of all Memory Location

- 1 Press [], and [9].
- 2 Enter the 4digit security code(default 0000).
- 3 Press [5].

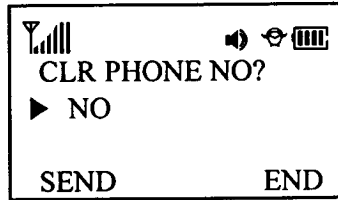

④ Press scroll button([▲*]/[▼#]) to select the option you want.

- YES : Clears the content of all memory location.
- NO : Retains the contents of all memory location.

⑤ Press [STO] to confirm the setting.

 
Clearing the Last Numbers Dialed

This function allows you to set the phone to clear or retain the last numbers dialed.

① Press [✉] and [9].

② Enter the 4digit security code(default 0000).

③ Press [7].

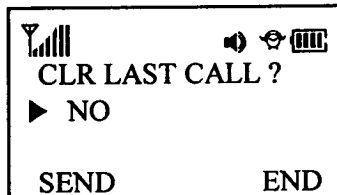

④ Press scroll button([▲*]/[▼#]) to select the option you want.

 
- YES : Clears the last number dialed.
- NO : Retains the last number dialed.

⑤ Press [STO] to confirm the setting.

Silent Scratch Pad

This function allows you to enter scratch pad numbers during a call without transmitting the DTMF tones.

① Press [✉] and [2] (during a call).

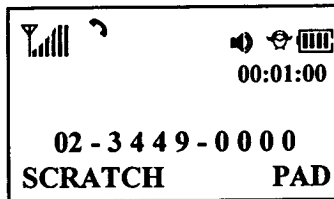

- ② Enter the phone number you want to stored in memory.

• To cancel this function, press [✉]/[END] .

 
Menu Functions

Using the Menu

There are two methods of accessing menu function.

The first method

- ① Press [✉] on the initial display more than 1 second.

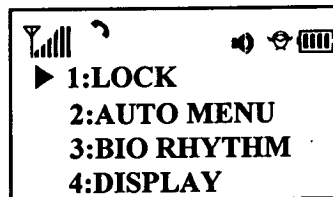

- ② Press scroll button([▲*]/[▼#]) to scroll the functions until the one you want is displayed..

- ③ Press [STO]/[END] to select the function.

The second method

- ① Press [✉] on the initial display.

- ② Enter the number of the menu function you want.

- If submenu exists,
 - the submenu is displayed.
- If submenu does not exist,
 - To change the setting to any of the options offered, press scroll button([▲*]/[▼#]) to scroll the options until the one you want is displayed.
 - To select the option displayed, press [STO]/[SEND].
 - To move to the higher menu from current menu, press [END]
 - To terminate menu completely, press [☒] or close flip cover.

Menu Structure

1. LOCK
 - TEMP LOCK
 - AUTO LOCK
 - SET LOCK#

2. AUTO MENU
 - AUTO RETRY
 - AUTO ANSWER
 - AUTO HYPHN
 - BACK LIGHT
 - BEEP LENGTH
 - DTMF SPEED

3. BIORHYTHM
 - TODAY BIO
 - SOMEDAY BIO
 - BIRTHDAY

4. DISPLAY
 - TIME SHOW
 - GREETING
 - CONTRAST

5. SOUND

- RECEIV MOD
- EAR VOL
- RINGER VOL
- BEEP VOL
- H/F VOL
- CNNECT VOL

6. TIMER

- CURR TIME
- ALARM
- WORLD TIME
- CALL TIME

7. ALERT

- TIME ALERT
- FADE ALERT
- AREA ALERT
- LOW SIGNAL

8. PHONE BOOK

- DDD BOOK
- C/S NUMBER
- PHONE INFO

9. SECURITY

- PREF NAM
- RESTRICT
- HOT LINE
- MEM INIT
- CLR NUMBER
- CLR ALARM
- CLR DIALED
- CLR CALL TIME
- CLR DDD

10. MY MEMODY

- EDIT MELODY
- HEAR MELODY
- TEMP0

 
LOCK

Auto Lock

Press : [] -> [1] -> [2]

This function allows you to lock your phone, to help prevent unauthorized use.

1. Press scroll button to select the option you want.

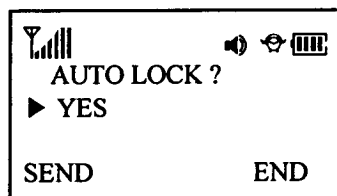

- YES : The phone goes to lock mode immediately.
- NO : The phone doesn't go to lock mode.

 
2. Press [STO]/[SEND] to confirm the setting.

TEMP LOCK

Press : [] -> [1] -> [1]

This function allows you to set the phone to lock temp.

1. Press scroll button to select the option you want.

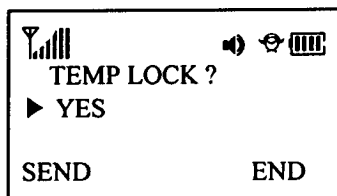

- YES : The phone goes to lock mode immediately.
 - NO : The phone doesn't go to lock mode.
2. Press [STO]/[SEND] to confirm the setting.
 - Auto lock function prior to temp lock function.

SET LOCK NUMBER

Press : [] -> [1] -> [3]

This function allows you to change or release the lock code of your phone.

1. Enter the 4 digit security code.(default 0000)

	  
NEW LOCKCODE ?	
	XXXX
SEND	END

2. Press [STO]/[SEND] to confirm the setting.

AUTO MENU

AUTO RETRY

Press : [] -> [2] -> [1] -> [1]

This function allows you to select auto retrying. If there is no answer, the phone retries the call automatically every interval of time which you set.

- 1 Press scroll button to select the option you want.

	  
RETRY TIME	
▶ 10 SECONDES	
SEND	END

- 5,10,15,20 25,30(SECOND) : Time interval of retrying operation.
- OFF : Cancels retrying operation.

2 Press [STO]/[SEND] to confirm the setting.

 
- If the call is busy then this function doesn't work.

SET AUTO RETRY NUMBER

Press : [☒]-> [2]-> [1]-> [2]

This function allows you to set the auto re-dialing times.

1 Press scroll button to select the option you want.

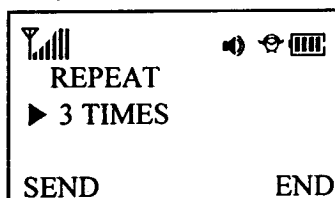

- 1,3,5,7 : Auto retry count.

 
2 Press [STO]/[SND] to confirm the setting.

Auto Answer

Press : [☒]-> [2] -> [2]

This function allows you to select auto answering. If auto answering is set the phone automatically switches from standby mode to talk mode after the number of rings you set when an incoming call is received.

1 Press scroll button to select the option you want.

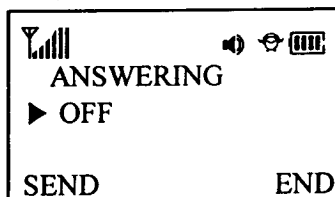

- 1,2,4,6 RINGS : Number of rings.
- OFF : Cancels auto answering operation.

 
2 Press [STO]/[SEND] to confirm the setting.

AUTO HYPHN

Press : [☒]-> [2] -> [3]

This function allows you to identify the numbering of telephone in your country.

1 Press scroll button to select the option you want.

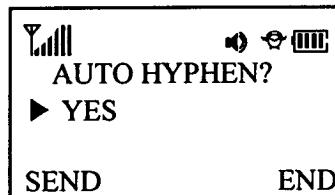


2 Press [STO]/[SEND] to confirm the setting.

Backlight Control

PRESS : [☒]-> [2] -> [4] -> [2]

This function allows you to select the illumination time of the keypad.

 1 Press scroll button to select the option you want.

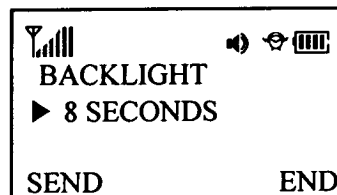

- 2,4,6,8,10,12,14 SECONDS : The light switch on when a key is pressed.

- They remaining on for setting seconds after the last key press, then switch off.
- OFF : The light is always off.

 
2 Press [STO]/[SEND] to confirm the setting.

Auto Backlight Control

PRESS : [☒]-> [2] -> [4] -> [1]


This function allows you to select the illumination time duration you want.

1 Press scroll button to select the option you want.

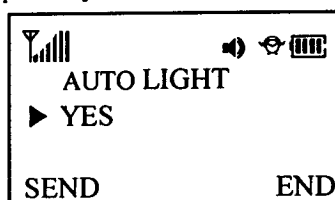

- YES : Enable auto backlight
- NO : Cancels auto backlight operation

 2 If you select YES, press off time duration.

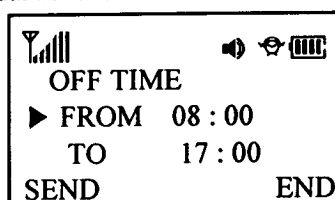

- default : 8 A.M. ~ 5 P.M.
- If you press [STO]/[SEND] button, the cursor moves to next item.
- You can add or subtract value with scroll button.

3 Press [STO]/[SEND] to confirm the setting.

 
Ref. : In case of using short-cut function button press [5]/[SEND]

Beep Length Control

PRESS : [☒]-> [2] -> [5]

This function allows you to select the keytone time.

1. Press scroll button to select the option you want.

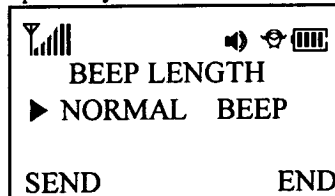

NORMAL BEEP : you can hear beep sound shortly

LONG BEEP : you can hear beep sound during press button

 
- 2 Press [STO]/[SEND] to confirm the setting.

DTMF Transfer Rate Control

PRESS : [☒]-> [2] -> [6]

This function allows you to select the transfer rate of tone when DTMF dialing.

- 1 Press scroll button to select the option you want.

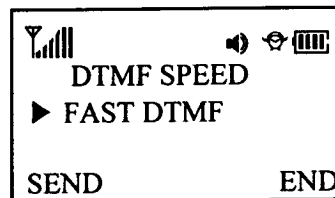

SLOW DTMF : select slow DTMF

FAST DTMF : select fast DTMF (default)

- 2 Press [STO]/[SEND] to confirm the setting.

 
DISPLAY SETTING

Time Show Function

PRESS : [✉]-> [4] -> [1]

This function allows you to view the select time and date.


1 Press scroll button to select the option you want.

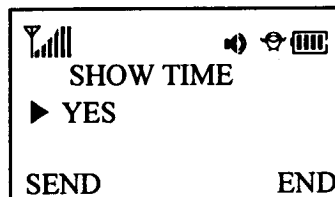


YES : enable this function
NO : disable this function

2 Press [STO]/[SEND] to confirm the setting.

 - If you select YES you can get following:

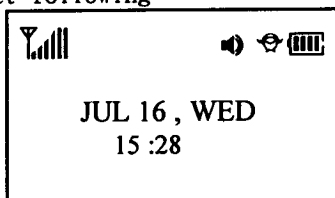

 - If you select NO you can get following:

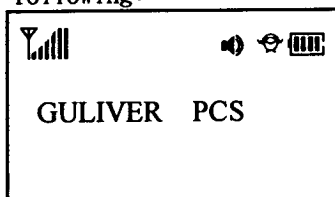


Change Greeting Function

PRESS : [✉]-> [4] -> [2]

This function allows you to change greetings. You can enter greetings up to 14 characters.

 1.After enter greetings press [STO]/[SEND] to confirm the setting.

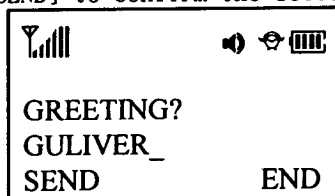


LCD Contrast Control

PRESS : [☒] → [4] → [3]

This function allows you to select and demonstrate the LCD contrast level.

 1 Press scroll button to select the option you want.

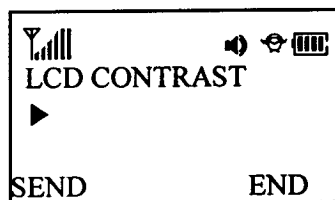

2 Press [STO]/[SEND] to confirm the setting

 
RECEIVE MODE

This function allows you to select receive mode type of a phone.

Select Bell

PRESS : [☒] → [5] → [1] → [1]

1. Press scroll button to select the option you want.

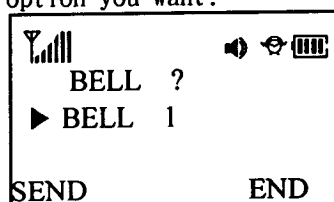


This phone supports ring tones of 6 type(Bell1 ~ Bell6) and melodies of 8 type.

2. Press [STO]/[SEND] to confirm the setting.

Select Vibration

PRESS : [☒]-> [5] -> [1] -> [2]

 1. Press scroll button to select the option you want.

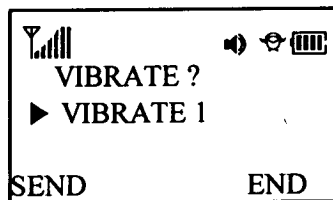


This phone supports vibration of 3 type.

Select Lamp

PRESS : [☒]-> [5] -> [1] -> [3]

 1. Press scroll button to select the option you want.

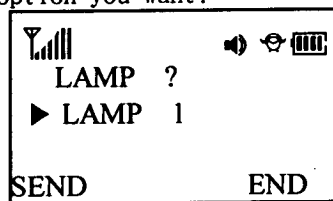

This phone supports lamp of 3 type.

 
Ref. : In case of using short-cut function button press [8]/[SEND].

VOLUME CONTROL


PRESS : [☒]-> [5] -> [2] ~ [6]

This function allow you to select and demonstrate the ear piece, ringer, key, handfree and connect volume level.


1. Press [2] for control ear piece volume level

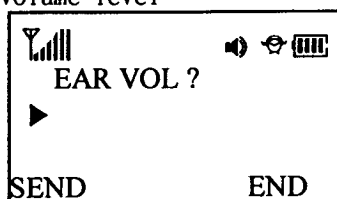

 
Press [3] for control ringer volume level

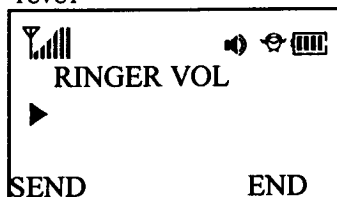


Press [4] for control key volume level

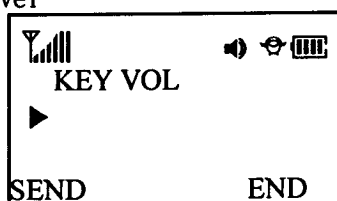 

 Press [5] for control handfree volume level

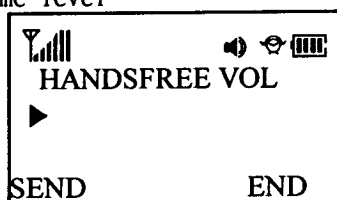

 Press [6] for control connect volume level

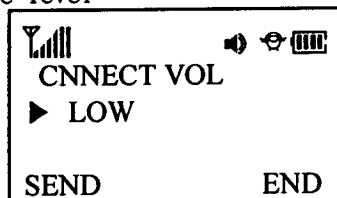


TIMER FUNCTION

Display Current Time

PRESS : [☒]-> [6] -> [1]

 This function allows you to show current time and date during standby mode.

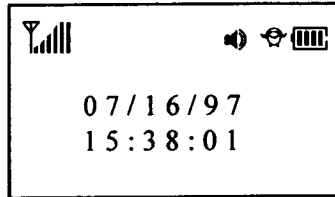


- Time is displayed 20 seconds and return to upper menu.

Displaying World Time


PRESS : [☒]-> [6] -> [3]

This function allows you to show current time and date of worldwide cities.

 1. Press scroll button to select the option you want.

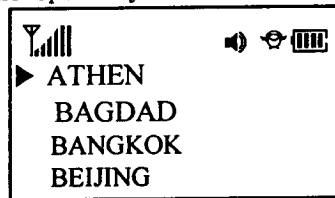

 
2. Press [STO]/[SEND] to confirm the setting.

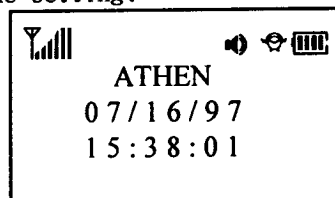

REF. : In case of using short-cut function button press [7]/[SEND]


Displaying Call Time of Last Call

 PRESS : [☒]-> [6] -> [4] -> [1]

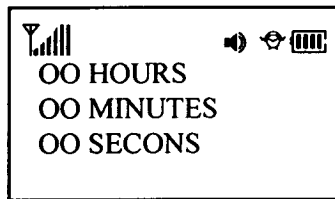

Displaying Air Time

 
PRESS : [✉]-> [6] -> [4] -> [2]

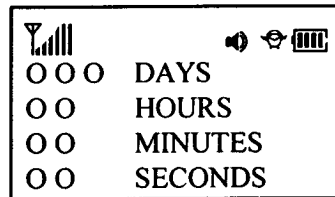

Displaying Call Time of Home

PRESS : [✉]-> [6] -> [4] -> [3]

 
This function allows you to show the time during home service.

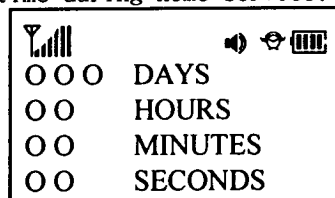

Displaying Call Time of Roam

PRESS : [✉]-> [6] -> [4] -> [4]

 This function allows you to show the time during roam service.

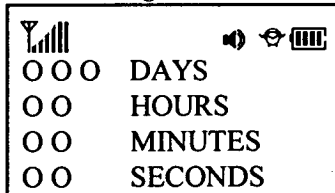


ALERT FUNCTION

Time Alert

PRESS : [✉]-> [7] -> [1]

This function make beep sound every 1 minute during conversation.

 1. Press scroll button to select the option you want.

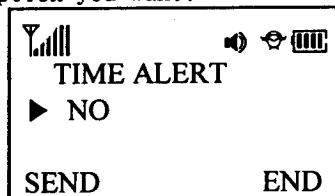

- YES : Set time alert every 1 minute.
- NO : Reset time alert

 
2. Press [STO]/[SEND] to confirm the setting.

FADE ALERT

PRESS : [✉]-> [7] -> [2]

This function makes an alert when you fade out service area during conversation.

1. Press scroll button to select the option you want.

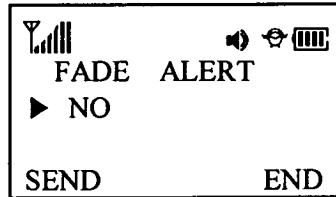

- YES : Set fade alert.
- NO : Reset fade alert.

 
2. Press [STO]/[SEND] to confirm the setting.

Area Alert

PRESS : [✉]-> [7] -> [3]

This function makes an alert when service area change.

1. Press scroll button to select the option you want .

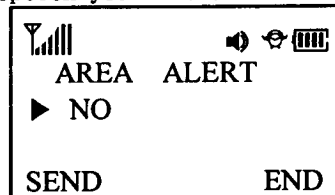

- YES :Set area alert.
- NO : Reset area alert.

2. Press [STO]/[SEND] to confirm the setting.

 
- There is three type of message.
(CHANGING SVC AREA, LEAVING SVC AREA, ENTERING SVC AREA)

Low Level Signal Alert

PRESS : [✉]-> [7] -> [4]

This function makes an alert when the level of signal is low.

1. Press scroll button to select the option you want.

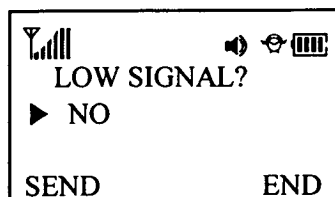

- YES : Set low level signal alert.
- NO : Reset low level signal alert.

 
2. Press [STO]/[SEND] to confirm the setting.

PHONE BOOK

Displaying Phone Number

PRESS : [☒]-> [8] -> [3] -> [1]

This function allows you to show your phone number.

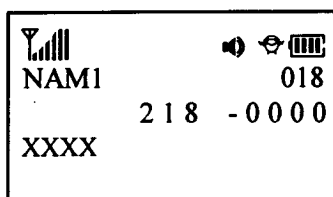


- If you press[# ▼] button longer an standby mode you can get phone number.

Displaying Phone Version

PRESS : [☒]-> [8] -> [3] -> [2]

 This function allows you to show your phone version.

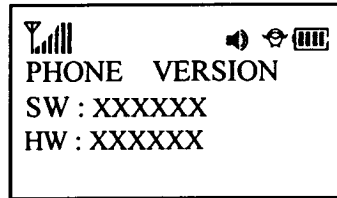


NAM SELECTION

NAM Selection

PRESS : [☒]-> [9] ->Security Code -> [1] -> [1]

This phone supports 4 NAM. This function allows you to subscribe to competitive CDMA services in your area and other area.

 1. Press scroll button to select the option you want.

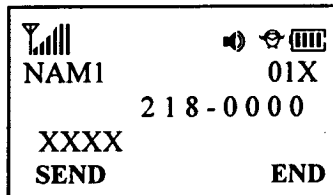


2. Press [STO]/[SEND] to confirm the setting.

Auto NAM Selection

PRESS : [☒]-> [9] ->Security Code -> [1] -> [2]

If you subscribe to more than one NAM, automatic NAM enables your phone to automatically switch to another NAM when it losses services in the current area but enter the other area in which has subscribed service.

 1. Press scroll button to select the option you want.

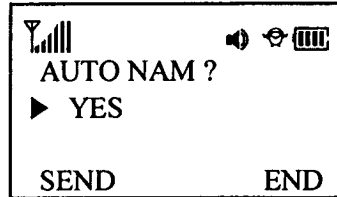


YES : Set auto NAM function.
NO : Reset auto NAM function.

2. Press [STO]/[SEND] to confirm the setting.

RESTRICT FUNCTION


PRESS : [☒]-> [9] ->Security Code -> [2]

 1 Select YES with scroll button.

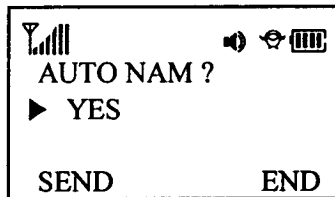

If you select NO, this function does not progress and returns to the previous step.

 
2. If you selected YES, you can show following.

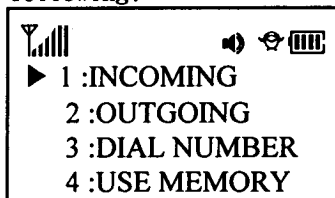

Locking Incoming Call

The phone prevents you from getting a call.

 1. After you selected the restrict function to YES, press [1].

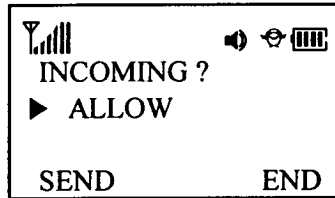

2. Press scroll button to select the option you want.
 - RESTRICT : To lock incoming call.
 - ALLOW : To allow incoming call.

 
3. Press [STO]/[SEND] to confirm the setting

Locking Outgoing Call

The phone prevents you from placing a call. But emergency call and hot line call is possible.

1. After you selected the restrict function to YES, press [2].

A

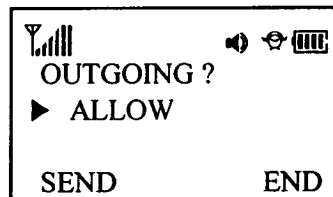


2. Press scroll button to select the option you want.
 - RESTRICT : To lock outgoing call.
 - ALLOW : To allow outgoing call.

3. Press [STO]/[SEND] to confirm the setting

Locking Dial Button

The phone prevents you from using dial button. You can call with press [RCL] button only using stored number in memory.

 1. After you selected the restrict function to YES, press [3].

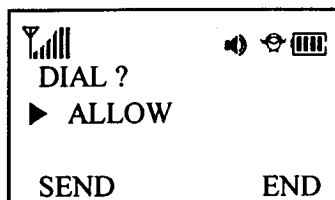


2. Press scroll button to select the option you want.
 - RESTRICT : To lock dial button.
 - ALLOW : To allow dial button.

3. Press [STO]/[SEND] to confirm the setting

Locking Memory

The phone prevents you from recalling or storing.

 1. After you selected the restrict function to YES, press [4].

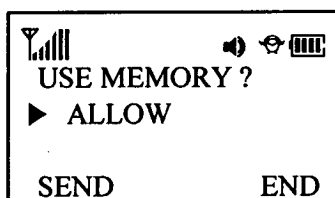


2. Press scroll button to select the option you want.
 - RESTRICT : To lock memory access.
 - ALLOW : To allow memory access.

3. Press [STO]/[SEND] to confirm the setting

Locking International Call

The phone prevents you from international call.

 1. After you selected the restrict function to YES, press [5].

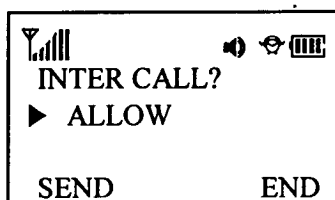


2. Press scroll button to select the option you want.
 - RESTRICT : To lock international call.
 - ALLOW : To allow international call.
3. Press [STO]/[SEND] to confirm the setting

INPUT HOT LINE NUMBER FUNCTION

PRESS : [☒]-> [9] ->Security Code -> [3]

This function allows you to call nevertheless the phone is locking.

 1. Press telephone number.

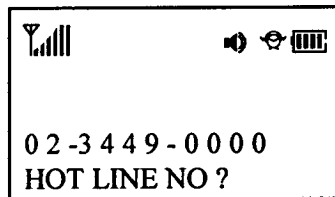


2. Press [STO]/[SEND] to confirm the setting.
3. If you want to call with hot line number, press [▼#] button during 1 second.

MEMORY INITIALIZATION FUNCTION

This function allows you to set the phone into default value except greeting, lock(security) code, stored phone number.

PRESS : [☒]-> [9] ->Security Code -> [4]

 
1. Press scroll button to select the option you want.

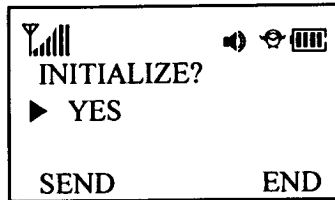

- YES : To execute memory initialization.
- NO : To keep memory contents.

2. Press [STO]/[SEND] to confirm the setting.

 If you selected YES following message is displayed.

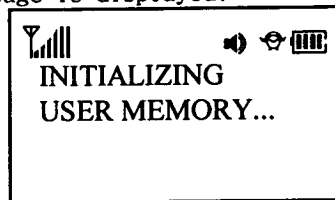


MEMORY CLEARING FUNCTION

Clear Memory

PRESS : [☒]-> [9] ->Security Code -> [5]

 This function allows you to clear the memory you stored.

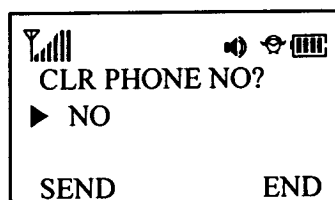

1. Press scroll button to select the option you want.
 - YES : To clear memory contents.
 - NO : To keep memory contents.

 
2. Press [STO]/[SEND] to confirm the setting.

Clear Alert

PRESS : [☒]-> [9] ->Security Code -> [6]

This function clears alert.

1. Press scroll button to select the option you want.

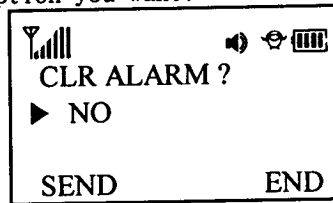


- YES : To clear alert.
- NO : To keep alert.

2. Press [STO]/[SEND] to confirm the setting.

Clearing Air Time

PRESS : [☒]-> [9] ->Security Code -> [7]

 1. Press scroll button to select the option you want.

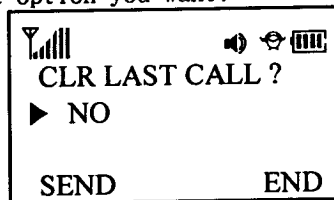

- YES : To clear air time.
- NO : To keep air time.

2. Press [STO]/[SEND] to confirm the setting.