 


Wireless Charger  
Stand

## User Manual

Thanks for choosing Wireless Charger!  
This wireless charging pad allows you to freely use your smartphone.  
Please read the user manual carefully, and keep it for future reference.

### Standard Accessories



 
 
Working Status	LED Indicator
Connected to power	Solid Green for 3 seconds then off
Standby	off
On charging	Solid Green
Fully charged	Solid Green
Metal or abnormal temperature detected	Flashing Red
Using a non-Quick 3.0 wall charger	Flashing Green

### Specifications


Wireless Charger Input	5V --- 2A
Wireless Charger Output (Max)	10W
Wireless Distance	8mm
Efficiency	≥75%
Dimensions	118X70X87.5mm

### Instructions

1. Connect the USB cable port to the power adapter, and then plug the other side into the micro port of the charging stand.

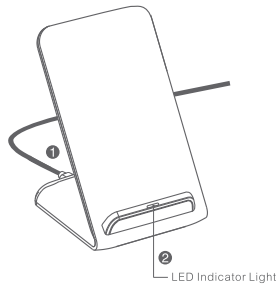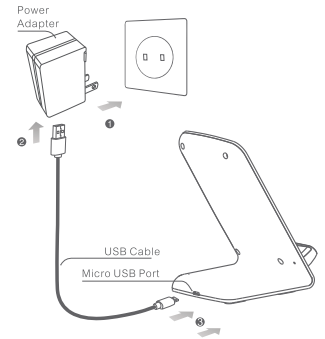

 2. Please put the phone (Supported Qi wireless charging) on the charger stand, then the LED will turn on Green and start charging, easy way.

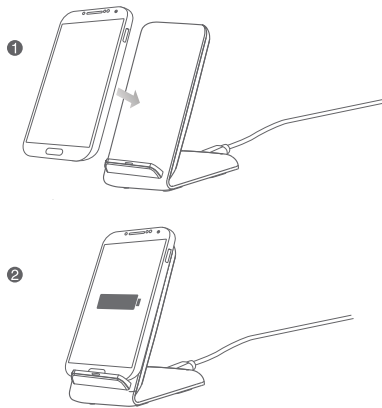

#### Customer Review:

LED will be Green when connected successfully.  
If not, please readjust the position of the phone to make it work.

### Attention

1. Please keep the charger away from water or other liquid.
2. If you need to clean the charger, please make sure that it is disconnected.
3. In case of the charging failure, please DO NOT place the charging pad too close to magnetic stripe or clip card (ID card or credit card).

### FCC Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules.  
Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

#### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 15cm between the radiator & you body.