80 克书纸3折4页后再对折 折后尺寸: 100*100mm





Product Function:

- White Noise: Including 15 sounds. Short press to switch sound sources in turm. Music sequence the sound sources are: White noise, pink noise. Gray noise, Fan, Hair dryer, Thunder, Rain 1, Rain 2, Brook 1, Brook 2, Fire, Summer Night, Forest, Wave, Laundry machine.
- Recording function: Press and hold the recording button for 3 seconds to start recording, and there will be an instruction recording notification sound. Please follow it to start recording.
- Recording Mode: Timing lights will light up quickly and sequentially, indicating that the recording is in progress. After the recording is completed, press any key to confirm the recording. There will be a sound: Finished Recording. The recorded message will play automatically.
 Tips: The recorded sound will play automatically, please remember to lower down the sound machine's volume before record.


- Operation:
- 1.
 On/Off O
 6.
 Mood light ⊕

 2.
 Timer O
 7.
 Recording options ⊕

 3.
 Volume +/- \$\circ\$
 \$8.
 Sounds options ₩ \$\varPsilon\$

 4.
 Timing indicator 0000
 9.
 Breathing training @

 5.
 Gently pulsing light %
 10.
 The USB port (SV IA)

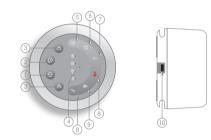

USER GUIDE

MODEL NO.: SA03

Preparatory steps

- Unpack the product.
- This machine is powered by the DC 5V USB port.
 Connect the USB cable to the backside of the unit and connect into a 5V adapter.
 (Please don't use 9V/12V/24V charger for this unit)

Listening to Nature Sounds

- 1. Press and hold "(')" for seconds.
- Press relevant icon to select the sound you want to hear.
 You can turn the sounds off by long press the icon.
- 3. To adjust the volume, press the ς or ς to the desired level.
- 4. When finish listening to the sounds, you may turn them off by long-pressing the ().

Wireless Speaker

- Press the ON/OFF key to turn on the speaker, if in wireless speaker mode, it will give a notification : Wireless Speaker.
- Go to mobile's setting page and pair the SA03, after connection, it will have a connected notification.
- 3. Enjoy the music from your mobile phone.
- 4. If you need to re-pair the speaker, long-press the timer button until the power indicator LED flashes.

Timer Function

- The default mode is uninterrupted playback, after activate the timer button, it will be:
- On 30 minutes mode, countdown for 30 minutes playing.
 On 60 minutes mode, countdown for 60 minutes playing.
 On 90 minutes mode, countdown for 90 minutes playing.

Using the Light

- White light: Six Gear Positions Brightness
 Press the ⅔-to turn the white light on.
 If you need adjust the brightness, in the white light mode,
 press ⅔ again to choose the desired brightness level. The
 White light can be turned off by long press.
- 2. Color light: 7-colors changing
 - Press the (2) to select the color you want. Color transformation order: Red - yellow -Navy - Green - Blue - Purple - Coral - seven colour changeing -OFF The color light can be turned off by long press. Tips: Both lights can be turned on by short press in standby mode.

Recharging the battery:

- 1. Plug the Type-C USB cable to the USB port.
- 2. The power indicator will light up when charging.

Child & Meditation: Including 15 kinds of sounds. Music sequence the sound

A Meditation: Offers seven kinds of meditation sounds. Includes mindfulness

meditation breathing training (see Breathing instructions for details).

Singing Bowl, Meditative Bells, Short Meditation Music.

Warm White Light: Six Adjustable Brightness Level.

Seven colors mood changing light

sources are: Heartbeat, Shusha, Little star. Kevin' s lullaby, Brahms lullaby, Hash little

baby, Nighty Night, Bottle typing (ASMR), Train, Clock, Guitar, Native American Flute,

Timer: choose uninterrupted work allnight or use 30, 60, 90 minutes Sleeping Setting.

3. When the charging is finished, the charging light will disappear.

Package Contents:

- * 1 X Sound Machine (Built-in rechargeable battery)
- 1 X Type -C Charging Cable
- 2 X Owner's Manual

Note:

Use 5V charging head available to connect the provided cable for charging the battery.

Important Safeguards:

- To protect from electrical shock, do not immerse cord, plug or unit in water or other liquid. Care should be taken so that objects do not fall on and liquids are not spilled through openings in the unit.
- Do not operate with a damaged cord or plug, or the unit will be malfunctioned.
- The unit should keep away from heat sources such as direct sunlight, radiators, heat registers, stoves or other heat-producing appliances.
- To clean, gently wipe with a soft cloth moistened with warm water or mild detergents only, and then remove all moisture with a soft, dry cloth. Do not use harsh solvents or chemicals for cleaning.



FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.