

SWAMI VIBE QUICK START



CHARGING

1. Insert micro USB charging end into the Swami Vibe & then insert the USB end of the charging cord into a USB charging port or AC adapter (included). The recommended USB charging rate is 5V, 1A.
2. A complete full charge will take roughly 6 hours of charging time.



BUTTON DESCRIPTION & SCREEN LAYOUT



- A. [POWER] Button:** **Hold** to power on. **Hold** to power off.
- B. [OK] Button:** **Press** to select options and to toggle between Green, Hazards, & Scorecard. **Press & hold** to return to previous screen.
- C. [UP] Button:** **Press** to scroll up, change holes.
- D. [Down] Button:** **Press** to scroll down, change holes.
- E. [PLAY/PAUSE] Button:** **Press** to play music, **press** again to pause
- F. [BT CONNECTION] Button:** **Press & hold** to connect. Activate Bluetooth on smartphone. Then, **Hold [BT CONNECTION] Button.** Indicator light flashes blue while searching for device to pair. Select "SWAMI VIBE" on your smartphone, indicator light stops flashing when paired.
- G. [VOLUME UP] Button:** **Press** once to raise volume. **Press** twice to skip to next song
- H. [VOLUME DOWN] Button:** **Press** once to lower volume. **Press** twice to go back a song


USING SWAMI ON THE COURSE

Select the **PLAY** option from the Main Menu and **press** the **[OK]** button. The Swami Vibe will search for surrounding courses that the device supports once courses download. Use the **[UP]** and **[DOWN]** buttons to select your golf course, then **press** the **[OK]** button.

1. PLAY MODE



2. HAZARDS

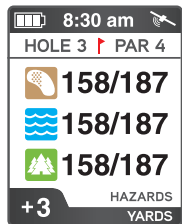

3. SCORE CARD



4. SHOT DISTANCE



- 1. PLAY MODE** will display the distance to the Front, Center & Back edge of the green for the current hole.
- While in **PLAY MODE**, **press** the **[OK]** button to access the **HAZARD SCREEN**. To return to the **PLAY MODE** screen (distances to green) **press** **[OK]** again.
- To access the **SCORECARD**, **press** the **[OK]** button while on the **HAZARD SCREEN**. **Press** the **[UP]** or **[DOWN]** buttons to enter your score, then **press** **[OK]** button again to return to the **PLAY MODE** Screen (distances to green).
NOTE: SCORECARD can only be used if turned ON in Settings.
- While in **PLAY MODE**, **press** the **[OK]** button to access **SHOT DISTANCE MODE**. Then travel from where you hit your shot to your ball. The distance that the shot traveled will be displayed. To return to the **PLAY MODE** Screen (distances to green), **press** the **[OK]** button.
NOTE: SHOT DISTANCE can only be used if turned ON in Settings.

MAGNET

The Swami Vibe contains a strong magnet inside of the unit. Use the magnet to attach to a metal surface for hands-free use on the course. To attach, simply line up the back of the unit with a metal surface & allow the magnet to connect before letting go.



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.