

4.33"  
Back (Outside)



2.75"

RECHARGE POWERWIRELESS III

**POWERWIRELESS III**  
Portable Wireless Triple Charger




Front (Outside)

4.33"  
Top (Inside)

## RECHARGE DEVICE

- 1. Wireless Charging**  
Place your phone on top of the PowerWireless III and adjust its position until your device begins charging
  - 2. USB-A Charging**  
Plug the USB-A end of your charging cable into the PowerWireless III & connect it to your device
  - 3. USB-C Charging**  
Use the USB-C cable that came with your device to charge it or recharge PowerWireless III with the included cable
- Press the power button to begin charging

## BATTERY STATUS

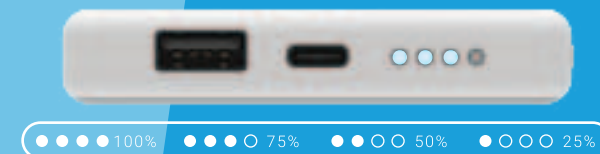

## CHARGING FACTS:

- Charge any USB powered devices (phones, tablets, flashlights, remotes, etc.)
- Charge up to 3 devices simultaneously
- Use the USB-A port to charge phones at a faster speed (if supported) & use the USB-C port to charge at the regular speed
- The 8,000 mAh battery will provide multiple charges to most phones before needing to be recharged
- **Experiencing an issue?** Try the RESET. Hold down the power button for 10 seconds

2.75"

2.75"

Bottom (Inside)

Bleed Lines


Fold Lines

# PowerWireless III

Insert Card Proof • Scale 1:1

## Custom Card Instructions:

- "Designed & made in Canada by PowerStick.com." text **must** stay on all printed cards.
- Please embed any photos and outline any text used in the design of the card.
- The red guide is for the bleed. Any art on the card that will reach the edge of the paper must be extended to the red bleed line.
- When creating a custom card, it is recommended to customize the front & leave the instructions on the rest of the pages to benefit the end user.

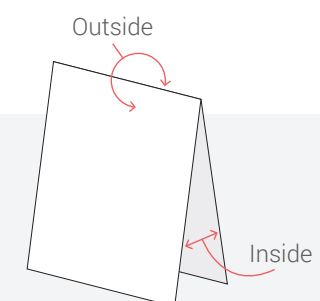

04.06.21

support@powerstick.com



Designed & made in Canada by PowerStick.com.

POWERWIRELESS III  
M/N 803700 P/N PW2V1  
Battery Capacity 8,000mAh  
OUTPUT USB-A 5V/2A, USB-C 5V/1.5A,  
Wireless 5V/1A P52918  
INPUT USB-C 5V/1.5A

**Connect to Wall Plug**  
Plug the USB-C end of your  
cable into your PowerWireless  
III & the USB-A end into a wall  
plug adapter.

**Connect to USB Port**  
Plug the USB-C end of your  
cable into your PowerWireless  
III & the USB-A end into a  
laptop, computer, or other  
USB port.

RECHARGE POWERWIRELESS III



# POWERWIRELESS III

Portable Wireless Triple Charger





## RECHARGE DEVICE

### 1. Wireless Charging

Place your phone on top of the PowerWireless III and adjust its position until your device begins charging

### 2. USB-A Charging

Plug the USB-A end of your charging cable into the PowerWireless III & connect it to your device

### 3. USB-C Charging

Use the USB-C cable that came with your device to charge it or recharge PowerWireless III with the included cable

**Press the power button to begin charging**



## BATTERY STATUS



## **i** CHARGING FACTS:

- Charge any USB powered devices (phones, tablets, flashlights, remotes, etc.)
- Charge up to 3 devices simultaneously
- Use the USB-A port to charge phones at a faster speed (if supported) & use the USB-C port to charge at the regular speed
- The 8,000 mAh battery will provide multiple charges to most phones before needing to be recharged
- **Experiencing an issue?** Try the RESET. Hold down the power button for 10 seconds

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.