

# INSTRUCCIONES MANUAL





## PARTY SPEAKER

### GRV-650L



#### DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

	<b>CAUTION</b>	
	RISK OF ELECTRIC SHOCK, DO NOT OPEN	
Caution: To reduce the risk of electric shock do not open this device, there are no serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.		
	This sign means the existence of dangerous voltage inside the unit, which states a risk of electric shock.	
	This sign means that there are important instructions of operation and handling in the manual that comes with this device.	

#### NOTE

This unit may be submitted for changes in specifications, characteristics and/or operation without prior notice to user, in order to continue improving and developing its technology.

#### Contents

1. Important Notice
  - Before Use this Speaker
2. Your Party Speaker
  - Introduction
  - What's in the box
  - Overview of the Top control panel
  - Overview of the Rear panel
  - Overview of the remote control
3. Get started
  - Connect power
  - Prepare the remote control
  - Turn ON/OFF the speaker
  - Charging the internal Battery
  - Intrenal Battery Level indicator
4. Play
  - Basic key play operations
  - Play from USB
5. Listen to radio
  - Turn to FM radio stations
6. Connect with Bluetooth
7. Connect with AUX Line in
8. Listen to external audio device

Connect with Wired Microphone/Guitar

## 9. Production information

Specification

USB play ability information

## 10. Troubleshooting

# 1. Important Notice

## Before Use this Speaker

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all warnings.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings.

Install in accordance with the manufacturer's instructions.

- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ Only use attachments/accessories specified by the manufacturer.
- ⑩ Only use attachments/accessories specified by the manufacturer.
- ⑪ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑫ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑬ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way. Such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ⑭ Battery usage CAUTION-TO prevent battery leakage which may result in bodily injury, property damage, or damage to the remote control.
  - Install all batteries correctly, + and - as marked on the remote control.
  - Do not mix batteries (old and new or carbon and alkaline, etc.)
  - Remove batteries when the remote control is not used for a long time.
  - Batteries (battery pack or batteries excessive heat such as sunshine, fire, or the like).
- ⑮ Apparatus shall not be exposed to dripping or splashing.
- ⑯ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑰ Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



## Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Never look into the laser beam inside this apparatus.
- Make sure that you always have easy access to the power cord, or adaptor to disconnect the apparatus from the power.



## Caution

- Use of controls or adjustment or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

## Hearing safety



- Listen at a moderate volume.

- Using headphones at a high volume can impair your Hearing.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. so after prolonged listening. What sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

**To establish a safe volume level:**

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly without distortion.

**Listen for reasonable periods of time:**

- Prolonged exposure to sound, even at normal 'safe' levels, can also cause hearing loss..
- Be sure to use your equipment reasonably and take appropriate breaks.

**Be sure to observe the following guidelines when using your headphones.**

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc., it may create a traffic hazard and is illegal in many areas.

**Notice**

Any changes or modifications made to this device that are not expressly approved by Consumer Lifestyle may void the user's authority to operate the equipment.

## **2. Your Party Speaker**

**Introduction**

**With this unit, you can:**

 
- Enjoy audio from USB storage Devices, and other external device;
- Listen to radio stations.

**What's in the box**

Check and identify the contents of your package:


- Speaker
- Remote control
- User manual
- Aux In/ FM Antenna Cable
- AC Power Cable

## Overview of the Top control panel

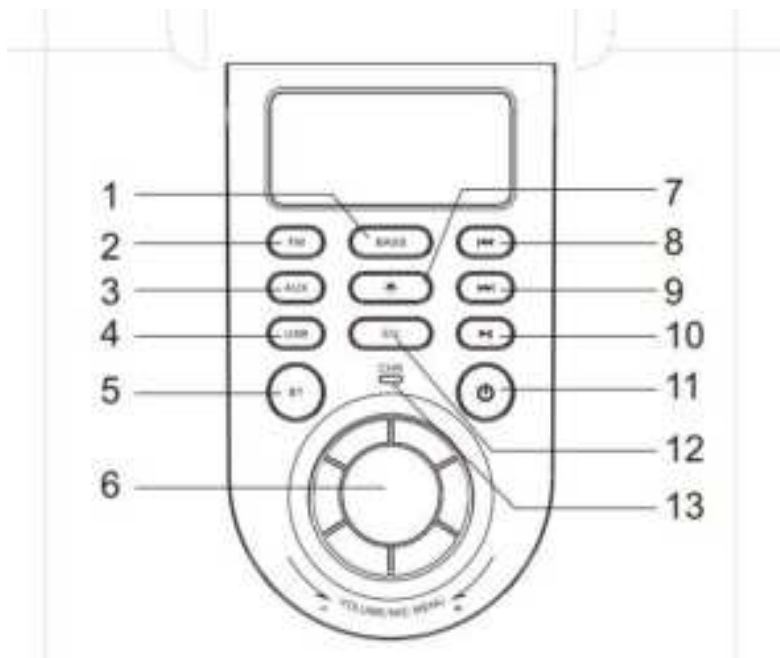


1. Bass button
2. FM button
3. AUX button
4. USB button
5. Bluetooth button
6. Volume/MIC Menu button
7. LED ON/OFF button
8. Previous button
9. Next button
- 10 .Play/Pause button
11. Power ON/OFF button
12. EQ button
13. Charging light

## Overview of the Rear panel

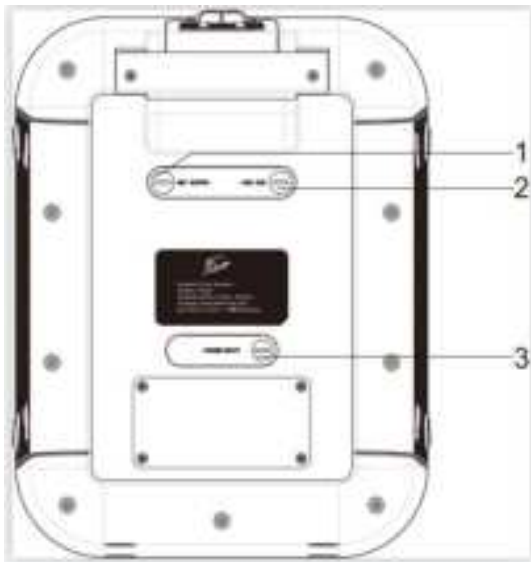 

- 1. Microphone /Guitar Input jack
- 2. USB / AUX Input jack
- 3. AC Power Input jack

## Overview of the remote control

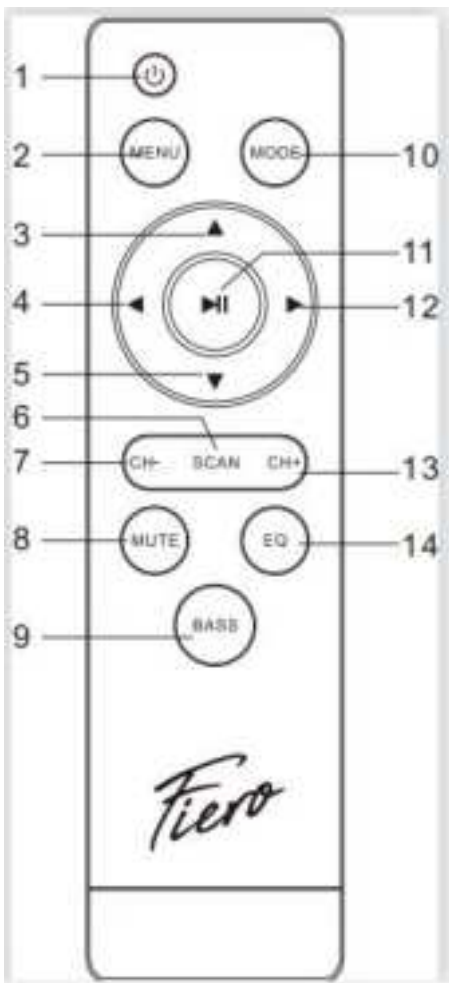 

- 1. Power function key
- 2. Menu function key
- 3. Volume+ function key
- 4. Previous function key
- 5. Volume- function key
- 6. Scan function key
- 7. Channel- function key
- 8. Mute function key
- 9. Bass function key
- 10. Mode function key
- 11. Play/Pause function key
- 12. Next function key
- 13. Channel+ function key
- 14. EQ function key

### 3. Get started



#### Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

#### Connect power



#### Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on back or the underside of the unit.
- Risk of electric shock! When you unplug the AC power cord, always pull the plug from the socket. Never pull the cord.
- Before you connect the AC power cord, make sure that you have completed all other connections

Connect the power cable to the wall socket:



#### Prepare the remote control



To insert the remote control batteries:

1. Open the battery compartment.
2. Insert 2 x AAA batteries with correct polarity (+/-) as indicated. The 2xAAA battery not include in our products, please purchase from Authorized Seller.
3. Close the battery compartment.

Please Note:

- If you are not going to use the remote for a long time, remove the batteries.
- Do not use old and new or different type of batteries in combination.

Batteries contain chemical substances, so they should be disposed of properly.

#### Turn ON/OFF the speaker

1. The speaker can work with either connected AC power input (AC mode)
2. AC mode, connect the AC power cable provided to a wall socket.

The speaker will be powered by AC power .

3.Press the POWER button on the top panel or on the remote control to turn it off

#### Caution:

If you do not use this unit for a while, please switch the "POWER" button to "OFF" status, and disconnect the AC power cable of this unit.

#### Charging the internal Battery

The speaker comes with a built-in rechargeable battery, follow the below steps to charge it:

1. Connect the power cable and plug to the wall socket on the rear panel.
2. There is a battery indicator light on the bottom left corner of the display panel, it will light up and slowly flash, that is being charge.
3. When the battery indicator light on the top left corner of the display pane light up, the battery is fully charged, then unplug the power cable to stop charging, both top and bottom indicator light will turn off automatically.

#### Intrenal Battery Level indicator












1. Press the volume knob to check the battery capacity of rest.
2. When the battery is running out, the battery indicator light on the bottom left corner light up and quickly flash.
3. When the speaker sound becomes abnormal, please charge the internal battery on time to keep the battery life.

**Note:** please fully charge the product when it is not going to be used for a long time and charge once a month to keep longer battery life.

## 4.Play

#### Basic key play operations

You can control play through following operations.

Key	Function
	Press this previous button for previous track when playcing music or channel - when at FM mode
	Press this PLAY/PAUSE button to play or pause the music, or search the radio program automatically at FM mode.. TWS is shared with the play button, long press the play button to enter TWS
	Press to shuffle between ROCK, FLAT, CLASSIC, JAZZ, POP modes
	Press this button to turn on the speaker,long press to turn off the speaker
	FM receive mode key, short press (1S) this key to enter the receive mode, the display will show "87.5" iconic , then enter the receive mode.
	AUX external mode key, short press (1S) this key to enter the external input mode, the display will show the "AUX" iconic , this time to enter the external input mode.
	Charging light. Charging is the red light, full is becoming green light
	Press this next button for previous track when playcing music, or channel+ when at FM mode
	U disk mode key, short press (1S) this key to enter the U disk playback mode, the display will show the "USB" iconic, this time to enter the U disk playback mode
	1) Press the key to enter the Bluetooth state, the Bluetooth iconic blinks on the display, after the Bluetooth device is successfully paired with the machine, the machine will prompt "di", at the same time, the Bluetooth iconic on the display stop blink. 2) After restarting, the machine will be default to the priority play BT state
	Press to switch between different light effects. There is total 9 modes for your selection.



1. Rotate the knob clockwise to increase the volume, rotate counterclockwise to reduce the volume. Display will show the corresponding volume value.
2. When insert the wired microphone and guitar, press this knob first to open the microphone volume control, Press one time for microphone volume( display will show "U"), Press twice times for guitar volume(display will show "GT") Press the third time for treble(display will show "T") Press the fourth time for bass(display will show "b") Press the fifth time for echo(display will show "E") Press the sixth time for reverb(display will show "R")



- Press to turn on/off "Bass Boost" effect.
- Press this key, display shows "BASS" to turn on "Bass Boost" effect ; press this key again to release the "Bass Boost" state, the display shows "OFF".
- Note: Open EQ mode, "Bass Boost" effect will be closed.



- Connect to guitar
- Insert a microphone to sing along while listening to music
- Connect to a USB storage device to playback your stored music.
- Connect to external device through Aux-in cable



- AC Power Input jack

## Play from USB

Make sure that the USB storage device contains playable audio contents for supported formats.

Insert the USB device to USB jack of the speaker.

1. Press or key to select
2. Press key to play or pause

Important:

USB socket is only for music playing, not support charging.

The MAX memory size of USB:64G

## 5.Listen to radio

### Turn on FM radio stations

#### Note

- Make sure that you have connected and fully extended the supplied FM antenna.

1. Insert the Aux Cable to the AUX jack . ( The AUX cable and FM antenna are the same cable . )
2. Press the FM button on the Top Control panel or press MODE button on the remote control to switch to FM mode
3. Press key on the Top Control panel or press SCAN key on the remote control to search the program radio stations automatically.
4. Press / to select programmed radio stations.

## 6.Connect with Bluetooth

1. Press the BT button on the Top Control panel or press MODE button on the remote control to switch to the BLUETOOTH CONNECT mode, (bLUE) will be displayed on the screen.
2. Open the Bluetooth on the external device (must have Bluetooth function), and the name " GRV-650L " will show on the device, please try to connect it.



3. Once connected, you can hear a small sound from the speaker.

4. You can use the  or  key on the Top Control panel to control the tracks of the external device.

 

Note: This speaker do not need the password.

## 7.Connect with AUX Line in

1.Press the AUX button on the Top Control panel or press the MODE button on the remote control to switch to the AUX(Line) mode, (AUX) will be displayed on the screen.

2.Connect this speaker to AUX inserting jack and the external device Earphone jack by provided AUX cable;

3.Once connected,turn on your external device music

4.You can use  or  button on the Top control panel to control the tracks of the external device.

Caution: Please turn off the unit before connect AUX cable in order to avoiding unexpected noise.

## 8.Connect with Wired Microphone/Guitar



Insert 6.35mm wired microphone to play with microphone.

Insert 6.35mm wired guitar to play with guitar.



When playing with the wired microphone/guitar, please press this knob to adjust the sound volume level of microphone/guitar.

Microphone:

- 1.When insert the wired microphone, press this knob first to open the microphone volume control or echo volume control of microphone,
- 2.Press one time for microphone volume( display will show "U"), press twice times for Guitar volume (display will show "G"), press third time is microphone treble (display will show "T" ), press fourth time is microphone bass (display will show "b" ), press fifth time is microphone Echo (display will show "E" ), press sixth time is microphone Reverb (display will show "R" ),
- 3.Then turn this volume knob for volume increase or decrease of microphone volume or microphone echo volume.

Guitar:

- 1.When insert the wired guitar, press this knob second time for guitar volume( display will show "G"),
- 2.Then turn this volume knob for volume increase or decrease of guitar volume.

### Important Notes

While using the microphone, avoid being put the microphone opposite the bass of Speaker,as they may have Whistler Noisy.

To get the best singing performance, keep the micro phone within 5-15cm of the mouth and at a 45 degree angle.

When using the microphone, always pay attention to the battery.

If the battery is low, the indicator light will come on and the performance will progressively become poor.

Caution: Please do not put the microphone directly face to the speaker, it may damage the speaker.

## 9.Product information

### Specifications

<b>Amplifier</b>	
Output power	2*15W+50W
Input Sensitivity	≥500mV
<b>FM</b>	
FM range	87.5-108MHZ
<b>Speaker</b>	
Treble Speaker	2 Inch
Bass Speaker	6.5 Inch
<b>General information</b>	
AC Power	110-220V~ 50/60HZ

### Specifications

Speaker Drive: 6.5 Inch\*1 +2 Inch\*2

Battery:Built in Li-ion 11.1V 4000mAh

Bluetooth transmission distance (without obstacle): 10M

Support MP3 format only for USB up to 64Gb

Unit Dimensions: 277\*260\*366mm

Carton Box : 330\*313\*449mm

### USB play ability information

#### Compatible USB storage devices:

- USB flash memory (USB 2.0 or USB 1.1)
- USB flash players(USB 2.0 or USB 1.1)
- Memory cards (requires an additional card reader to work with this apparatus)

#### Supported for formats:

- USB or memory file format FAT12,FAT16,FAT32(sector size:512 bytes)
- MP3 bitrate (data rate):32-320Kbps and variable bitrate
- Directory nesting up to a maximum of 8 levels
- Number of albums/folders:maximum 99
- Number of tracks/titles:maximum 999
- File name in Unicode UTF8 (maximum length:32 bytes)

#### Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3.
- Unsupported the file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.

## 10.Troubleshooting



### Warning

- Never remove the casing of this speaker.

If you encounter problems when using this speaker,check the following points before requesting service.

#### No power

- Ensure that the AC power plug of the speaker is connected properly.
- Ensure that there is power at the AC outlet.

**No sound or poor sound**

- Adjust the volume.
- Disconnect the headphones.
- Check that the speakers are connected correctly.
- Check if the stripped speaker wires are clamped.

**No response from the speaker**

- Disconnect and reconnect the AC power plug, then turn on the speaker again.

**Remote control does not work**

- Before you press any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities(+/- signs) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the speaker.

**Cannot display some files in USB device**

- The number of folders or files in the USB device has exceeded a certain limit. This phenomenon is not a malfunction.
- The formats of these files are not supported.

**USB device not supported**

- The USB device is incompatible with the unit. Try another one.

**Poor radio reception**

- Increase the distance between the speaker and your TV.
- Fully extend the FM antenna.
- Put the speaker in an open area to search for radio.

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.