

Dimension: 65 x 145 mm

OUTSIDE

• The remote will reconnect to the last device automatically when power off and re-power on.

• La télécommande se reconnectera automatiquement au dernier appareil lorsqu'elle s'éteindra et se rallumera.

• El control remoto se volverá a conectar al último dispositivo automáticamente cuando se apague y se vuelva a encender.

• Die Fernbedienung stellt beim Aus- und Wiedereinschalten automatisch die Verbindung zum letzten Gerät wieder her.

• Il telecomando si ricollegnerà automaticamente all'ultimo dispositivo quando viene spento e riacceso.

• Uzaktan kumanda, kapatılıp yeniden açıldığında son cihazı otomatik olarak yeniden bağlanacaktır.

• O controle remoto se reconectará ao último dispositivo automaticamente quando for desligado e religado.

• При выключении и повторном включении пульт автоматически подключится к последнему подключенному устройству.

• 電源をオフにしてから再度オンにすると、リモコンは最後に接続されたデバイスに自動的に再接続します。

• 전원을 끄다가 다시 켜면 리모컨이 마지막 장치에 자동으로 다시 연결됩니다.

• 關閉電源並重新打開電源後，遙控器將自動重新連接到最後一個設備。

• 关闭电源并重新打开电源后， 遙控器将自动重新连接到最后一个设备。

• Long Press (5s) the pairing button, the remote will disconnect with the last device and wait for new pairing.

• Appuyez longuement (5s) sur le bouton de couplage, la télécommande se déconnectera du dernier appareil et attendra un nouveau couplage.

• Mantenga presionado (5 s) el botón de emparejamiento, el control remoto se desconectará con el último dispositivo y esperará un nuevo emparejamiento.

• Drücken Sie die Pairing-Taste 5s lang. Die Fernbedienung trennt die Verbindung zum letzten Gerät und wartet auf eine neue Pairing-Taste.

• Premere a lungo (5 secondi) il pulsante di accoppiamento, il telecomando si disconnetterà con l'ultimo dispositivo e attenderà un nuovo accoppiamento.

• Eşleştirme düğmesine uzun basın (5s), uzaktan kumanda son cihazla bağlantısını kesecek ve yeni eşleştirmeyi bekleyecektir.

• Pressione longamente (5s) o botão de emparelhamento, o controle remoto se desconectará do último dispositivo e aguardará um novo emparelhamento.

• При длительном (5 сек) нажатии кнопки сопряжения пульт отключится от последнего устройства и будет ожидать нового сопряжения.

• ペアリングボタンを長押し(5秒)すると、リモコンは最後に接続したデバイスとの接続を切断し、新しいペアリングを待ちます。

• 페어링 버튼을 길게 누르면 (5 초) 리모컨이 마지막 장치와 연결을 끊고 새 페어링을 기다립니다.

• 長按（5s）配对按鈕，遙控器將與最後一個設備斷開連接並等待新的配对。

• 长按（5s）配对按钮，遙控器将与最后一个设备断开连接并等待新的配对。

FCC

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference and

2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This Equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1.1. Reorient or relocate the receiving antenna.

1.2. Increase the separation between the equipment and receiver.

1.3. Connect the equipment into and outlet on a circuit different from that to which the receiver is connected.

1.4. Consult the dealer or an experienced radio/TV technician for help.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

CAUTION

– Risk of explosion if the battery is replaced by an incorrect type

– disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;

– leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;

– a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

CHARGING

CHARGEMENT | CARGANDO | LADEN | RICARICA | ŞARJ ETME | CARREGANDO | ЗАРЯДКА | 充電 | 충전 | 充電 | 充電

USB-C CHARGING CABLE INCLUDED
CÂBLE DE CHARGEMENT USB-C INCLUS

S A T E C H I

R2 MULTIMEDIA REMOTE

User Manual

Manuel d'utilisateur | Manual de usuario | Bedienungsanleitung | Manuale dell'utente | Kullanım kılavuzu | Manual do usuário | Руководство пользователя | ユーザーマニュアル | 사용 설명서 | 用戶手冊 | 用戶手冊

INSIDE

FUNCTIONS

FONCTIONS | FUNCIONES | FUNKTIONEN | FUNZIONI | FUNKSIYONLAR | FUNÇÕES | ФУНКЦИИ | 機能 | 기능 | 功能 | 功能

KEY FUNCTION TABLE:

MULTIMEDIA MODE	PRESENTATION MODE
Volume + Volume + Volumen + Lautstärke + Volume + Ses + Volume + Громкость + ボリューム+ 볼륨+ 音量+ 音量+	Up Arrow Flèche vers le haut Flecha arriba Aufwärtspfeil Freccia su Yukarı ok Seta para cima Стрелка вверх 上箭头 위쪽 화살표 上箭頭 上箭头
Volume - Volume - Volumen - Lautstärke - Volume - Ses - Volume - Громкость - ボリューム- 볼륨- 音量- 音量-	Down Arrow Flèche vers le bas Flecha hacia abajo Pfeil nach unten Freccia in giù Aşağı ok Seta para baixo Стрелка вниз 下箭头 아래쪽 화살표 下箭頭 下箭头
Backward Précédent Hacia atrás Rückwärts Indietro Geriye Para trás Hassa 巻き戻し 뒤로 向后 向后	Left Arrow Flèche gauche Flecha izquierda Linker Pfeil Freccia sinistra Sol tik Seta esquerda Стрелка влево 左矢印 왼쪽 화살표 左箭頭 左箭头
Forward Suivant Avant Adelante Nach vorne İleri Frente Вперед 早送り 앞으로 向前 向前	Right Arrow Flèche droite Flecha correcta Rechter Pfeil Freccia destra Sağ ok Seta direita Стрелка вправо 右矢印 오른쪽 화살표 右箭頭 右箭头
Play/Pause Jouer pause Reproducir pausar Spiel/pause Play pausa Oynat durdur A pausa Воспроизведение / Пауза 再生一時停止 재생 / 일시 중지 播放/暫停 播放/暫停	Enter Entrer Entrar Eingeben Accedere Giriş Entrar Войти 選択 / 시작하기 回车键 回车键
Home Accueil Hogar Zuhause Casa Ana Menü Casa Casa Домой ホーム 主頁 主頁	Home Accueil Hogar Zuhause Casa Ana Menü Casa Домой ホーム 主頁 主頁
Siri	Mouse On/Off Souris activée / désactivée Ratón encendido / apagado Maus ein / aus Mouse attivato / disattivato Fare Açık / Kapat Mouse On / Off Включение / выключение мыши 마우스의 온/오프 마우스 켜기 / 끄기 鼠標開/關 鼠標開/關
Mute Muette Muda Stumm Mute Sessiz Muda Ses ayık Мьют 음소거 静音 静音	Left Click Touche Gauche Llave izquierda Linke Taste Tasto sinistro Sol Tik Clique esquerdo Левая клавиша 左キー 라이트 클릭 左鍵 左鍵
Virtual Keyboard Clavier virtuel Teclado virtual Virtuelle Tastatur Tastiera virtuale Sanal Klavye Teclado virtual Виртуальная клавиатура 仮想キーボード 가상 키보드 虚拟键盘 虚拟键盘	Right Click Touche Droite Llave correcta Richtiger Schlüssel Tasto destro Sağ Tik Clique Direito Правая клавиша 右キー 오른쪽 클릭 右鍵 右鍵

2. Status indicator

Indicateur de statut | Indicador de estado | Statusanzeige | Indicatore di stato | Durum göstergesi | Indicador de status | Индикатор состояния | 스태tusسنجشکرتار | 상태 표시기 | 狀態指示燈 | 狀態指示燈

3. Multimedia/ Presentation Mode Switch

Changement de Mode Présentation/ Multimédia

Interruptor de modo multimedia / presentación

Multimedia / Präsentationsmodusswitcher

Interruttore modalità presentazione / multimediale

Medya / Sunum Modu Anahtarı

Interruptor de modo de apresentação / multimídia

Переключатель режима мультимедиа / презентации

マルチメディア/プレゼンテーションモードスイッチ

멀티미디어 / 프레젠테이션 모드 스위치

多媒體/演示模式切換鍵 | 多媒體/演示模式切換鍵

4. USB-C Charging Port

Port de chargement USB-C | Puerto de carga USB-C | USB-C Ladeanschluss | Porta di ricarica USB-C | USB-C Şarj Portu | Porta de carregamento USB-C | Порт зарядки USB-C | USB-C充電ポート | USB-C 충전 포트 | USB-C充電端口 | USB-C充电端口

5. Bluetooth Paring Button

Bouton d'appairage Bluetooth | Botón de emparejamiento de Bluetooth | Bluetooth-Paring-Taste | Pulsante di associazione Bluetooth | Bluetooth Eşleştirme Düğmesi | Botão de pareamento Bluetooth | Кнопка сопряжения Bluetooth | Bluetooth-Паринг-Батон | 블루투스 페어링 버튼 | 藍牙配对按钮 | 藍牙配对按钮

6. Power Switch

Interrupteur de alimentation | Stromschalter | Interruttore di alimentazione | Güç düğmesi | Chave de força | Выключатель | 電源スイッチ | 전원 스위치 | 電源開關 | 電源开关

ON/OFF

ALLUMER/ÉTEINDRE | ENCENDIDO/APAGADO | EIN/AUS | ACCESO/SPENTO | AÇIK/KAPALI | LIGADO/DESLIGADO | ВКЛЮЧЕНИЕ/ВЫКЛЮЧЕНИЕ | オン/オフ | 켜기/끄기 | 開關 | 開關

PAIRING

COUPLAGE | EMPAREJAMIENTO | KOPPELN | ACCOPPIAMENTO | EŞLEŞTİRME | EMPARELHAMENTO | СОПРЯЖЕНИЕ | 페어링 | 편성 | 配对 | 配对

PKG TEAM

Designer: Jane Lin

Product: R2 Multimedia Remote

Project: Product Manual Design

Date: DEC / 08 / 20

Scale: 100%

COMMENTS

Please do not print this layer!!!

· 100% actual size

· All print should be matte except where indicated

SPECIFICATIONS

Printing Information



Paper Material + Specs

128G 双铜纸 · 哑膜

Folding

5-PANEL
ROLL FOLD

Product Info

SKU: ST-BTMR2M

FCC ID: N/A