

BUFFBEE

GS6 User Manual



If a faulty product is found when setting up
please Email us at Contact@buffhomes.com



Thank you for purchasing on **BUFFBEE!** Please read these instructions carefully and keep the user manual in safe place for future reference.

TIPS

1. Use only the supplied Original Power Adapter. Avoid excessive voltage to maintain the machine's lifespan and prevent malfunctions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:- Reorient or relocate the receiving antenna.- Increase the separation between the equipment and receiver.- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Instructional Video

Please scan the QR code here to access the instructional video of this product.



Features

- USB Rechargeable
- 25 Soothing Sounds
- Bluetooth Speaker
- Alarm Clock with 0-100% Display Brightness Adjustment
- Night Light with 0-100% Brightness Adjustment
- 30 Levels Adjustable Volume
- 8 Alarm Sounds & 9 Minutes Snooze
- 12H/24H Format
- Sleep Timer
- Memory Function

Package Include


- 1* Bluetooth Sound Machine Alarm Clock
(with built-in rechargeable battery)
- 1* 1.5m USB Charging Adapter
- 1* User Manual
- 1* Quick Guide

Power Specifications


AC, 100-240V, 50-60Hz

DC 5V-2A

 
Front View

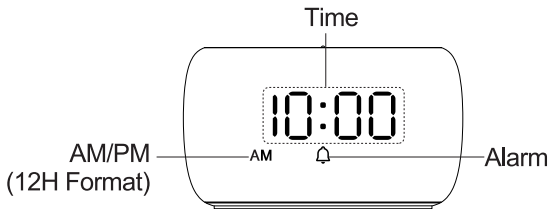

Top View

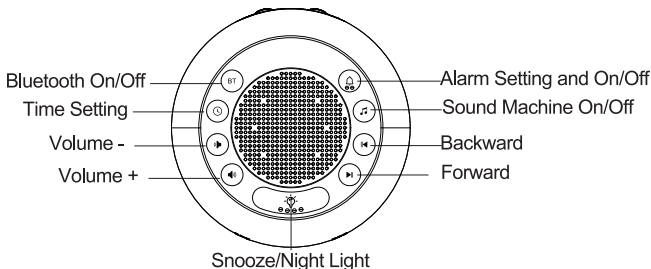 

Back View

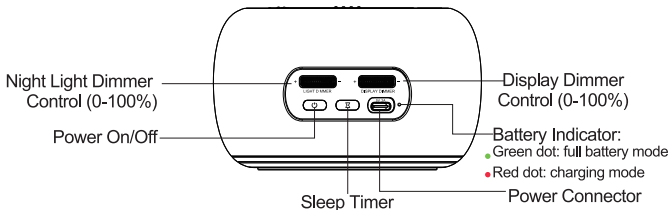 

Getting Started

There are two power supply options:

1) Plug-in Operation


Plug the adapter into a standard household outlet, you will see 12:00 AM on the display, and the clock is ready to be set.

2) Battery-Powered Operation

1. Press and hold the "⏻" button on the back for 2 seconds to turn it on/off.
2. This machine has a built-in 2500mAh rechargeable battery for cordless use, below are the estimated runtimes for each mode:

| Mode | Usage Duration | Night Light |
|------------------------------|----------------|-------------|
| Display Only | 43H | Off |
| Sound machine + Display | 20H | |
| Bluetooth Playback + Display | 10H | |
| Night Light + Display | 6H | On |

 3. If the machine does not turn on, please fully charge it before first use.

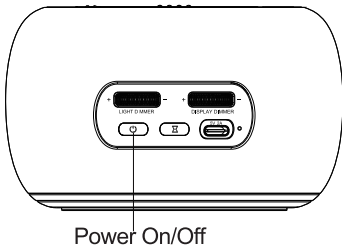


Power On/Off

Notice:


- If the display is "blank" after plugging in, please check whether the DISPLAY DIMMER on the back is at the HIGH position.
- If you press any button, all the buttons will light up and then turn off automatically after 5 seconds.

Time Setting

 1. Press the " ⌚ " button to enter HOUR setting. The HOUR digits will flash on the display. Press " ⏮ " or " ⏭ " button to advance to the correct hour.

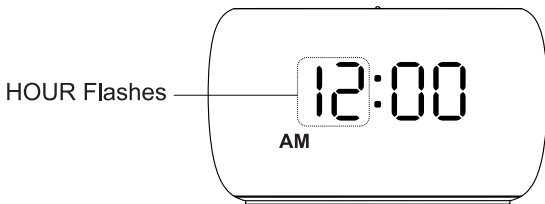

 2. Press the " ⌚ " button to confirm and enter MINUTE setting. When the MINUTE digits flash, press " ⏮ " or " ⏭ " button to advance to the correct minute.

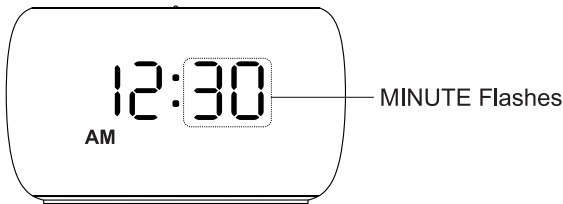




3. Press the " ⌚ " button to confirm and enter time format (12/24H) setting. Press " ⏮ " or " ⏭ " button to select time format. When using the 12-hour time format, AM/PM icon will appear on the display to suggest morning/afternoon time.
4. Press the " ⌚ " button to confirm and exit the time setting mode.




Notice:

 
The clock will exit automatically from the TIME setup mode if no action is taken within 5 seconds.
(Action refers to pressing the desired button for setup)

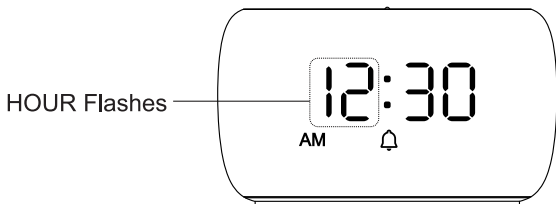


Alarm Setting

 
1. Press the "  " button to enter ALARM HOUR setting. The HOUR digits will flash on the display. Press the "  " or "  " buttons to advance to the desired hour.



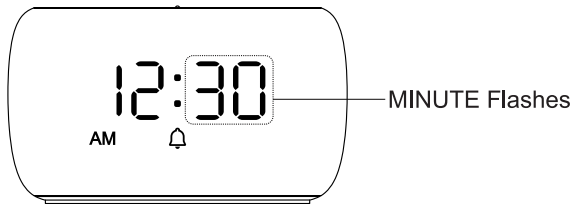

 
2. Press the "  " button to confirm and enter ALARM MINUTE setting. The MINUTE digits will flash on the display. Press the "  " or "  " buttons to advance to the desired minute.

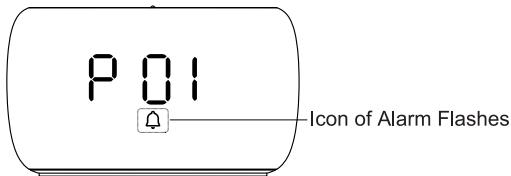


3. Press the "  " button to confirm and enter WAKE UP SOUND setting. The icon of alarm will flash on the display. Press the "  " or "  " buttons to choose from 01) Bird chirping sound, 02) Piano sound, 03) Music box, 04) Wind chimes sound, 05) Brook sound, 06) Ocean sound, 07) Buzz or, 08) Beep sound.



 4. Press the "  " or "  " button to select the volume level (0-30 level adjustable). A number will be shown on the display.

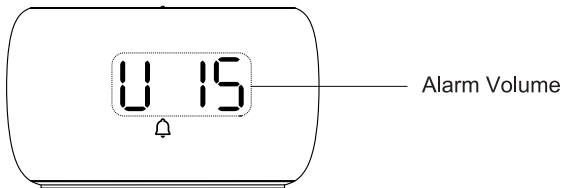




5. Press the "  " buttons to confirm and exit the alarm setting mode.

Notice:

The clock will exit automatically from the ALARM setup mode if no action is taken within 10 seconds.
(Action refers to pressing the desired button for setup)

Alarm Pause & Snooze




When the alarm goes off, you have two options:

1. Press "  " button to stop the alarm when it's ringing. Alarm will go off on the next day.
2. Press "  " button to snooze, the indicator "  " will flash on the display. The alarm will go off again 9 minutes later.

Notice:

 
The alarm will automatically turn off after 60 minutes if no action is taken.

Alarm On/Off




1. When the alarm time is set, press and hold the "  " button for 2 seconds to turn on the alarm.
2. Press and hold the "  " button for 2 seconds to completely turn off alarm and the "  " icon will disappear on the display. The alarm will NOT go off on the next day.

Bluetooth Speaker Setting

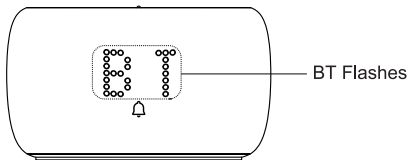1. Press the " BT " button to turn on Bluetooth, the " BT " icon will flash on the display.
2. Press and hold the " BT " button for 2 seconds to turn off Bluetooth, the " BT " icon will disappear on the display.




3. Turn on Bluetooth on your phone and connect with the device "GS6". The " BT " icon will stop flashing on the display upon connecting successfully.
4. When music is playing, press the " ⏮ " or " ⏭ " button to change the music. Press the " BT " button to pause the music and press again to play.

 
5. Press the "  " or "  " button to select the volume level. (0-30 level adjustable) A number will be shown on the display.
6. Press and hold the "  " buttons at the back of machine for 2 seconds to reset Bluetooth, enabling new connections without manual disconnection.

Notice:


1. The Bluetooth will automatically turn off if fails to connect to the phone within 5 minutes.
2. If a call comes in, the Bluetooth will stop playing the music.
3. Every time the clock is connected to the phone via Bluetooth, it will auto-sync the phone time to the alarm clock.
4. When the Bluetooth is on, the volume adjustment is only used for the Bluetooth speaker, the volume of the alarm will not be affected.
5. Please turn up the paired device for the desired volume, then adjust the volume of the Bluetooth speaker as they cannot sync the same volume level automatically.

Night Light Setting

1. Press the "  " button to turn on the night light. Then press the "  " button to change the color of the night light.

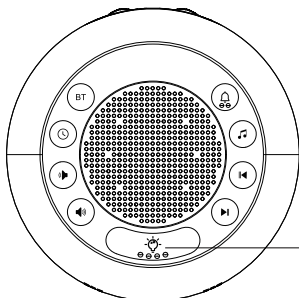

Night Light ON/OFF
& Change Color

 
2. Slide the LIGHT DIMMER Slider at the back of machine to adjust the night light brightness. (It can be adjusted from 0-100%)
3. Press and hold the "" button for 2 seconds, the night light will be turned off.

Display Brightness Setting

Slide the DISPLAY DIMMER Slider at the back of machine to adjust the display brightness. (It can be adjusted from 0-100%)

Sound Machine Setting

1. Press the " 🎵 " button, sound machine will be ON/OFF.

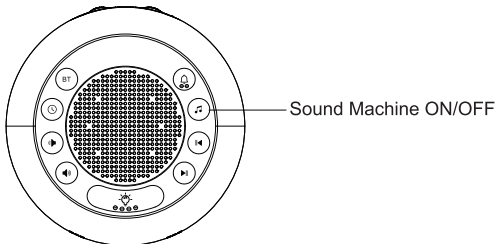

2. Press the " 🗣️ " button to decrease the volume.
Press the " 🗣️ " button to increase the volume.
(0-30 adjustable)

Notice :

When the sound machine is on, the volume adjustment is only used for sound machine, the volume of the alarm will not be affected.

Picking Your Sounds

When Sound Machine is on, press the "⏮" and "⏭" button to switch among all the 25 sounds in sequence.


Here is the list of tracks

| | | | |
|-----|---------------|-----|--------------|
| S01 | White Noise 1 | S14 | Campfire |
| S02 | White Noise 2 | S15 | Heartbeat |
| S03 | White Noise 3 | S16 | Rain |
| S04 | Pink Noise | S17 | Thunderstorm |
| S05 | Brown Noise | S18 | Brook |
| S06 | Blue Noise | S19 | Summer Night |
| S07 | Fan 1 | S20 | Train |
| S08 | Fan 2 | S21 | Forest |
| S09 | Fan 3 | S22 | Wind |
| S10 | Fan 4 | S23 | Piano Music |
| S11 | Bird Chirping | S24 | Yoga Music |
| S12 | Lullaby | S25 | Meditation |
| S13 | Ocean | | |



Sleep Timer

 You can use sleep timer to turn off night light and sound machine automatically when the preset sleep timer comes.

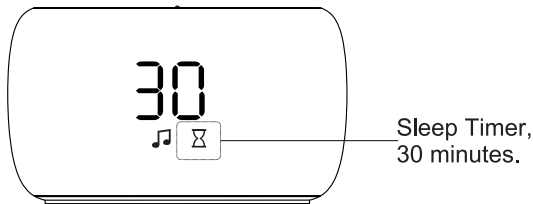1. Press repeatedly the " ⏸ " button to select the sleep timer ranging from 30, 60, 90, 120, 180 minutes to OFF. The sleep timer will be seen on display.




2. When the sleep timer is set, please wait for 5 seconds to exit from the setup. The " ⏸ " icon will be seen on the display.

3. Press repeatedly the "  " button to select "OFF" option to turn off sleep timer.
4. When sleep timer is on, press "  " button to see the sleep timer remained.

Memory Function

The memory function will save your last sound, volume, light color and brightness setting when you turn machine off. Your last setting remain saved when you turn it on next time.

Performing a Factory Reset

In standby mode, press and hold the "" button for 3.5 seconds, all settings of the machine will be reset.

Here are factory default setting:

The default sound of alarm: Bird Chirping

The default volume of alarm: Level 15

The default volume of Bluetooth: Level 16

The default color of night light: Orange

The default sound of white noise: White Noise 1

Support

The machine comes with one year warranty. If you have any issue with this machine, please contact us at **Contact@buffhomes.com**. We will address your issue within 24 hours.