


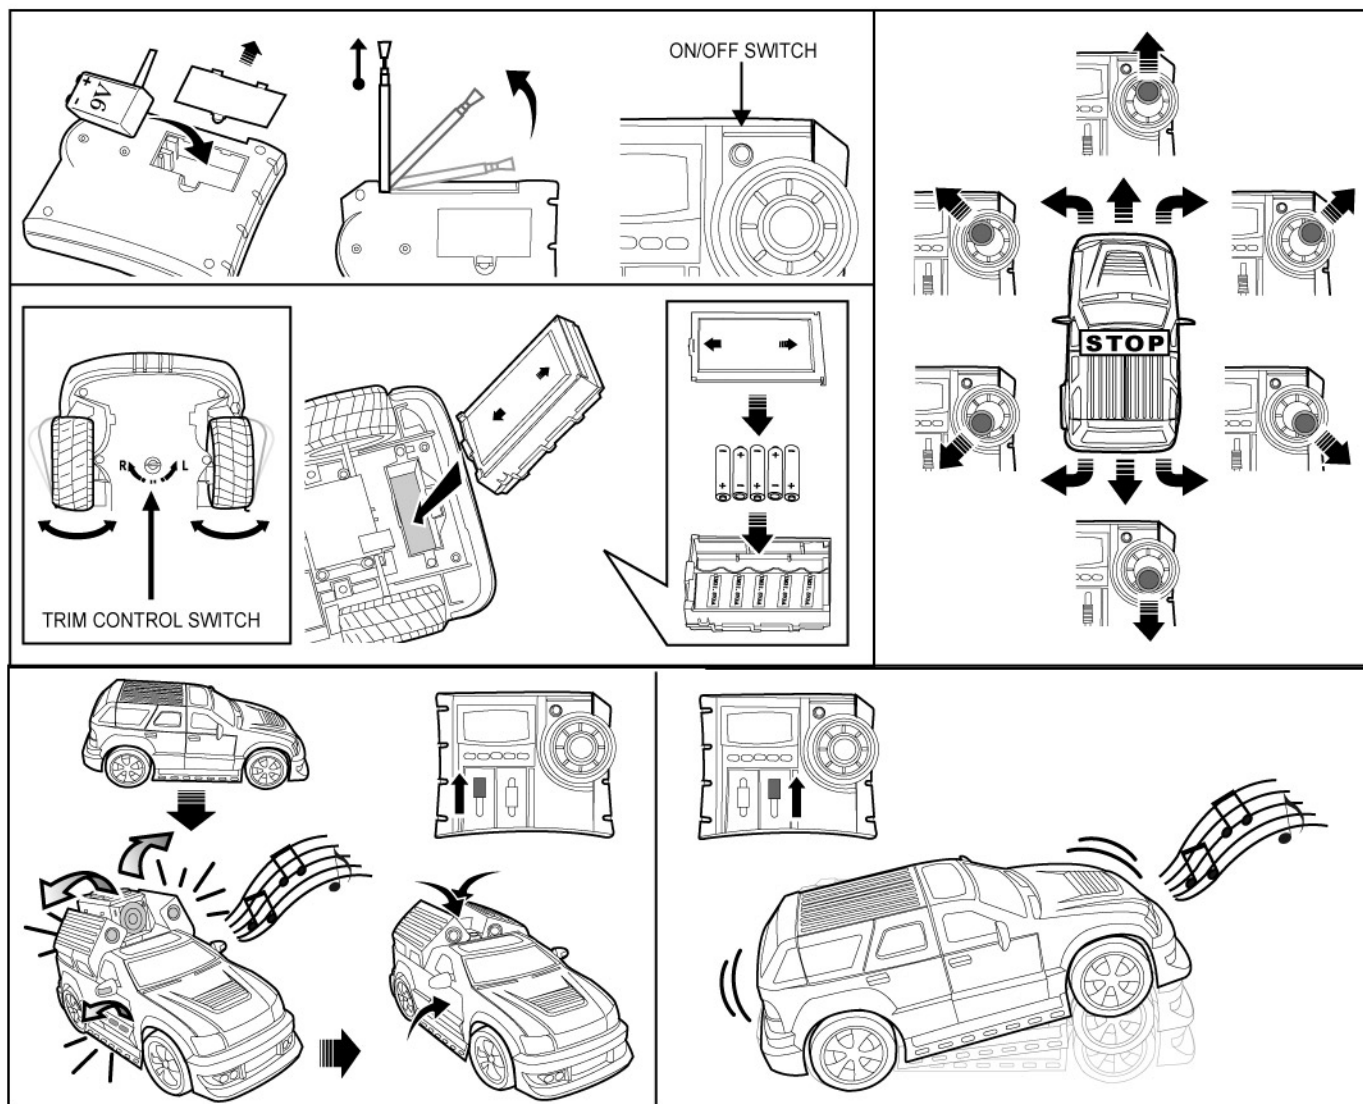

OPERATING INSTRUCTIONS

Please read carefully before starting to operate. It is recommended to operate the vehicle under adult supervision. Keep the instruction manual for future reference.

Note: - This product is for children 8 years old and up.
- Cannot play 2 vehicles together in the same frequency.

WARNING:
NOT SUITABLE FOR CHILDREN UNDER 3 YEARS DUE TO SMALL PART.

FEATURES

- Full Function- runs forward and backward, turns left and right, stops.
- Incredible bouncing action
- flashing light show
- with hip-hop music
- with working headlights when the vehicle is moving
- with working side mirrors signal lights

BATTERY REQUIREMENT (not include)

- One "9V" battery for transmitter
- 5"AA" batteries (alkaline batteries recommended) or 6 V rechargeable battery pack for vehicle

Note: batteries included are for "Try Me" function only. Detach the try-me device from the vehicle and have new batteries (not included) installed for full function play.

BATTERY INSTALLATION

(A) TRANSMITTER

- 1) Slide ON/OFF to OFF.
- 2) Grasp the tab of the battery compartment cover and lift the cover up.

- 3) Put the "9V" battery in the compartment according to the polarity symbols (+ and -) marked inside.

- 4) Replace the battery compartment cover.

(B) VEHICLE

- 1) Slide ON/OFF on the bottom of the vehicle to OFF.
- 2) Use a coin to turn the two battery door stoppers until they stop and remove the battery door.
- 3) Install the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
- 4) Replace the battery door and use a coin to turn the stoppers back to secure the compartment door.

HOW TO OPERATE:

- 1) Extend the transmitter's antenna to its full length
- 2) Slide ON/OFF on the transmitter to ON.
- 3) Slide ON/OFF on the bottom of the vehicle to ON.
- 4) Use the transmitter's levers to control the movement and direction of the vehicle.

Left Control Lever

- Push forward to go forward.
- Pull backward to go backward.
- Release to stop.

Right Control Lever (Works together with Left Control Lever)

- Push left to turn left.
- Push right to turn right.
- Release to go straight forward or backward.

Transform button A

Push the transform button A on controller to control the open top and then boom box come up flashing light show, side light bars expose with strobing lights and hip-hop music. Push again to reset.

Bounce button B

Push the jump button B on controller to control the front end of

vehicle does bouncing action together with hip-hop music. Push again to stop.

- 5) Slide ON/OFF switches on both vehicle and transmitter to OFF when you are not play with it.

BATTERY WARNING INFORMATION

- Batteries should only be replaced by an adult.
- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not dispose of batteries in fire.
- Batteries are to be removed from the toy when not in use.

TRIM CONTROL SWITCH

Trim switch is located on the chassis of vehicle between the front tires. It is used to align the wheels of your vehicle for consistent turning and drive. Turn the switch clockwise and anti-clockwise until desired alignment is reached.

THE FCC WANTS YOU TO KNOW:

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.