2.4G Remote Control Off-Road Car User Manual

Know your remote control



AC or naveling bodward, two control lever pushed floatmand

2. Installing batteries and pairing the



Pairing Instructions: um on the remote control At this time, the light will fresh. Turn on the RC car. The remote light will stay on, indicating that the pairing is complete.

The metable upon (Sutterior not inchange)

3. The Installation of the RC car battery



RC oar (bettery included).

Accessories: USB charping cable Rechargeable battery (included) Cu+ise:

Note:

Remove the battery if you do not use it for a long time

Attention for Charging via USB

- Attention for Charging via USB

 1. Bittlery should be tall, charged for the first time using. The battery will soll edicatings when not in case. If not in case for a long three years of soll edicating when he had not expended to the power to prevent over discharge damage. Overcharging out shorten battery till.

 2. Please regulater check the core, gaug, casting and other accessories and stop saving before being required if any damages are found.

 2. Please regulater check the core, gaug, casting and other accessories and stop saving before being required if any damages are found.

 2. On not connect the time with the grower that is not recommended. Charging operations. Commod the USB simulat sharping ceities with this simple liability.

 4. Please use appropriate advance to stoping input 106-2474-50404-5040-60404.


 5. Charging notice. To charge the battery, senses comment the battery with smart USB charging cable, which has access to power medie with USB interface, auch are deletter, leptor, mobile power, USB societ Alborratively, you can use a USB adopter to connect the battery be sower for charging.

 7. Please remove the battery to the remote control truck and the remote controller if they are and separated to use for a long period of time.

 8. When charging the USB light is steady on. When fully charged, the light goes of.

Battery Storage

Driving with the remote control

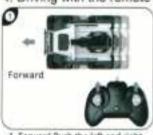

1. Forward Push the left and right control levers upward, the RC car moves forward



2. Backward Push the left and right control levers downward, the RC car backward



Tum-right

3. Right turn Push the right control



4. Left turn Push the left control lever upward, the RC car right turn lever upward, the RC car left turn

"Please read the manual carefully before operation and keep it for future reference.



FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.