# AUDIOVOX CDM-8425PTT

# Digital CDMA2000 1X Handheld Portable Telephone

In today's fast paced world, it has become a necessity to have access to real time information.

Your communications tools must provide you with this access from anywhere at anytime. With that in mind, Audiovox developed the CDM-8425PTT, a bar type handset with 4096 colors STN display.

This 1X digital handset enables carriers supporting 1X technology to provide consumers with access to high speed connectivity for web browsing, email and mobile e-commerce. Operating on the 800 MHz AMPS/CDMA and 1900 MHz PCS frequencies, the CDM-8425PTT allows for seamless nationwide coverage as well as offering state-of-the-art, user-friendly features. Voice activated dialing and 2-way speaker phone are great for enhancing hands-free use of this phone. T9™ Text Input, vibrating alert and a 7-line LCD display make the CDM-8425PTT easier to use.

Your new CDM-8425PTT provides you with something only an Audiovox phone can: the proven reliability that has made us a leading wireless handset provider. Please take a few moments to read the following pages of the owner's manual. It will help you make the most efficient use of this valuable communications tool.

Preface

# **TABLE OF CONTENTS**

CHAPTER 1 BEFORE USING YOUR PHONE	7
Inside the Package	8
Handset Description	<u>g</u>
Function Keys	
Display Indicators	
Using the Battery	13
Installing the Battery	
Removing the Battery	13
Charging the Battery	14
Power Connection	14
Battery Charging Time	15
Battery Talk & Standby Times	
Battery Information	16
CHAPTER 2 BASIC OPERATION	
Using the Phone	18
Turning the Phone On	
Turning the Phone Off	
Using the Menu	
Menu Summary	20
Basic Functions	
Making a Call	
Pause Feature	
Speaker phone	
Answering a Call	
Caller ID Function Call Waiting Function	
Voice Memo Display	
Etiquette Mode	
Adjusting Volume	
Keyguard	
Functions During a Call	21 28
Messaging	
Mute (Unmute)	
Scratchpad	
Send My Phone #	
My Profile	29
,	

# **TABLE OF CONTENTS**

Voice Privacy	29
Location	29
Speaker Phone Mode	
·	
CHAPTER 3 MEMORY FUNCTION	31
Storing Phone Numbers	32
Text Input Methods	33
Entering Characters	
Alpha Mode [ABC]	
T9™ Predictive Text Mode [T9™ABC]	34
Numeric Mode [123]	
Symbol Mode [SYM]	
Speed Dialing	
One-Touch/Two-Touch Dialing	
Phone Book	
Find	
Add New Entry	
Edit Existing Entry	
Edit Group	
Edit SMS Group	
Speed Dial	
My Profile	
Recent Calls	
Dialed	
Received	
Missed	
Call Timers	
	_
CHAPTER 4 SETTINGS	53
Settings	
Sounds	
Display	
System	
Location	
Other	

# **TABLE OF CONTENTS**

VS Menu	
Voice Memo	
Call Answer	72
Voice Command	73
Voice Dial	75
Voice Alert	
Voice Setting	78
VR Mode	80
Name	80
Dial	81
Redial	
Voice Memo	
Phone Book	82
Cancel	82
PTT	
PTT Contacts	83
CHAPTER 5 SECURITY FEATURES	
Security Features	86
Security	86
CHAPTER 6 SUPPLEMENTARY FUNCTIONS	
Schedule	
Event	
Alarm	
Calculator	
World Clock	
Stop Watch	98
CHAPTER 7 VOICE MAIL AND TEXT MESSAGES	
Two-Way SMS	
Message Indicators	
Received Message Notification	
Checking Messages	101
Checking Received Voice Mail Message	101
Checking Received Text Message	101

# **TABLE OF CONTENTS**

Sending Text Messages	102
Sending New Text Messages	
Inbox	105
Inbox Menu	105
Outbox	108
Outbox Menu	
Saved	110
My Object	111
Erase All	112
Settings	113
Settings Menu	113
-	
<b>CHAPTER 8 MAKING AN EMERGENCY CALL</b>	117
Emergency Calling	118
911 in Lock Mode	
911 Using Any Available System	118
<b>CHAPTER 9 GET IT NOW &amp; INTERNET</b>	119
Get It Now	
Downloading Applications	
Open an Application	121
View Information on Memory and Log	121
Disable and Restore an Application	122
Remove an Application	122
Start Internet Browser	124
Access the Internet	
Browser Menu	125
CHAPTER 10 DATA SERVICE	
Data SVC	130
Connection	130
CHAPTER 11 SAFETY INFORMATION	
Safety Information for Wireless Handheld Phones	
Exposure to Radio Frequency Signals	132
Antenna Care	

# **TABLE OF CONTENTS**

Phone Operation	133
Driving Safety	
Electronic Devices	134
Other Safety Guidelines	136
Precautions and Warnings	
Operating Procedures	
Safety Information for FCC RF Exposure	
Caution	139
SAR Information	140
FDA Consumer Update	142
CHAPTER 12 WARRANTY	15 <sup>-</sup>
Protect Your Warranty	152
12 Month Limited Warranty	153

"Licensed by QUALCOMM Incorporated under one or more of the following Patents: U.S.Patent No. 4,901,307 U.S.Patent No. 5,056,109 U.S.Patent No. 5,099,204 U.S. Patent No. 5,101,501 U.S. Patent No. 5,103,459 U.S. Patent No. 5,107,225 U.S.Patent No. 5,109,390."



# BEFORE USING YOUR PHONE

Please read and fully understand this manual before using your phone.

This chapter addresses your phone, its keys and display icons, and covers the charging and proper use of the battery.

- Inside the Package
- Handset Description
- Function Keys
- Display Indicators
- Using the Battery
- Charging the Battery
- Battery Information

# **INSIDE THE PACKAGE**

Thank you for purchasing the CDM-8425PTT wireless handset. The phone's giftbox contains all of the items listed below.



NOTE: Immediately report any product defects or missing items to the place of purchase.

# HANDSET DESCRIPTION

This phone is a CDMA2000 1X digital phone with data and web browsing capabilities. The CDM-8425PTT weighs 3.1 oz. and the dimensions are 3.3" x 1.6" x 9".



Page 8 - Chapter 1 Chapter 1 Chapter 1

# **FUNCTION KEYS**



SEND KEY: Press to make or receive a call. Press and hold to view most recently dialed numbers.



END KEY: Press to terminate a call or to return to the idle screen. Press and hold to turn the phone on/off.



#### NAVIGATION KEY:

In Idle Mode-Press up to access the phone book, down to access the messaging menu, right for Get It Now and left for Mobile Web.



SOFT KEYS: (Soft 1) Press to access the menu or function displayed on the bottom line. (Soft 2) Press to enter the Find feature of the phone book, or to return to the previous page. Press to clear a digit from the display.



LOCK KEY: Press and hold to enter Keyguard Mode.



ETIQUETTE MODE: Press and hold to enter Etiquette (vibrate) Mode.

# **DISPLAY INDICATORS**

### إرابا Signal Strength

Indicates current signal strength.
The more lines, the stronger the signal.

### ■ Roaming

Phone is outside of its home area.

### Service Indicator

indicates call is in progress, indicates the phone is in standby mode, and indicates the phone cannot receive a signal from the system.

#### Message

A text or voice mail message is waiting.



### Digital Mode

Phone is operating in digital mode.

### **Battery**

Battery charging level—the more blocks, the stronger the charge.

### **Mute**

Phone is mute during a call.

### Emergency call

Blinks when an emergency call is in progress.

### 1)

Phone is in the "1x" service area.

Phone is in the progress of "UP Browser".

Chapter 1 - Page 11

# **DISPLAY INDICATORS**



#### Voice Memo

New voice memo has been made.



#### **Answering machine**

Phone is in answering machine mode.



#### **Etiquette Mode**

Phone will vibrate when call is received.



#### Schedule

 
Appears when either an event or an alarm is set.

 
### **Ring Mode**

Appears when a ringer is set as a ringer mode.



#### **GPS Icon**







#### **Dormant**

Indicates the phone is in disconnection condition while on "Server Connection".



### **Data Only**

Phone can receive an async call as a voice call.



 
### **Fax Only**

Phone can receive a fax call as a voice call.

# **USING THE BATTERY**


### **INSTALLING THE BATTERY**

- Insert the bottom of battery into groove at bottom of the handset.
- 2. Press in the top of the battery until it clicks.



### **REMOVING THE BATTERY**

1. Push the tab with one hand and lift the top of the battery to separate.

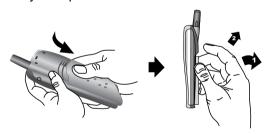


NOTE: If the battery is not correctly placed in the battery compartment, the handset will not turn on and/or the battery may detach during use.

Page 12 - Chapter 1 Chapter 1 Chapter 1

# CHARGING THE BATTERY

### **POWER CONNECTION**

- 1. Plug the AC charger into a standard outlet.
- 2. Plug the other end of the AC charger into the bottom of your phone. The battery must be installed on to the phone.

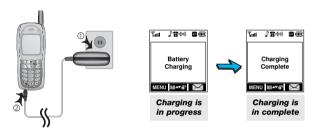

#### NOTE: 1. When you charge the battery with the phone power off, you will see a charging status screen. You can not operate the phone until it is powered on.

- 2. The battery is not charged at the time of purchase.
- 3. Fully charge the battery before use.
- 4. If you use a data cable while you are charging the battery: After using the cable, disconnect the AC charger first, then the data cable.



# **CHARGING THE BATTERY**

- NOTE: 1. It is more efficient to charge the battery with the handset powered off.
  - 2. The battery must be connected to the phone in order to charge it.
  - 3. Battery operating time gradually decreases over
  - 4. If the battery fails to perform normally, you may need to replace the battery.

### **BATTERY CHARGING TIME**

Battery Type	BTR - 8400
Charging Time	200 minutes

Charging time applies only when your phone is turned off. Charging time may vary if your phone is turned on.

### **BATTERY TALK & STANDBY TIMES**

		Standard Battery (900mAh)
Talk Time (min)	Digital	150
	Analog	103
Standby Time (hrs)	Digital	103
	Analog	25

These times are for a new battery. Talk and standby time may decrease over time.

Page 14 - Chapter 1 Chapter 1 - Page 15

# **BATTERY INFORMATION**

Use only manufacturer approved batteries.

Never use a damaged or worn out battery.

Use the battery only for its intended purpose.

Never expose the battery terminals to any other metal object. This can short circuit the battery.

Avoid exposure to temperature extremes. A phone with a hot or cold battery may temporarily not work (or charge), even if the battery is fully charged. Always allow it to cool down or warm up first and keep the battery between 41°F and 95°F (5°C and 35°C).

When not in use, store the battery uncharged in a cool, dark, dry place.


The battery is a self-contained unit. Do not attempt to open its case.

Battery operating time gradually decreases. You may need to buy a new battery.

Never dispose of a battery in a fire!

Dispose of used batteries in accordance with local regulations.

Recycle!

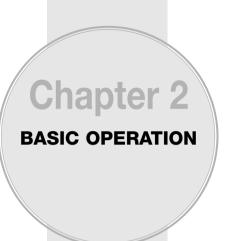

This chapter addresses the phone's basic functions including menus, volume levels, and call features.

- Using the Phone
- Using the Menu
- Menu Summary
- Basic Functions
- Functions During a Call

# **USING THE PHONE**

### **TURNING THE PHONE ON**

- 1. Press and hold , until your "Power On" logo appears and the melody begins to play.
  - To select a logo, refer to page 59 for more details.
  - If "PASSWORD" appears, the phone is locked.
     To unlock, enter your 4-digit password.

NOTE: The default password is the last 4 digits of your phone number.

### **TURNING THE PHONE OFF**

1. Press and hold for until "Power Off" animation appears.

NOTE: 1. Immediately change or recharge the battery when "Low Battery Warning Power Off" appears on the display. Memory may possibly be damaged if the phone turns off due to the battery completely draining.

Turn the phone off before removing or replacing the battery. If the phone is on, data may be lost.

# **USING THE MENU**

#### **USING THE MENU**

- 1. To access the menu from the idle screen, press [MENU].
  - When the key guard is activated, press 1, 2, 3 to unlock the key guard.
- 2. Use the Navigation Key to scroll through the menu.
  - To search through the menu in numerical order, press down or to the right.
- 3. To return to the previous page, press [CLR]. To exit the current menu and return to the idle screen, press .
- 4. To enter a function press or press the function's assigned number.

#### Hotkey

From the idle screen, move the Navigation Key as follows to access these functions:

Upward movement : Phone Book
Downward movement : Messaging
Rightward movement : Get It Now
Leftward movement : Mobile Web

Page 18 - Chapter 2 Chapter 2 Chapter 2

# **MENU SUMMARY**

# **PHONE BOOK**

- → 1 : Find
- 1: By Name 2 : By Number
- 3 : By Group
- 2: Add New Entry
- 3 : Edit Existing Éntry
- 4 : Edit Group
- 1: Add New Group 2 : Change Group Name 3 : Clear Group
- 5 : Edit SMS Group
- 1 : Add New Group 2 : Change Group Name 3 : Edit Existing Group
  - 4 : Clear Group
- 6 : Speed Dial 7 : My Profile

### RECENT **CALLS**

- 1 : Dialed 2: Received
- 3: Missed
- 4: Call Timers 1 : Last Call
  - 2: All Calls 3: Home Calls
  - 4 : Roam Calls
  - 5: Cumulative Calls

# **MESSAGING**

- 1: Voice
- 2: Send New
- 3: Inbox 4: Outbox
- 5 : Saved
- 6: My Object
- 7 : Erase All
  - 2 : Outbox 3 : Saved
    - 4: My Object
- 8: Settings 1 : Save Sent Msg 2 : Default CallBack
  - 3: Alert
  - 4 : Auto Erase

1 : Inbox

- 5 : Entry Mode
- 6 : Block or Unblock
- 7 : Signature
- 8 : Direct View

# **MENU SUMMARY**

### GET IT NOW

# **MOBILE WEB**

SETTINGS

1: Sounds

2: Display

- 1 : Ringer Type 2 : Ringer Mode
- 3 : Volume
- 4 : Alert
- 5: Roam Ringer
- 6 : Tone Length
- 7 : Etiquette Mode
- 1 : Animation Setting
- 2 : Main Display Setting
- 3 : LCD Setting
- 4 : Graphic Setting
- 3 : Security
- 1 : Restrict 2 : Special #'s
- 3 : Clear Phone Book
- 4 : Reset Phone
- 5 : Change Password
- 1 : Set Mode
- 2: Force Analog
- 3 : Nam Setting
- 4: PRL ID
- 5: Location
- 6: Others

4: System

- 1 : Answer Mode
- 2 : Auto Retry
- 3 : Auto Answer
- 4 : Voice Privacy
- 5 : Key Guard
- 6 : Language
- 7: Web Idle Time
- 8 : S/W Version
- 9:TTY Mode
- 0 : Speaker Mode





- 1 : Schedule
- 1 : Event 2:Alarm
- 2 : Calculator
- 3: World Clock
- 4 : Stopwatch

Page 20 - Chapter 2 Chapter 2 - Page 21

# **MENU SUMMARY**

# DATA SVC. 🖳

1 : Connection

# VOICE SVC.

➤ 1: Voice Memo

2: Call Answer 1:0n/0ff

2 : Inbox 3 : Call Speaker

4: Wait Time 3: Voice Command 1: Yes/No

2 : Wake-Up

3 : Top Level

4 : Digit Dial 4: Voice Dial 1 : List

2 : Add 3 : Clear All

5: Voice Alert

1 : On/Off 2 : Record

6: Voice Setting

3 : Play 4 : Clear 1 : Untrain All

2 : Prompt Mode

3 : Digit Mode

4: HFK Mode

### PTT



# **BASIC FUNCTIONS**

### **MAKING A CALL**

- 1. Enter a phone number.
  - To modify the phone number you have entered :
    - To erase one digit at a time, press 🗇 .
- 2. Press 🕥 .

The indicator, 

, appears on the display.

- If "CALL FAILED" appears on the display or the line is busy, press or 5.
- If you activate the "AUTO RETRY" function, the phone will automatically retry for the number of times you have selected. (refer to page 66)
- If the phone number you're calling is stored in the phone book, the name and number will appear when the call is placed.
- To end a call, press . "Press (OK) to save this number" will appear. (Refer to page 32 for more details about storing a phone number.)

NOTE: Please refer to page 75 (Voice Service) for more details on using Voice Activated Dialing to place a call.

Page 22 - Chapter 2 Chapter 2 Chapter 2

# **BASIC FUNCTIONS**

### **PAUSE FEATURE**

You can dial or save a phone number with pauses for use in the automated systems where you need to enter a credit card number, a PIN number, and so on. This feature will be convenient when you are linked to ARS. (Advanced Record System).

- 1. To insert a pause, enter the phone number then press [PSE].
- 2. Press to dial or [STO] to store.

  Please refer to page 32 for more details about storing a phone number.

### **SPEAKER PHONE**

- 2. The phone returns to normal (Speaker phone off) after ending or call or when the phone is turned off and back on.

# **BASIC FUNCTIONS**

### **ANSWERING A CALL**

- To answer a call, press any key except Clear, End or the Navigation Key.
  - In the Settings menu, you can select either "Any Key" or "Send Key" to answer a call. If "Send Key" is selected, the phone can only be answered by pressing .

    See page 66 for more information.
- 2. To end the call, press 🧀.

OTE: In Auto Answer Mode, a call is automatically answered after a preset number of ring tones. See page 67 for more details.

#### CALLER ID FUNCTION

Identifies a caller by displaying that person's phone number. If the caller's name and number are stored in your phone book, the name and number will be displayed.

NOTE: The caller ID is stored in the call history.

Caller ID is a system dependent feature.

Please contact your service provider for details.

Page 24 - Chapter 2 Chapter 2 Chapter 2

# **BASIC FUNCTIONS**

### **CALL WAITING FUNCTION**

Notifies you of another incoming call when you are on the phone by sounding a beep and displaying the caller's phone number on the screen.

- 1. To answer another call while on the phone, press 🔊 . This places the first call on hold.
- 2. To switch back to the first caller, press again.

#### **VOICE MEMO DISPLAY**

Displays the number of voice memos recorded in the answering machine.

1. To play the recorded voice memos, press (PLAY).

### **ETIQUETTE MODE**

Mutes key tones and activates the vibration mode to alert you of an incoming call or message.

1. To turn etiquette mode on/off, press and hold 🐀.

### **BASIC FUNCTIONS**

### **ADJUSTING VOLUME**

Adjusts the volume in two ways: by using the volume control keys on the side of the handset, or by using the menu.

- 1. Press [MENU] ( 3 and select one of the following.
- Ringer: Controls the ringer volume.
- Key: Controls the keypad tone volume.
- Voice Call: Controls the Speaker & earpiece volume.
- Speaker phone : Controls the speaker & earpiece volume in speaker phone mode.
- 2. Adjust volume and press (OK) to save it.

NOTE: Move the Navigation Key upward or downward to adjust volume of earpiece during a call.

### **KEYGUARD**

Locks phone and prevents unauthorized use. Phone can only be used after inputting the password.

- 1. To lock the phone, press and hold #-9.
- 2. To unlock the phone, input the password. The default password is 1 2 3.

Page 26 - Chapter 2 Chapter 2 Chapter 2

# **FUNCTIONS DURING A CALL**

To display menu options during a call, press  $\bigcirc$ . These menu items are available while you are on a call.

### **MESSAGING**

Enables you to send a message (SMS) during a call.

1. Press 🔝 [MENU] 🖭 .

### **MUTE (UNMUTE)**

Mutes the microphone while you are on a call so the other party cannot hear you if you speak.

- 1. Press 🟹 [MENU] 💁 .
  - To deactivate, press [MENU] (2ASC).
  - The phone will automatically un-mute in Emergency Call or Callback mode.

### **SCRATCHPAD**

Stores a new phone number during a call without the calling party hearing the keypad tones.

- 1. Press 🖂 [MENU] 🐠 .
- 2. Enter a phone number, press then save the phone number in the phone book.
  - Press 🤝 [MENU] 🐠 to deactivate it.

# **FUNCTIONS DURING A CALL**

### **SEND MY PHONE #**

Enables your phone number to be automatically transmitted to a pager.
(Dependent on pager service.)

1. To transmit your phone number during a call, press  $\bigcirc$  [MENU] and  $\bigcirc$  .

### **MY PROFILE**

Enables you to review and edit your profile entered through the phone book entry.
Please see page 45 for more details.

1. Press [MENU] 5 ...

### **VOICE PRIVACY**

Enhances voice privacy during a call.

1. Press [MENU] 6 .

### **LOCATION**

Enables the network to locate your current location through Global Positioning System (GPS).

1. Press [MENU] Tous .


Page 28 - Chapter 2 Chapter 2 Chapter 2

# **FUNCTIONS DURING A CALL**

### **SPEAKER PHONE MODE**

Activates the speaker phone when you are on a call. The phone returns to normal (speaker phone off) after ending or call or when the phone is turned off and back on.

1. Press 💟 [MENU] 🐠 .

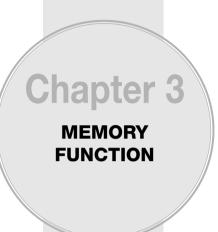

This chapter addresses numerous functions including saving phone numbers to the internal phone book, entering text and accessing call logs.

- Storing Phone Numbers
- Text Input Methods
- Speed Dialing
- Phone Book
- Recent Calls

Page 30 - Chapter 2

# STORING PHONE NUMBERS

The phone book stores up to 300 entries, each with 5 numbers.

- 2. Choose Add New Entry or Add Existing Entry. Press (OK) to select.
- 3. The Phone # will appear next to a list of icons. The name of the icon is displayed above the list. Use the Navigation Key to choose the type of # you're adding, as indicated by the icon. Press (OK) to select.
- - Group Family, Friends, Work, Etc
  - Voice dial Home, Mobile, Office, Unassigned
  - Set Secret Yes, No
- 5. Use the Navigation Key to scroll through more options for the entry (VAD, secret, etc.).
  - The other fields are set to Numeric mode as a default.

NOTE: Alternative way to save a phone number to the phone book is listed on page 40 "Add New Entry".

6. To store the entry, press "New entry is saved" will be displayed.

### **TEXT INPUT METHODS**

### **ENTERING CHARACTERS**

For convenient entry of memory location names and text messages, your phone offers several text input methods:

Alpha mode: Enters words by repeatedly tapping the corresponding key until the desired character is displayed.

**T9™ mode :** Tap each corresponding key only once and the phone predicts the word you are entering.

**Numeric mode :** Only enters numbers. **Symbol mode :** Enters symbols like @, #, %.

### **ALPHA MODE [ABC]**

Use the digit keys to enter letters, numbers and characters. Enter letters using the keypad as follows:

Key Pad	1 Repetition	2 Repetitions	3 Repetitions	4 Repetitions	5 Repetitions
1	1		@	-	,
2ABC	Α	В	С	2	
3DEF	D	E	F	3	
4GHI	G	Н	1	4	
5JKL	J	K	L	5	
6MNO	М	N	0	6	
7PQRS	Р	Q	R	S	7
8TUV	Т	U	V	8	
9WXYZ	W	Х	Y	Z	9

To change the input mode, press [MODE].

- To enter a space, press (#-9). After two seconds, the cursor will automatically move to the next column.
- Repeat until letters are entered.
   There is a 16-letter limit.
- To delete one digit, press . To delete the entire entry, press and hold .
- ullet To change from lowercase to uppercase, press  ${\buildrel {\buildrel {\uildrel {\ui$

Page 32 - Chapter 3 Chapter 3 Chapter 3 - Page 33

# **TEXT INPUT METHODS**

### T9™ PREDICTIVE TEXT MODE [T9™ABC]

To choose T9™ mode, press ◯ [MODE] then choose [T9™ABC]. This mode predicts the words you are entering using a built-in dictionary. With T9™ predictive text input, you press each key only once for each letter. The chart below outlines how to use T9™ text input.

KEY	FUNCTION
© Case	Press to change mode. [T9Abc][Abc][123][Symbol mode]
ত্ত্ৰ Next	Press to view the next matching word if the highlighted word is not the word you intended.
Space	Press to accept a word and add a space.
₩og Shift	Press to select a letter case of the standard text input or T9 text input mode. [Abc], [ABC], and [abc] indicate the standard text input. [T9Abc], [T9ABC], and [T9abc] indicate the predictive text input.
Clear	Press to delete a character to the left of the cursor.
Sto	Store the letters and numbers you enter.

# **TEXT INPUT METHODS**

- 1. Press each key once for each letter of the word you are writing.
  - To write **John** with the English dictionary selected:
    - 1. Press 5 once (for k)
    - 2. Press 6 once (for km)
    - 3. Press 4 once (for log)
    - 4. Press 6 once (for john)

#### NOTE: The display shows for each key pressed.

- 2. Press #= until the correct word is displayed.
- 3. To select the correct word and press  $\bigcirc$  .

Page 34 - Chapter 3 Chapter 3 Chapter 3

# **TEXT INPUT METHODS**

### **NUMERIC MODE [123]**

Numeric mode allows you to add a number to your entry/message. To select numeric mode, press , [MODE] then select [123].

### SYMBOL MODE [SYM]

Select symbol mode allows you to add various symbols to your entry. Whether you are adding an e-mail address to your phone book or sending an expressive message, symbols make these entries easier.

To select symbol mode, press  $\bigcirc$  [MODE] then choose [SYM].

The symbols will appear on the display.

The corresponding key number for that symbol will appear as well. You can press the key to select the symbol or use the Navigation key to highlight the symbol, then press .

To move to the next screen of symbols press

# **SPEED DIALING**

### **ONE-TOUCH/TWO-TOUCH DIALING**

Ideal for frequently dialed numbers, this feature allows phone book entries to be dialed via the keypad with only one or two key presses.

#### **ONE-TOUCH DIALING:**

1-9 : Press the corresponding memory number and hold for more than 1 second.

#### **TWO-TOUCH DIALING:**

- 10-20: Press the first digit and second digits of the memory number short and long respectively.
- If no phone number is stored in the location entered, "There is no number" will appear on the screen.
- If a phone number is stored in secret, you must enter the password to make a call.

NOTE: See page 44 for information about saving a phone number in a speed dial location.

Page 36 - Chapter 3 Chapter 3 Chapter 3

Stores up to 300 entries, each of which can be assigned to a group like Personal, Business, etc. Entries can be retrieved by name, phone number or group.

#### **FIND**

Retrieves an entry by group, name, or number.

- 1. Press [FIND].
- 2. All entries will appear in alphabetical order. "Search Name:" will appear at the top of the list.
- 3. Type in a name or character string and press 

  .
- 4. All entries will be displayed.

### **BY NAME**

- 1. Press [MENU] ( ).
- 2. Enter a name or its character string and press to display the names in alphabetical order. Please refer to page 33 about using the Alpha Editor.
- If there is no match, "Cannot Find Name" will appear.
- 3. All matching entries will be displayed. Select an entry and either delete it by pressing [DEL] or view it by pressing .
  - If the entry is set to secret, you will be asked for your password.
- 4. To call the selected number, press 🕥 .

# **PHONE BOOK**

#### **BY NUMBER**

- 2. To search through the menu, enter a part of the phone number and press 

  .
  - If there is no match, "Cannot Find Name" will appear.
- 3. All matching entries will be displayed. Select an entry and either delete it by pressing [DEL] or view it by pressing ①.
  - If the entry is set to secret, you will be asked for your password.
- 4. To call the selected number, press .

#### **BY GROUP**

- 1. Press [MENU] (1.-) (3°F).
- 2. Select one of the following groups (Personal, Business, Etc., All) with 

  .
- 3. All group entries will be displayed. Select an entry and either delete it by pressing  $\bigcirc$  [DEL] or view it by  $\bigcirc$  .
- You are to be asked about "Password" when the entry is set secret.
- 4. To call a selected number, press 🔊 .

Page 38 - Chapter 3 Chapter 3 - Page 39

### **ADD NEW ENTRY**

Adds a new entry to the phone book.

- 1. To add a new entry to the phone book, press [MENU] (200).
- 2. Enter a name, then press 

  .
- 3. Press the Navigation Key until the phone number type is selected, then press [EDIT].
- 4. Enter the phone number. Press 

  .
- 5. To save the entry, press **(□)** [STO]. To return to the previous page, press **(□)** [CLR].

### **EDIT EXISTING ENTRY**

Edits an existing entry in the phone book.

- 1. To edit a existing entry, press  $\bigcirc$  [MENU]  $\bigcirc$  3  $\bigcirc$  .
- 2. Use the Navigation Key to select a group.
- Personal, Business, Etc., All.
- 3. Select an entry and press  $\bigcirc$  to view and edit the entry, or  $\bigcirc$  [DEL] to delete it.

# **PHONE BOOK**

### **EDIT GROUP**

Adds, changes and deletes groups.

#### **ADD NEW GROUP**

- 1. To add a new group, press  $\bigcirc$  [MENU]  $\bigcirc$   $\bigcirc$   $\bigcirc$  . A maximum of seven groups is allowed.
- 2. Input a new group name.
- 3. Press (STO) to save it.

#### **CHANGE GROUP NAME**

- 1. To change a new group, press  $\bigcirc$  [MENU]  $\bigcirc$  4041 2.00.
- 2. Select an existing group name with the Navigation key.
- 3. Input a new name.
- 4. Press (STO) to save it.

Page 40 - Chapter 3 Chapter 3 Chapter 3

### **CLEAR GROUP**

- 1. To delete an existing group, press  $\bigcirc$  [MENU]  $\bigcirc$  404  $\bigcirc$  305.
- 2. Select the group to be deleted and press 

  "Clear [Group name]?" will be displayed.
- 3. Press (OK) to delete it.

### **EDIT SMS GROUP**

Adds, changes and deletes a group.

### **ADD NEW GROUP**

- 1. To add a new group, press  $\bigcirc$  [MENU]  $\bigcirc$   $\bigcirc$   $\bigcirc$ . A maximum of seven groups is allowed.
- 2. Input a new group name.
- 3. Press (STO) to save it.

# **PHONE BOOK**

### **CHANGE GROUP NAME**

- 1. To change a group name, press [MENU] (5.48) (2.48).
- 2. Select an existing group name and press .
- 3. Input a new name.
- 4. Press ( OK) to save it.

### **EDIT EXISTING GROUP**

- 1. To editing menu, press [MENU] (30F).
- 2. The 3 existing group appear Family, Friend, Work.
- 3. Use the Navigation key to select an existing group.
- 4. To edit a group.
- 5. Press ( OK) to save it.
- 6. Press ( OK) again to confirm it.

Page 42 - Chapter 3 Chapter 3 - Page 43

### TO CLEAR THE GROUP

- 1. To clear a group name, press  $\bigcirc$  [MENU] 1. 5. 4. 4. .
- 2. Select a group name and press .
- 3. "Clear [Group Name]?" will be displayed.
- 4. Press (OK) to delete the group.

#### **SPEED DIAL**

Links a phone number from the phone book to a location number and enables you to call that number simply by pressing its location number from the idle mode.

- 1. Press [MENU] .
- 2. To assign a phone number to a location, select the location and press 

  .
- 3. Select the group where the phone number is saved and press 

  .
- 4. Select the entry and press , select the phone number and press again.

# **PHONE BOOK**

### **MY PROFILE**

Saves your personal information.

- 1. Press [MENU] (In to review and edit your personal information (Name, My Phone number, Birthday, Blood Type, Address, Home Number, E-Mail, Work Phone Number, Memo, Set Secret).
- 2. Use the Navigation key to select the item to be edited then press  $\bigcirc$ .

NOTE: To edit a selected item of Blood type, press (♣♠).

3. To confirm and save it. Press (STO).

Page 44 - Chapter 3 Chapter 3 - Page 45

# **RECENT CALLS**

The CDM-8425PTT keeps a log of the 10 most recently missed, received (incoming) and dialed (outgoing) calls. Log information includes the phone number, the date and time of the call.

This feature is not intended for billing purposes.

In idle mode, you can access Recent Calls by pressing  $\bigcirc$  [MENU]  $\bigcirc$  .

### **DIALED**

Displays information about the ten most recently dialed numbers. You can dial a selected numbers by simply pressing .

- 1. To see a list of the 10 most recently dialed numbers, press [MENU] (2000). If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.
- 2. To view outgoing call details, press 

  .
  - Call details include date, time and phone number.
- 3. Press ▽ [OPTS] to save the number or press ▽ [DEL] to delete it.
- Shortcut : From idle mode, press and hold to access the recently dialed call numbers.
- "Phone # is already saved in phone book" or "Move to phone book save mode?" will appear.

NOTE: After the tenth outgoing call, the oldest call will automatically be erased from the history.

### **RECENT CALLS**

### **RECEIVED**

Displays information about the 10 most recently answered calls. You can dial a selected number by simply pressing .

- To see a list of the 10 most recently answered calls, press [MENU] 2 . If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.
- 2. To view incoming call details, press the .

NOTE: Call details include date, time and phone number.

- 3. Press ☞ [OPTS] to save the number or press ☞ [DEL] to delete it.
- "Phone # is already saved in phone book" or "Move to phone book save mode?" will appear.

NOTE: After the tenth incoming call, the oldest call will automatically be erased from the history.

Page 46 - Chapter 3 Chapter 3 - Page 47

# **RECENT CALLS**

### **MISSED**

Displays information about the 10 most recently missed calls. Place a call to a missed call number by simply pressing .

- 1. To see a list of the 10 most recently missed calls, press [MENU] [200] [300]. If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.
- 2. To view missed call details, press .

NOTE: Call details include date, time and phone number.

- 3. Press (OPTS) to save the number or press (DEL) to delete it.
  - "Phone # is already saved in phone book" or "Move to phone book save mode?" will appear.

NOTE: After the tenth missed call, the oldest call will automatically be erased from the history.

# **RECENT CALLS**

### **CALL TIMERS**

Checks the talk time and manages your calls within the limit you set. The five timers include:

#### **LAST CALL**

To display the total time of your last call:

- 1. Press (MENU) (2AB) (4GH) (1.-').
- 2. To return to the previous page, press [CLR].

#### **ALL CALLS**

To display the total time of all calls:

- 1. Press [MENU] (2.00) (4.00) (2.00) and the message "Not intended for billing purposes" appears for 5 seconds.
- 2. Use the Navigation Key to view the time of the following items:
  - Voice, Data/Fax
- 3. To resert the timer, press [RST].

Page 48 - Chapter 3

# **RECENT CALLS**

#### **HOME CALLS**

To display the total time of calls placed within your home area:

- 1. Press [MENU] (2000) and the message "Not intended for billing purposes" appears for 5 seconds.
- 2. Use the Navigation Key to view the time of the following items:
  - Voice, Data/Fax
- 3. To reset the timer, press ▽ [RST].

  To return to the previous page, press ▽ [CLR].

#### **ROAM CALLS**

To display the total time of calls placed outside your home area:

- 1. Press [MENU] (200) (401) and the message "Not intended for billing purposes" appears for 5 seconds.
- 2. Use the Navigation Key to view the time of the following items:
  - Voice, Data/Fax
- 3. To reset the timer, press ▽ [RST] .

  To return to the previous page, press ▽ [CLR].

# **RECENT CALLS**

### **CUMULATIVE CALLS**


To display talk time of cumulative calls:

- 1. Press [MENU] (2.46) (5.55) and the message "Not intended for billing purposes" appears for 5 seconds.
- 2. Use the Navigation Key to view the time of the following items:
  - Voice, Data/Fax

NOTE: Cumulative ime can not be reset.

Page 50 - Chapter 3 Chapter 3 Chapter 3

# **MEMO**

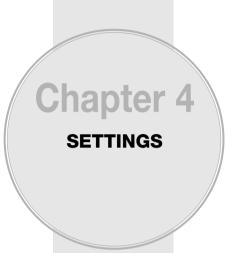

This chapter addresses customizing your phone by adjusting backlighting, volume, ring tones and other user-friendly features.

- Settings
- VS Menu
- VR Mode
- PTT

Page 52 - Chapter 3 Chapter 4 - Page 53

#### **SOUNDS**

This feature allows you to select sounds for Ringer type, Ringer Mode, Volume, Alert, Roam Ringer, Tone Length and Etiquette Mode.

#### **RINGER TYPE**

Selects a ringer type to alert you of an incoming call.

#### RINGER LIST

- 1. Press (MENU) (500) (1.-2) (1.-2) (1.-2)
- 2. Select a ringer type from the 9 melodies and 11 ringer types with the Navigation Key, then press (OK) to save it.

#### MY DOWNLOADS

My Downloads stores Ringer Lists downloaded through "Get It Now".

- 1. Press [MENU] 6 (1.-1) (2ABC).
- 2. To select a downloaded ringer type from "Get It Now" with the Navigation Key, then press [OK] to save it.

#### **ANIMATED RINGER**

Animated Ringer stores Animated Ringer Lists downloaded through "Get It Now".

- 1. Press (MENU) (MENU) (305).
- 2. Select a downloaded animated ringer type from "Get It Now" with the Navigation Key, then press (OK) to save it.

# **SETTINGS**

#### **EMS DOWNLOADS**

EMS Ringer stores Ringer Lists downloaded through EMS in SMS.

- 1. Press [MENU] (6MR) (1.-) (1.-) (40H).
- 2. Select a downloaded ringer type from "SMS" to "EMS" with the Navigation Key, then press 

  [OK] to save it.

#### RINGER MODE

This feature allows you to choose how you want to be alerted to an incoming call.

- 1. Press [MENU] 6 T.- 2/18C.
- 2. Select one of the following options:
  - Ringer: Phone plays ringer selected in Ringer List.
  - Vibrate : Phone vibrates only.
  - Ringer after Vibrate : The ringer sounds after vibration.
  - Silent : Mutes the ringer.
- 3. To confirm, press ( [OK].

#### **VOLUME**

Controls the Ringer, Key and Voice Call volume.

#### **RINGER**

To adjust the ringer volume.

- 1. Press [MENU] (3 Test (1.).
- 2. Adjust the ringer volume using the Navigation Key or the volume keys on the side of the phone.
- 3. To save, press ( [OK].

Page 54 - Chapter 4 Chapter 4 Chapter 55

#### **KEY**

To adjust the keypad tone.

- 1. Press [MENU] (6MK) (1.-) (3DE) (2ABC).
- 2. Adjust the keypad tone using the Navigation Key or the volume keys on the side of the phone.
- 3. To save, press (OK).

#### **VOICE CALL**

To adjust the earpiece volume.

- 1. Press [MENU] (3 NE) (3 DEF) (3 DEF) .
- 2. Adjust the earpiece volume with the Navigation Key or the volume keys on the side of the phone.
- 3. To save, press () [OK].

### **ALERT**

This feature allows you to select alerts to sound when the phone performs certain functions. Alerts include:

#### **MINUTE ALERT**

To set an alert to sound every minute of a phone call:

- 1. Press (MENU) (1.-) (40H) (1.-).
- 2. Select "Off" or "On" then press (OK) to save it.

# **SETTINGS**

#### **ROAM ALERT**

To sounds an alert when leaving a service area and entering a roaming service area:

- 1. Press [MENU] (6 MN) (1.-1) (4 OH) (2 ABC).
- 2. Select "Off" or "On" then press  $\bigcirc$  [OK] to save it.

#### **CONNECT ALERT**

Sounds an alert to notify you that a call has been successfully placed:

- 1. Press [MENU] (6 MNO) (1.-) (4 GH) (3 DEF).
- 2. Select "Off" or "On" and press (OK) to save it.

#### **FADE ALERT**

Sounds an alert when entering an area where calls cannot be made due to weak signal strength.

NOTE: The alert sounds in standby mode or during a call.

- 1. Press [MENU] (6<sup>MNO</sup> 1.-') (4<sub>GH</sub>) (4<sub>GH</sub>).
- 2. Select "Off" or "On" and press ( OK) to save it.

#### **LOW SIGNAL ALERT**

Sounds an alert when you encounter low signal strength.

NOTE: The alert sounds in standby mode or during a call.

- 1. Press (MENU) (6 MO) (1.-) (4 GH) (5 JK).
- 2. Select "Off" or "On" and press (OK) to save it.

Page 56 - Chapter 4

#### **ROAM RINGER**

If you choose Distinctive you will have to select a ringer type.

- 1. Press [MENU] (In Such Such )
- 2. Select "Distinctive" or "Normal" and press (OK) to save it.
  - Distinctive : Sounds a different ringer type.
  - Normal : Sounds the same ringer type as used in Home area.

#### **TONE LENGTH**

To adjust tone length:

- 1. Press [MENU] 6 MO 1.- 6 MO.
- 2. Select "Normal" or "Long" and press (OK) to save it.

#### **ETIQUETTE MODE**

- 1. Press [MENU] (6MV) (1-1) (7POIS).
- 2. Select "On" or "Off".
  - On : Etiquette Mode on.
  - Off: Etiquette Mode off.
- 3. To save, press (OK).

# **SETTINGS**

### **DISPLAY**

Customizes and personalizes the display.

### **ANIMATION SETTING**

Selects your favorite LCD display in the following modes:

#### **IDLE DISPLAY**

- 1. Press [MENU] (6<sup>MNO</sup>) (2<sup>ABC</sup>) (1.-') (1.-').
- 2. Select a display from the Animation list.
- 3. Press ( OK) to save it.

#### **POWER ON DISPLAY**

- 1. Press [MENU] (6MN) (2AB) (1.-') (2AB).
- 2. Select a display from the Animation list.
- 3. Press ( OK) to save it.

#### **POWER OFF DISPLAY**

- 1. Press (MENU) (6 MM) (2 ABO) (1.-) (3 DEF).
- 2. Select a display from the Animation list.
- 3. Press (OK) to save it.

Page 58 - Chapter 4

Chapter 4 - Page 59

#### MAIN DISPLAY SETTING

Selects your favorite LCD display for the following modes:

#### **GREETING INPUT**

To input a personal greeting:

- 1. Press [MENU] 6 2/180 (2/180 (1.-').
- 2. To edit the banner, press .
- 3. Input your personal banner, using the Alpha Editor. (Refer to page 33).
- 4. To save, press (STO).

#### **IDLE CLOCK**

To display a clock on the LCD:

- 1. Press [MENU] (6MNO) (2ABC) (2ABC) (2ABC).
- 2. Select one of the following options and press \( \bigcirc \bigcirc \text{OK} \end{array} \) [OK] to save it.
  - Digital Clock
  - Analog Clock
  - Greeting Clock
  - Animation + Clock

# **SETTINGS**

#### **LCD SETTING**

Controls backlight and LCD contrast for a better view and more efficient use.

#### **BACKLIGHTING**

Backlights the display and keypad for easy viewing in dark places.

- 1. Press [MENU] (3<sup>MN)</sup> (2<sup>AEC</sup> (3<sup>DEF</sup> (1,-<sup>2</sup>).
- Off: Turn the backlight off.
- 5 secs, 10 secs, 20 secs : Backlight on for 5, 10, or 20 seconds respectively after a touch of the keypad.

#### **CONTRAST**

The LCD display contrast can be adjusted to 5 levels.

- 1. Press [MENU] (3ND) (2ABC) (3DEF) (2ABC).
- 2. Adjust the LCD contrast for better view.
- 3. To save, press (OK).

Page 60 - Chapter 4

Chapter 4 - Page 61

### **GRAPHIC SETTING**

#### **SCREEN SAVER**

- 1. Press [MENU] (6MM) (2ABC) (4GH) (1.-').
  - TIME SETTING : Determines when the screen saver activates.

Select one of the following options: Off / 5 Secs / 10 Secs / 20 Secs / 30 Secs.

SCREEN SAVER
 Select parameters (DOWNLOAD IMAGE/EMS IMAGE)
 by using the Navigation Key, then press .

#### **WALLPAPER**

- 1. Press [MENU] 6 ABC (ABC) (AGE).
- 2. Select parameters (Download Image/EMS Image), then press .

# **SETTINGS**

### **SYSTEM**

Scans the channels so your phone can stay connected to any available system.

#### **SET MODE**

Selects the Preferred System.

- 1. Press (MENU) (6MM) (1.-).
- Select one of the following options (Automatic B/Automatic A/Home Only) and press .
  - Automatic B : Scan the radio channels based on the Automatic B setting.
  - Automatic A : Scan the radio channels based on the Automatic A setting.
- Home Only: Scan radio channelsonly within your home area or home affiliated area.

#### **FORCE ANALOG**

Temporarily forces phone to use Analog mode – mode automatically ends in 10 minutes.

- 1. Press  $\bigcirc$  [MENU]  $\bigcirc$  40H)  $\bigcirc$  2ABC.
- 2. Select "No" or "Yes" then press \( \bigcirc \left[ OK \right] \) to activate it.

#### **NAM SETTING**

Enables Auto NAM (Number Assignment Modules) or manually selects a NAM.

#### **AUTO NAM**

Automatically switches phone to proper NAM when you have multiple NAM registrations.

- 1. Press (MENU) (6 MO) (4 GH) (3 DEF) (1.-).
- 2. Select "Yes" or "No" then press (OK) to save it.

#### **CHANGE NAM**

Changes the NAM used by the phone when you have multiple registrations.

- 1. Press [MENU] 6 MNO 4GH (3 DEF) 2ABC.
- 2. Select "NAM1-VERIZON" or "NAM2-VERIZON" then press () [OK] to save it.

### PRL ID

Displays the phone's PRL (Preferred Roaming List).

1. Press [MENU] 6 4GH) 4GH).

# **SETTINGS**

Enables Verizon network system to locate your position and allows the use of some Verizon wireless applications.

### **LOCATION**

To determine whether or not the network system can detect your position:

- 1. Press (MENU) (MENU) (5.)KL).
- 2. Select "911 Only" or "Location On".
  - 911 Only: Your location will be hidden from network & applications except 911.
  - Location On: Your location is now available to the network.
- 3. To save, press (OK).

Page 64 - Chapter 4

Chapter 4 - Page 65

### **OTHERS**

#### **ANSWER MODE**

To select an answer mode:

- 1. Press (MENU) (6MN) (1.-).
- 2. Select "Any Key" or "Send Key".
  - Any Key: Press any key to answer an incoming call except , , and .
  - Send Key : Press only 5 to answer a call.
- 3. To save, press (OK).

### **AUTO RETRY**

Automatically retries a call up to 5 times after a set time interval.

#### **RETRY TIME**

- 1. Press (MENU) (6MN) (2ABC) (1.-).
- Select a time interval option to automatically retry a call (Off, 3, 5, 7, 10 seconds).
   To save, press (OK).

#### REPEAT

- 1. Press [MENU] (6<sup>MNO)</sup> (2<sup>ABC)</sup> (2<sup>ABC)</sup>.
- 2. Select one of the options (1 time, 3 times, 5 times). To save, press  $\bigcirc$  [OK].

# **SETTINGS**

### **AUTO ANSWER**

Automatically answers a call after a preset number of rings.

- 1. Press [MENU] 6 MO (3 DEF).
- 2. Select on of the following:
  - Off / 5 / 10 / 18 seconds.

NOTE: This function will not be active when you select Vibrate, Silent, Etiquette or Ringer after Vib as a ringer mode.

3. To save, press (OK).

#### **VOICE PRIVACY**

Enhances voice privacy and avoids tapping during a call.

- 1. Press [MENU] (6MK) (4GH).
- 2. Select "Standard" or "Enhanced".
- "Enhanced" : Makes it more difficult to wire tap.
- 3. To save, press (OK).

Page 66 - Chapter 4

Chapter 4 - Page 67

#### **KEY GUARD**

- 1. Press (MENU) 6 MNO 5 JKL).
- 2. Select "On" or "Off".
  - On : Prevents accidentally pressing the keypad.
- Off : Key guard off.
- 3. To save, press (OK).

NOTE: To unlock the key guard, press 1.- 2 00 300 .

#### **LANGUAGE**

To select the language in which letters and words. Are displayed on screen.

- 1. Press (MENU) 6<sup>MNO</sup> 6<sup>MNO</sup> 6<sup>MNO</sup>.
- 2. Select either "English" or "Spanish".
- 3. To save, press (OK).

### **WEB IDLE TIME**

When connected to a network, this feature automatically disconnects your phone from the network when there is no key input for a period of time that you set.

- 1. Press [MENU] 6 MMO (6 MMO) (7 POIS).
- 2. Use the scroll key to set the web idle timer or press digit keys one by one to enter the time.
- 3. To save, press ( [OK].
  - Timer length cannot exceed 3 digits.

# **SETTINGS**

#### S/W VERSION

To display the version of your phone:

- 1. Press [MENU] 6 MRO 8 TUV).
- 2. Your phone's software and hardware version appear on the display.
- 3. Press (OK).

#### MAKING AND ANSWERING A CALL

You can make or answer calls in the same manner as ordinary calls.

 A TTY (also known as TDD or Text Telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone. Connect the TTY device to the Headset Jack of PCS Phone. Then type the message you want to send on the TTY's keyboard.

#### **TTY MODE**

Your phone is able to operate with a "TTY" (Teletypewriter) device in both analog and digital modes. This feature is system dependent and may not be available in all areas.

#### **CONNECTING TO TTY DEVICE**

- 1. Turn the "TTY" device off.
- 2. Connect the "TTY" device to the phone at the earphone-microphone jack.

#### **ACTIVATING/DEACTIVATING TTY MODE**

- 1. Press [MENU] 6 MINO (SWIND) (SWIND)
- 2. Select one of the following options (TTY Full/ TTY+TALK/TTY+HEAR/TTY Off) then press .

Page 68 - Chapter 4 Chapter 4 - Page 69

#### **SETTINGS**

#### **SPEAKER MODE**

- 1. Press [MENU] (6MO) (OCER).
- 2. Select "On" or "Off".
  - On: Speaker phone on.Off: Speaker phone off.
- 3. To save, press (OK).

#### **VS MENU**

#### **VOICE MEMO**

#### **RECORD VOICE MEMO**

- 1. To start VS menu, press (9) (9)
- 2. To enter the voice memo menu, press 🖳.
- 3. When you press to record a voice memo, instructions will appear and you will hear "Please record it at the tone".
- 4. To stop recording a memo, press .

NOTE: To pause, press  $\bigcirc$  . To resume, press  $\bigcirc$  .

After recording a voice memo you can "Review", "Re-record" or "Save".

#### **PLAY VOICE MEMO**

- 1. To start VS menu, press 🔀 🔊
- 2. To enter the voice memo menu, press 🕒 .
- 3. To play the voice memo menu, press (2no), select the desired voice memo, then press (1).

NOTE: Edit Key - Edits the voice memo title. CLR Key - Deletes the selected voice memo.

#### **CLEAR ALL**

- 1. To start VS menu, press 🔀 💯.
- 2. To enter the voice memo menu, press ①.
- 3. To delete a voice memo, press 3pt.

#### **CALL ANSWER**

Sets and operates the answering machine.

- 1. Press ( gwxz) (2ABC).
- 2. Select one of the following options, then press .

ON/OFF: Turns the Call Answer Mode on/off.
INBOX: Plays or erases a recorded memo.
CALL SPEAKER ON: You can(not) hear the caller's
voice being recorded by answering
machine.

WAIT TIME: No ringer, 5s, 10s, 18s. Answering machine will answer the call after a specific time.

#### **RECORDING LIMITATION:**

You have a limit of 10 voice memos including those in Answering Machine. Each voice memo has the time limit of 60 seconds.

#### **VS MENU**

#### **VOICE COMMAND**

With Voice Command you can train the Voice Recorder to make calls by simply saying the control words outlined below.

#### YES/NO

- 1. Press (9) (3) (1,-1).
- 2. Select one of the following options, then press .

LIST WORDS: Displays the list of control words in the Yes/No set. Select a control word from the list then press . Either train, untrain or view its status. To train a word, press .

TRAIN ALL: Train Yes/No set to recognize your voice.

UNTRAIN ALL: Untrain Yes/No set to recognize trained control words.

#### **WAKE-UP**

Use Wake-Up to train or untrain the VR with the control word, Wake-Up.

- 1. Press (9) (3) (3) (2) (2) (2)
- 2. Select one of the following options, then press .

LIST WORDS: Displays the list of control words in the Wake-Up set. Select a control word from the list then press . Either train, untrain or view its status. To train a word, press and follow the voice prompts.

TRAIN ALL: Train Wake-Up set to recognize your voice.
UNTRAIN ALL: Untrain Wake-Up set not to recognize
trained control words.

Page 72 - Chapter 4 Chapter 4 Chapter 4

#### **TOP LEVEL**

Use Top Level to train or untrain the VR with your control words (Dial, Redial, Voice Memo, Phone Book, Cancel).

- 1. Press (9WXXZ) (3DEF) (3DEF).
- 2. Select one of the following options, then press .

LIST WORDS: Displays the list of control words in the top level set. Select a control word from the list then press . Either train, untrain or view its status. To train a word, press . TRAIN ALL: Train Top level set to recognize your voice. UNTRAIN ALL: Untrain Top level set not to recognize trained control words.

#### **DIGIT DIAL**

Use Digit Dial to train or untrain the VR with the control words (1 to 9, Zero, Oh, Verify, Clear, Call).

- 1. Press (3) (3) (4) (4)
- 2. Select one of the following options, then press 

  .

LIST WORDS 1, 2: Displays the list of control words in the digit dial set. Select a control word from the list then press . Either train, untrain or view its status. To train a word, press . and follow the voice prompts.

TRAIN ALL: Train Digit Dial set to recognize your voice.

UNTRAIN ALL: Untrain Digit dial set not to recognize trained control words.

#### **VS MENU**

#### **VOICE DIAL**

Voice tags allow you to make calls in VR Mode by simply saying the person's name. Using the VS Menu, you can list, add or erase voice tags for phone book entries.

#### **ADD**

- 1. Press (9WXYZ).
- 2. To add a voice tag to phone book entry, press (404) (2005).
- 3. Select a group, then press [OK].
- 4. Select an entry, then press (OK).
- 5. Select a phone number, then press (OK).
- 6. "Enter voice tag?" will be displayed. Press , then say the name.

#### LIST

- 1. Press 🖵 🕬 .
- 2. To list phone book entries with attached voice tags, press (4) (1-2).
- 3. Select one of the entries, then press (OK).

EDIT: Retrain / Voice Setting / Clear. PLAY: Play voice tag.

Page 74 - Chapter 4 Chapter 4 Chapter 4

- 4. Press **◎** [PLAY] to play a voice tag or **○** [EDIT] to edit an existing voice tag.
- 5. If you select Edit, select one of the following options, then press [OK].
- 1) Retrain: "Retrain Voice Name?" appears. Press 🕥 , then say a name.
- 2) Voice Setting: "Change?" appears. Press 🕡 , select a phone number, then press 🕡 again.

#### **CLEAR ALL**

- 1. Press 🖾 🔊.
- 2. To erase all voice tags in the list, press 4 and 3 per.
- 3. "Removing all voice tags proceed?" appears.
- 4. Press **(□)** [OK] and you will see the message, "Delete all tagged book entries too?". Select No by pressing **(□)**, Yes by pressing **(□)** and CLR by pressing **(□)**.
- 5. "All voice tags were deleted successfully" will be displayed.

OK: Proceed to erase all the voice tags. CLR: Return to the previous page.

#### **VS MENU**

#### **VOICE ALERT**

Sets the voice alert service.

#### ON/OFF

- 1. Press (9) (5) (1.-).
- 2. Select "On" or "Off", then press .

#### **RECORD**

- 1. Press (9WX7) (5JKL) (2ABC).
- 2. Record voice alert.

#### **PLAY**

- 1. Press (9wxy) 5JKL (3DEF).
- 2. Confirm voice alert.

#### **CLEAR**

- 1. Press (9WXX) (5JKL) (4GH).
- 2. Select "Yes" or "No", then press .

#### **VOICE SETTING**

Customizes the voice service menu.

#### **UNTRAIN ALL**

- 1. Press (9)(XYZ) (6)(MNO) (1.-).
- 2. Select "Yes" or "No", then press .

#### **PROMPT MODE**

Use the prompt mode to select either beginner or expert mode. The expert mode consists of shorter texts and just beeps as opposed to the beginner mode that gives full instructions.

- 1. Press (9"XYZ) (6"NO) (2ABC).
- 2. Select "Beginner" or "Expert", then press .

#### <Beginner mode>

1st prompt: "Main menu" followed by a short beep.

2<sup>nd</sup> prompt : "Speak a name to call, or say dial, redial, voice memo, phone book, or cancel", followed by a short beep.

#### <Expert mode>

1st prompt: A sequence of high and low tones.

2<sup>nd</sup> prompt: "Main menu".

#### NOTE:

The VR times out and the phone returns to the standby mode after the 1st and 2nd prompts are heard and nothing is said.

#### **VS MENU**

#### **DIGIT MODE**

Use the digit mode to select one of the following options; ECHO, BEEP, ECHO+BEEP.

- 1. Press (9) (3) (3) (3) (3)
- 2. Select one option, then press 🔘 .

ECHO: Digit echoes back when entered.

BEEP: Digit beeps when entered.

ECHO + BEEP : Digit echoes and beeps when entered.

#### **HFK MODE**

HFK stands for Hands-Free Car Kit. With this function, you can activate and utilize the VR feature when the phone is in hands-free car kit.

- 1. Press (9WXY) (6MX) (4GH).
- 2. Select "On" or "Off", then press .

OTE: Once you say "Wake-Up" and the phone recognizes your voice, you will hear a beep.
The second time you say "Wake-Up", your phone turns to VR mode.

Chapter 4 - Page 79

Page 78 - Chapter 4

#### **VR MODE**

Voice Recognition (VR) enables you to place calls and record voice memos using your voice.

- 1. Press and hold until your phone turns to VR mode.
- 2. When the phone turns to VR mode, the screen on the right appears.



NOTE: Depending on the prompt mode – expert or beginner – you will hear a different set of prompts as listed below. The second prompt will automatically play if nothing is said.

#### **Beginner Mode**

- 1st : "Main Menu".
- 2<sup>nd</sup>: "Speak a name to call, or say dial, redial, voice memo, phone book or cancel".

#### **Expert Mode**

- 1st : "beep".
- 2<sup>nd</sup>: "Main Menu".

Once you say one of the following options, you will go through each of the procedures (name, dial, redial, voice memo, phone book, cancel).

#### **NAME**

- 1. Press and hold and wait until your phone turns to VR mode.
- 2. In VR mode, say a recorded name or tag stored in the phone book, and the name and number will appear on the display and you will hear "Calling (name)."

See page 75 for additional details.

#### **VR MODE**

#### DIAL

1. Press and hold until your phone turns to VR mode.



2. Say "Dial" and the display on the right will appear.

Depending on the prompt mode, expert or beginner, you will hear a different set of prompts that follows. You will hear the second prompt when nothing is said.

- 3. Press or say the digits of the phone number.
- 4. After entering the entire number, say "Call".

#### NOTE:

#### Beginner mode

- 1st prompt: "Digit menu".
- 2<sup>nd</sup> prompt :"Say digits or verify, cancel, clear, or call". Expert mode
- 1st prompt: "doo-doo" (a sequence of high and low tones).
- 2nd prompt :"Digit menu".

#### **REDIAL**

- Press and hold until your phone turns to VR mode.
- 2. To call the last dialed number, say "Redial".

Page 80 - Chapter 4 Chapter 4 - Page 81

#### **VR MODE**

#### **VOICE MEMO**

This feature is the same as on page 71, except you must use the phone to access the menu not your voice.

- Press and hold until your phone turns to VR mode.
- 2. Say "Voice Memo" instructions will appear and you will hear "Please record it at the tone".
- 3. To stop recording, press .

NOTE: To pause, press  $\bigcirc$  . To resume, press  $\bigcirc$  .

4. After recording a voice memo you can "Review", "Re-record" or "Save".

#### **PHONE BOOK**

- 1. Press and hold until your phone turns to VR mode.
- 2. Say "Phone Book".

Phone book entries with voice tags will appear and each voice tag will play.

NOTE: To call a phone number with an attached voice tag, say "Yes" while the voice tag plays.

#### **CANCEL**

1. Press and hold until your phone turns to VR mode.

To exit VR mode or return to the standby mode, say "Cancel."

#### **PTT**

#### **PTT CONTACTS**

Press and hold until your phone turns to VR mode.

Page 82 - Chapter 4 Chapter 4 Chapter 4

# PTT



This chapter addresses security features including locking and unlocking the phone, restricting calls and clearing the phone book.

Page 84 - Chapter 4 Chapter 5 - Page 85

#### **SECURITY FEATURES**

#### **SECURITY**

Prevents the unauthorized use of the handset and only allows access to certain features to those who have the password.

#### **RESTRICT**

Enables you to restrict certain features with the password. Password must be entered to use restricted features.

#### **AUTOMATIC LOCK**

Prevents others from using your phone without permission. When locked, the menu can not be accessed without the password.

- 1. Press [MENU] @ 3 and enter "Password".
- 2. Press 🕩 🗀 and select "Off", "Lock Now" or "Power Up".
  - Off: Do not lock the phone.
  - Lock Now: Lock the phone now.
  - Lock On Power Up : Lock the phone whenever it is turned on.
- 3. To save, press ( [OK].

NOTE: The default password is the last 4 digits of your phone number.

#### **SECURITY FEATURES**

#### DIALED

To block all outgoing calls except emergency calls from being placed, but allows incoming calls to be answered:

- 1. Press [MENU] 6 and enter "Password".
- 2. Press (1-) (2ne) and select "Allow" or "Restrict".
  - Restrict : Restrict to make a call.
  - Allow : Allow outgoing calls.
- 3. To save, press ( [OK].

#### RECEIVED CALL HISTORY

The Received Call History lists the most recent incoming calls, including phone numbers. To control access to the history:

- 1. Press [MENU] 6 and enter "Password".
- 2. Press (1-) (3") and select "Allow" or "Restrict".
  - Restrict : Restrict access to received call history.
  - Allow : Allow access to received call history.
- 3. To save, press ( [OK].

#### **DIALED CALL HISTORY**

The Dialed Call History lists the most recent outgoing calls, including phone numbers. To control access to the history:

- 1. Press [MENU] 6 and enter "Password".
- 2. Press 🗀 🐠 and select "Allow" or "Restrict".
  - Restrict : Restrict access to the dialed call history.
  - Allow : Allow access to the dialed call history.
- 3. To save, press (OK).

NOTE: The default password is the last 4 digits of your phone number.

Page 86 - Chapter 5 Chapter 5 - Page 87

#### **SECURITY FEATURES**

#### MENU

To block access to the menu to prevent any changes:

- 1. Press [MENU] 6 and enter "Password".
- 2. Press (1-') (5-10) and select "Allow" or "Restrict".
  - Restrict : Restrict access to the menu.
  - Allow : Allow access to the menu.
- 3. To save, press ( [OK].

#### PHONE BOOK

To block access to, and protect data in your phone book.

- 1. Press [MENU] (3 and enter "Password".
- 2. Press 🗓 🎒 and select "Allow" or "Restrict".
  - Restrict : Restrict access to the phone book.
  - Allow: Allow access to the phone book.
- 3. To save, press ( [OK].

#### **DATA CALL**

To restrict data calls from being placed:

- 1. Press [MENU] (300) and enter "Password".
- 2. Press (1-) (Fors) and select "Allow" or "Restrict".
  - Restrict : Restrict data calls.
  - Allow : Allow data calls.
- 3. To save, press ( [OK].

Data Call Types : 1x express/qnc/fax/async data/get it now/ mobile web

NOTE: The default password is the last 4 digits of your phone number.

#### **SECURITY FEATURES**

#### 900 #'S

To restrict calling 900 dial service numbers:

- 1. Press [MENU] 6 and enter "Password".
- 2. Press (1-) (8") and select "Allow" or "Restrict".
- Restrict : Restrict calls 900-dial services.
- Allow : Allow 900-dial services.
- 3. To save, press (OK).

#### LONG DISTANCE

By restricting long distance calls.

- 1. Press [MENU] (3 and enter "Password".
- 2. Press 🖅 🕬 and select "Allow" or "Restrict".
  - Restrict : Restrict calls long distance calls.
  - Allow : Allow long distance calls.
- 3. To save, press (OK).

NOTE: A phone number over 7 digits is to be restricted.

NOTE: The default password is the last 4 digits of your phone number.

Page 88 - Chapter 5 Chapter 5 Chapter 5

#### **SECURITY FEATURES**

#### SPECIAL #'S

Special #'s allows you to store 3 phone numbers that can be called even in the lock mode.

- 1. Press [MENU] 6 and enter "Password".
- 2. Press and select a location.
- 3. Press (OK) and input a phone number; press (OK) again to save.

#### **CLEAR PHONE BOOK**

To clear all phone book entries:

- 1. Press [MENU] (305) and enter "Password".
- 2. Press (3<sup>DEF</sup>).
- 3. Select "Yes" or "No", then press (OK).

NOTE: The default password is the last 4 digits of your phone number.

#### **SECURITY FEATURES**

#### **RESET PHONE**

Resetting the phone restores it to the original default settings. Any changes you made to options or features will return to the factory settings. To reset the phone:

- 1. Press [MENU] (6 MS) (3 OFF) and enter "Password".
- 2. Press 4 .
- 3. Select "Yes" or "No", then press (OK).
  - When you select "Yes", you will see "Wait a moment" on the display and the phone will return to idle mode.

#### **CHANGE PASSWORD**


To change your password:

- 1. Press [MENU] (3 and enter "Password".
- 2. Press 5<sup>JKL</sup>.
- 3. Enter a new password and press ( [OK].
- 4. Enter the new password again and press OK].

NOTE: The default password is the last 4 digits of your phone number.

Page 90 - Chapter 5 Chapter 5 - Page 91

# **MEMO**

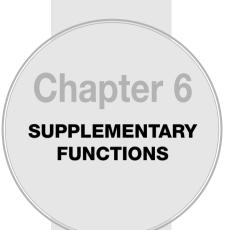

This chapter addresses supplemental functions including the schedule, calculator, clock and stopwatch features.

- Schedule
- Calculator
- World Clock
- Stop Watch

Page 92 - Chapter 5 Chapter 6 - Page 93

#### **SCHEDULE**

The schedule allows you to set an event and reminds you of that event.

#### **EVENT**

- 1. To display a calendar, press [MENU] To U. .
- 2. Select New Event.
- 3. Move the Navigation Key to choose a date in the calendar and press ( OK).
  - Day to Day movement : Move the Navigation Key left and right.
  - Week to Week movement : Move the Navigation Key down and up.
- 4.1. To set a time for an event, press ♥. Enter the event name then press ♥ [STO].Press ♥ [STO] again to save the event.
  - Choose one of the following on the first line: On time, 10 Min before, 30 Min before, 1 Hour before, No alarm.
  - Change the date and time in the second line by moving to year, month, day, time input with the Navigation Key.
- 4.2. To set a melody for the event, press ②... Select a melody then press ③ [OK].
  - Use the Navigation Key to scroll through the list of 10 ringtones and 30 melody tones. To set a melody, press ☐ [OK]
- 4.3. To set a message for the event, press 3 PEF.
- 5. Press ( [OK] to save it or [ [CLR] to return to the calendar.
- 6. "Save complete" appears. When you return to the calendar the day will be highlighted.
  - The date of the event will be marked on your calendar.

#### **SCHEDULE**

#### **ALARM**

You can set up to 3 alarms.

- 1. To display alarm entries, press (MENU) (MENU) (2.00).
- 2. Select one of the entries. To set a new alarm, choose item 1, 2 or 3. To edit an existing alarm, select that alarm. Press .
- To delete the existing one, press 🗇 .
- 3.1. To set a time, press from the Alarm Setting Menu.
  - Use the Navigation Key to choose an alarm frequency (Once, Daily, Weekly, Monthly, Yearly).

    To save, press ▽ [STO]. "Save Complete" will be displayed and the screen will return to the alarm list.
- 3.2. To set a melody, press from the Alarm Setting Menu.
  - Use the Navigation Key to scroll through the list of 10 ringtones and 30 melody tones. To set a melody, press (OK).
- 3.3. To set a snooze, press (3") from the Alarm Setting Menu.
- Select one of the following : No use, 1 Time, After 3 minutes.
- 3.4. To set a pause, press from the Alarm Setting Menu.

NOTE: Pause setting is available for existing alarms. It is not available for new entries.

Page 94 - Chapter 6 Chapter 6 - Page 95

#### **CALCULATOR**

#### **CALCULATOR**

Allows you to use the CDM-8425PTT as a calculator to perform basic mathematic functions (addition, subtraction, multiplication, division).

- 1. Press [MENU] Tous 2/180.
- 2. Follow the instructions below to calculate (8\*6)/4-2.5
  - Input 8.
     Move the Navigation Key leftward.
     Input 6 and press the Navigation Key.
     Move it rightward.
     Input 4 and press the Navigation Key.
     Move it downward.
     Input 2 and press the ★ to input (.).
     Press 5.
- 3. To reset, press [RST].

NOTE: 1. Up to 10 integer digits and up to 2 decimals can be displayed. If the calculated result has more than 10 digits, the result is displayed in 10 digit logarithm.

2. There is no (-) sign. To express a negative number, use '0-value'.

#### **WORLD CLOCK**

#### **WORLD CLOCK**

Notifies you of the time in a specific preprogrammed city.

- 1. Press  $\bigcirc$  [MENU]  $\bigcirc$  (3<sup>DEF</sup>).
- 2. Select a city, then press (OK).
- 3. The world map appears with the city, its date and time.
  - Use the Navigation Key to select another city.

Page 96 - Chapter 6 Chapter 6 Chapter 6

#### **STOP WATCH**

#### STOP WATCH

Simultaneously times up to six different events. To operate the stop watch:

- 1. Press [MENU] Tross 4 GHI).
- 2. To measure a time period.
- 3. To time up to six events at once:

  - To stop the second and continue measuring a third one, press [CONT].
  - To measure up to six time periods,
     To stop, press , repeat the above steps.
  - To stop, press . To review the results, press [VIEW].
  - ullet To return to the stop watch, press lacktriangle or igtriangle [CLR].
  - To reset it, press 🤝 [RST].

# Chapter 7

# **VOICE MAIL AND TEXT MESSAGES**

This chapter addresses checking voice mail messages, as well as sending and receiving text messages.

- Two-Way SMS
- Checking Messages
- Sending Text Messages
- Inbox
- Outbox
- Saved
- My Object
- Erase All
- Settings

#### **TWO-WAY SMS**

Your CDM-8425PTT features Two-Way Short Message Service (SMS). This feature sends and receives text messages through your phone. Voice mail notification is also supported.

#### **MESSAGE INDICATORS**

The following symbols indicate the status of message received by your phone. These symbols appear for voice mail and text messages.

: Text Message

: Voice + Text Mail Message

: Voice Mail Message

#### RECEIVED MESSAGE NOTIFICATION

When your phone receives a message, the screen displays the number of new text messages and voice mail messages.

1. To display the received message, press the key  $\bigcirc$  .

#### **CHECKING MESSAGES**

#### **CHECKING RECEIVED VOICE MAIL MESSAGE**

- 1. Press , then press or for Voice Mail.
- 2. The number of voice mail messages currently waiting in your mailbox appears. To access your voice mailbox, press .

#### **CHECKING RECEIVED TEXT MESSAGE**

- 1. Press  $\bigcirc$ , then press  $\bigcirc$   $\bigcirc$   $\bigcirc$   $\bigcirc$   $\bigcirc$  "Inbox".
- 2. Highlight the message you want to view and press [SEL]. The text message is displayed.
- 3. To view the Inbox message menu, press [OPTS]. From therethen you can reply, erase, forward, save, save address, lock & unlock the message.

Page 100 - Chapter 7 - Page 101

#### **SENDING TEXT MESSAGES**

#### **SENDING NEW TEXT MESSAGES**

- 1. Press then press (3°F) (2ABC) or (2ABC).
- 2. Input a new phone number then press (OK)
  - You can look up a number in the phone book by pressing [PB].
- 3. Input a new text message then press [NEXT].

#### **SEND**

- 1. To send the text message, press 🕞.
  - If "Delivery Failed. Retry in 3 mins?" appears, press 
    to select Auto retry.

#### **EDIT RECIPIENT**

Edits the recipient's information - select if a wrong number is entered.

- 1. To change the recipient, press 2.10.
- 2. Input a new phone number, and press ( OK).
- 3. Input a new text message, and press (OK).
- 4. To send, press 🖳.

#### **EDIT MESSAGE**

- 1. Press (3" to change the text message.
- 2. Input a new text message, and press (OK).

#### **SENDING TEXT MESSAGES**

#### **PRIORITY**

Marks messages as urgent.

- 1. To send an urgent message, press "Priority".
- 2. Select the priority (Normal/Urgent), then press [OK].

#### **CALL BACK**

Allows you to input a specific call back number. Your phone number is the default.

- 1. To change the call back number, press (5.\*) "Call Back".
- 2. Input call back number, then press [OK].

#### **SAVE**

This allows you to save the message into the 'Outbox' folder to use later.

1. To save the text message, press @ "Save".

#### **INSERT SIGNATURE**

- 1. To include your signature in message, press (\*\*) "Insert Signature".
- 2. Select (No/Yes), then press ( OK).

Page 102 - Chapter 7

#### **SENDING TEXT MESSAGES**

#### **SAVE ENTERED TEXT**

1. To save a text message as a canned message, press \*\* "Save Entered Text".

#### **INBOX**

#### **INBOX MENU**

The Inbox Menu options help you manage received text messages. To access the menu:

1. Press then press (3) or (3) (3) (3) or (3) (3) (3) (4).

: Urgent New Msg(not read)

: Urgent read Msg

☑ : New Msg (not read)☑ : Old Msg (already read)

: Lock (already read and locked)

- 2. Select a message then press  $\bigcirc$  [SEL] . The message is displayed.
- 3. Press [OPTS].

#### **REPLY**

- 1. To reply to the text message, press 🕞 .
- 2. Type your reply and press ( [OK].

#### **ERASE**

- 1. To erase the text message, press 240.
- 2. When you see "Delete Msg?", press [YES].

Page 104 - Chapter 7 Chapter 7 Chapter 7

#### **INBOX**

#### **FORWARD**

- 1. To forward the text message, press (300) "Forward".
- 2. Input the phone number of the person you are sending the message, then press  $\bigcirc$  [OK].
- 3. Input any text message to go along with the forwarded message, then press (OK).

#### **IN YOUR PHONE**

- 1. To save the text message in your phone, press (40) "Save".
- 2. Press 🔘 .

#### **SAVE ADDRESS**

- 1. To save the Call back number from the text message, press (5.4) "Save Address".
- 2. To save the call back number into a memory location, follow the procedures for "STORING PHONE NUMBERS" on page 32.

#### **LOCK & UNLOCK**

- 1. To lock or unlock the text message, press 6" "Lock/Unlock".
- 2. Select "Lock" to lock the message or "Unlock" to unlock the message, then press **()** [OK].

#### **INBOX**

#### **BLOCK SENDER**

- 1. Block all incoming messages from the block list, press 💯 .
- BLOCK : Enter the address to block
- UNBLOCK : Enter the address to remove from block.
- VIEW LIST OF BLOCKED ADDRESS: Display the blocked list on LCD.

#### **SAVE QUICK TEXT**

1. Save the received message into canned message press (811).

#### **REPLY WITH COPY**

1. Reply to the received message and include received phone number and contents, press grade.

Page 106 - Chapter 7 Chapter 7 - Page 107

#### **OUTBOX**

#### **OUTBOX MENU**

The Outbox Menu options help you manage sent text messages or messages waiting to be sent. To access the menu:

1. Press then press (3") (4m) or (2) (4m).

: Sent

- 2. Select a message and press  $\bigcirc$  [OK] . The message is displayed.
- 3. Press [OPTS].

#### **RESEND**

1. To resend a text message, press 🕒 .

#### **SEND TO**

- 1. To send a message to another person, press (2ABC).
- 2. Input the phone number and press .
- 3. Input a text message and press .

#### **OUTBOX**

#### **ERASE**

- 1. To erase a text message, press (3").
- 2. When you see "Delete Msg?", press <a> □</a> [YES].

#### **SAVE ADDRESS**

- 1. To save the Call back number, press (4) "Save Address".

#### **SAVE**

1. To save the outbox text message in the Saved Folder, press  $\fill$  .

#### **LOCK & UNLOCK**

- 1. To lock or unlock the text message, press 6 "Lock/Unlock".
- 2. Select "Lock" to lock the message or "Unlock" to unlock the message, then press .

#### **STATE**

1. To display the status of an outbox message, press  $\overline{\mathbb{Q}}$ .

Page 108 - Chapter 7 Chapter 7 - Page 109

#### **SAVED**

#### **SAVED**

Manages saved messages from the Inbox/Outbox.

- 1. Press then press (305) (5 JK) or (5 JK).
- 2. Select a message and press  $\bigcirc$  [SEL]. The message is displayed.
- 3. Press 🟹 [OPTS].
- 4.1. If the text message is saved from the "Inbox" menu, this screen will be displayed.
- 4.2. If the text message is saved from the "Outbox" menu, this screen will be displayed.
- 5. Select one by pressing 

  .

#### **MY OBJECT**

#### **MY OBJECT**

- 1. Press then press (3°5) (6°0) or (4°0).
- 2. Select a text message, then press [OK].

#### SOUND

- 1. To name, play or erase saved sound objects, press (30 60 100).
- 2. Select "Name" to rename a sound with  $\bigcirc$  or "Play" to play a sound with  $\bigcirc$ .
- 3. To erase a sound, press 🗇.

#### **GRAPHICS**

- 1. To name, play or erase saved graphic objects, press (30 ft (640) (200)).
- 2. Select "Name" to rename a graphic with  $\bigcirc$  or "View" to view a graphic with  $\bigcirc$  .
- 3. To erase a graphic, press 🗇.

#### **ANIMATION**

- 1. To name, play or erase saved animation objects, press (30 6 6 6 7 30 5 7 30 5 7 ).
- 2. Select "Name" to rename animation with  $\bigcirc$  or "View" to view animation with  $\bigcirc$ .
- 3. To erase animation, press 🗇 .

Page 110 - Chapter 7

#### **ERASE ALL**

#### **ERASE MESSAGES**

Erases all the messages from the "Inbox", "Outbox", "Saved" or "My Object" folder.

- 1. Press then press (305) Toos or (40).
- 2.1. To erase all the inbox messages, press 🕠 .
  - Erases entire inbox or old inbox.
- 2.2. To erase all the outbox messages, press 2.10.
  - Erases entire outbox or old outbox.
- 2.3. To erase the saved messages, press (3)\*\*.
- 3. Select "Yes" by pressing . Select "No" by pressing .

#### **SETTINGS**

#### **SETTINGS MENU**

Manages messaging features through various features.

1. Press ♥ then press ③ ® or ♀ ® . Settings".

#### **SAVE SENT MESSAGES**

Saves every sent message.

- 1. Press "Save Sent MSG".
- 2. Select "No", "Yes", or "Prompt", then press (OK).
  - If you select Prompt, each time you send a message you will be asked if you want to save it.

#### **DEFAULT CALL BACK NUMBER**

Edits a default call back number so that the recipient can call back or reply.

- 2. Input a call back number, then press  $\bigcirc$  [OK].

Page 112 - Chapter 7

#### **SETTINGS**

#### **ALERT**

Enables phone to alert you of an incoming message.

- 1. Press (3) "Alert".
- 2. Select "Ringer", "Vibrate", "Silent", "Ringer & Remind", or "Vibrate & Remind".
  - The Ringer & Remind or Vibrate & Remind rings or vibrates every 2 minutes to remind you of an incoming message. They will be cleared when any key is pressed.
- 3. Press ( [OK].

#### **AUTO ERASE**

Automatically erases (Inbox/Outbox) messages when new messages arrive.

#### **AUTO ERASE INBOX**

- 1. Press (Auto Erase Inbox".
- 2. Select "Disable" or "Old Inbox".
- 3. Press ( OK).

#### **AUTO ERASE OUTBOX**

- 1. Press (404) (2ABC) "Auto Erase Outbox".
- 2. Select "Disable" or "Old Outbox".
- 3. Press (OK).

#### **SETTINGS**

#### **ENTRY MODE**

Sets an Entry Mode as a default.

The T9 mode indicator will appear whenever

The T9 mode indicator will appear whenever the input mode is activated if the T9 mode is the default.

- 1. Press 5 "ENTRY MODE".
- 2. Select "T9 Mode" or "Alpha Mode".
- 3. Press ( [OK].

#### **BLOCK OR UNBLOCK**

- 1. Press (6 "Block" or "Unblock".
- Select "Block", "Unblock", or "View List of Blocked Address".
- 3. Press ( OK).

Page 114 - Chapter 7

#### **SETTINGS**

#### **SIGNATURE**

With this feature you can create and save a signature to include in messages.

- 1. Press 🕬 "Signature".
- 2. Select "Edit Signature" or "Insert Signature".
  - EDIT SIGNATURE : Edit user's signature.
  - INSERT SIGNATURE : Select whether the signature will be included into sending message.
- 3. Press ( [OK].

#### **DIRECT VIEW**

Read the received message without entering inbox in SMS menu.

- 1. Press (BTU) "Direct View".
- 2. Select "Yes" or "No".
- 3. Press (OK).
  - YES: Set to read msg without entering inbox in SMS menu.
  - NO : Set to read msg after entering inbox in SMS menu.

# Chapter 8 MAKING AN

**EMERGENCY CALL** 

Page 116 - Chapter 7

#### **EMERGENCY CALLING**

This 911 feature puts phone in the Emergency Call Mode when you dial the preprogrammed emergency number, 911. It also operates in the lock mode and out of the service area.

#### 911 IN LOCK MODE

The "911" call service is available even in the lock mode.

- 1. Enter "911" and press .
- 2. The call connects.
- 3. The phone exits the Lock Mode for 5 minutes.
  - When the call ends, the phone returns to the Lock Mode.

#### 911 USING ANY AVAILABLE SYSTEM

- 1. Enter "911" and press 🔊 .
- 2. The call connects.
- 3. The phone maintains the Emergency Mode for 5 minutes.
  - When the call ends, the phone returns to the Lock Mode.
  - The phone continuously attempts to receive service from any available system.



This chapter addresses using your handset to access the Wireless Internet.

- Get It Now
- Start Internet Browser
- Browser Menu

Page 118 - Chapter 8

#### **GET IT NOW**

Get It Now<sup>™</sup> is an exciting new technology offered by Verizon Wireless. With a Get It Now–capable handset, you can get direct downloads of popular software applications. You can take advantage of enhanced graphic applications like games, location-based services, and productivity tools, and personalize your handset with ringtone download and digital image sharing tools right on your wireless handset. Application availability is handset dependent.

- Get Tones : Download ringtones and personalize your wireless phone.
- Get Games: Turn your wireless phone into an arcade with exciting games like Tiger Woods Golf, UNO and Wheel of Fortune.
- Get Mail: Use e-mail application software to send, receive and manage mail from your wireless phone.
- Get Going: Download productivity and information applications to your wireless phone and manage expenses, check flights, and find a great restaurant.
- Get Pix : Carry your favorite photos with you on your wireless phone.
- Get Fun: Find a good joke, get concert information, and find out what the future has in store with applications like Laugh, MP3 Mobile and Magic 8 Ball.

#### **DOWNLOADING APPLICATIONS**

- 1. Press 🔀 🕼 .
- 2. Select "Get it Now Apps" then press .
- 3. Select "Get it Now Shopping Cart" then press .
- 4. Select a folder in catalog with then press .
- 5. The phone will access your service provider's server. Follow the prompt to download applications.
- When a prompt appears, press 👵 to proceed or 🔘 to cancel.

#### **GET IT NOW**

#### **OPEN AN APPLICATION**

Applications that have been downloaded to the phone are stored in Get It Now in the phone's Main Menu. Each application is identified by an icon for easy identification.

- 1. Press 🔾 🐠, then select "Get it Now" and press 🔘 .
- 2. Select the application icon, then press .

Some applications require a network connection and use airtime. A message will appear on the phone display when you launch the application if airtime charges apply. Airtime usage applies whenever you are connected to the network.

Some applications may initiate a network connection without the user pressing  $\widehat{\ \ \ \ }$  on their wireless phone.

#### VIEW INFORMATION ON MEMORY AND LOG

You can continue to download applications to your Get It Now capable phone as long as you have memory available.

- 1. Press 💢 🐠 , "Get it Now", then press 🔘 .
- 2. Select "Get it Now Shopping Cart" then press .
- 3. Select "Settings" then press .
- 4. Select "Manage Apps" or "Log" then press .
  - Information : To view available memory.
  - Log: To view the application log.

Page 120 - Chapter 9 Chapter 9 Chapter 9 - Page 121

#### **GET IT NOW**

#### **DISABLE AND RESTORE AN APPLICATION**

If you attempt to download an application, but your phone's memory is full or nearly full you can disable applications to free up space.

- 1. Press 🔀 🐠 . "Get it Now" then press 🔘 .
- 2. Select "Get it Now Shopping Cart" then press .
- 3. Select "Settings" then press .
- 4. Select "Manage Apps" then press .
- 5. Select the application you wish to disable or restore.
- 6. Select "Disable" or "Restore" then press .

#### **REMOVE AN APPLICATION**

If you no longer want access to an application you can remove it from your phone. If you wish to use an application that has been removed, you must download and purchase it again.

- 1. Press 🔀 🗐 , "Get it Now" then press 🔘 .
- 2. Select "Get it Now Shopping Cart" then press .
- 3. Select "Settings" then press .
- 4. Select "Manage Apps" then press .

#### **GET IT NOW**

- 5. Select the application you wish to remove.
- 6. Select "Remove" and confirm by press .

Airtime charges will apply while removing applications billed with subscription pricing.

Page 122 - Chapter 9 Chapter 9 Chapter 9

#### START INTERNET BROWSER

#### **ACCESS THE INTERNET**

Your CDM-8425PTT allows you to browse various Internet websites directly from your phone. This provides you with access to up-to-date information such as news, sports, weather and stock quotes when you subscribe to Internet service with your service provider. Please contact your service provider for a list of available websites and service details.

1. To start your Internet browser and access websites through your wireless handset press 🔾 🗺 or press 🐗.

#### **BROWSER MENU**

#### **BROWSER MENU**

The browser menu lists the actions necessary to operate the browser.

Press or press to access the browser menu.

#### **BACK**

◆ To return previous page, press ♥ 5 or press ♥ , then press ♥.

#### **HOME**

◆ To display the homepage, press ♥ ⑤™ or press ♥ ⑤, then press ② №.

#### **EXIT**

◆ To exit the browser, press ♥ ⑤ or press ♥ , then press ⑥ .

#### **MARK SITE**

- ◆ To add the current page to your bookmark list, press ♥ ⑤ or press ♠ ♠, then press ♠ .
- "No bookmark service site" is displayed when the Internet site cannot support the bookmark service.

Page 124 - Chapter 9 - Page 125

#### **BROWSER MENU**

#### **BOOKMARKS**

◆ To view your bookmark list, press ♥ ⑤ or press ♠ ♠ , then press ⑤ .

This provides easy website access without entering its URL.

#### **INBOX**

◆ Display inbox list.

To select Inbox, press 5 for press then press 6 for 5

#### **RELOAD**

Reloads current page.

◆ To select Reload, press ♥ ⑤ or press ♠ ♦, then press ♥ .

#### **SETTINGS**

- ◆ Displays Browser Menu Settings.
- ◆ To select Settings, press 

  5 select Settings, press 

  5 select Settings, press 

  6 select Setti

#### HOMEPAGE

◆ Enables you to change the homepage. Menu settings include:

To select Homepage, press ⊡.

#### **BROWSER MENU**

#### **PROXY**

- ◆ Enables you to select another WAP PROXY.
- ◆ To select Set UP.Link, press <sup>2</sup>ABO.

#### **CIRCUIT LINGER**

◆ To select Circuit Linger Timer, press (3<sup>™</sup>).

#### **SCROLL MODE**

◆ To select scroll mode, press ◄⊶.

#### **SCROLL SPEED**

◆ To select scroll speed, press ⑤⋅⋅⋅⋅.

#### **KEY PRESS TIMEOUT**

#### **SECURITY**

- ◆ Displays Security Menu Options.
- ◆ To select Security, press √ .

#### **ADVANCED**

- ◆ Displays Advanced Menu options.
- ◆ To select Set UP.Link, press ®™.

#### SHOW URL

Displays the URL (Uniform Resource Locator) of the current page.

1. To select Show URL, press 🕒 .

#### • RESTART BROWSER

Causes the deck history and deck cache to be cleared and starts a new session with the UP.Link.

1. To select Restart Browser, press 240.

Page 126 - Chapter 9 - Page 127

# **MEMO**



Your phone works as wireless modem when connected to a PC or a Laptop computer with a data interface cable. This chapter shows you how to choose the correct settings for this to properly function.

Page 128 - Chapter 9 Chapter 10 - Page 129

#### **DATA SVC**

#### CONNECTION

To select a connection mode based on the handset usage:

- 1. Press <a> [MENU] <a> €</a> <a> €</a>.
- 2. Select one of the following connection modes:
  - Voice Call: To receive a voice call.
  - Data Only: To receive data when connected to PC.
  - Fax Only: To function as a fax when connected to PC.
- 3. Press (OK) to save.

NOTE: This function is available only when the phone is connected to a data cable.

# Chapter 11 SAFETY INFORMATION

- Safety Information for Wireless Handheld Phones
- Safety Information for FCC RF Exposure
- SAR Information
- FDA Consumer Update

Page 130 - Chapter 10 Chapter 11 - Page 131

Read This Information Before Using Your Handheld Portable Cellular Telephone

#### **EXPOSURE TO RADIO FREQUENCY SIGNALS**

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) \* NCRP Report 88 (1986) \* ICNIRP (1996) \*

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

The design of your phone complies with the FCC guidelines (and those standards).

#### \*:

American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Nonionizing Radiation Protection.

# SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

#### **ANTENNA CARE**

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

#### PHONE OPERATION

Normal Position: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

#### Tips on efficient operation:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

#### **DRIVING SAFETY**

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

Also, if using your phone while driving please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions require.

Page 132 - Chapter 11 Chapter 11 - Page 133

#### **ELECTRONIC DEVICES**

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

#### **Pacemakers**

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

If you have a pacemaker:

- ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

#### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

# SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

#### **ELECTRONIC DEVICES**

#### Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

#### **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

#### **Posted Facilities**

Turn your phone OFF where posted notices so require.

Page 134 - Chapter 11 Chapter 11 - Page 135

#### **OTHER SAFETY GUIDELINES**

#### Aircraft

FCC Regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

#### **Blasting Areas**

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

#### **Potentially Explosive Atmospheres**

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle's engine.

# SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

#### PRECAUTIONS AND WARNINGS

Please read and understand all of the Precautions and Warnings contained in this manual before attempting to operate your phone.

- DO NOT use this equipment in an extreme environment where high temperature or high humidity exists, such as near a heater or in a closed car parked in the sun.
- DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using the unit, lay down the unit to avoid possible damage due to instability.
- 3. DO NOT expose this equipment to liquids such as rain or spilled beverages.
- DO NOT use unauthorized accessories. Use of unauthorized accessories may result in fire, electric shock or other bodily injury.
- DO NOT disassemble the phone or its accessories. If service or repair is required, return the unit to an authorized Audiovox service center. If unit is disassembled, the risk of electric shock or fire may result.
- DO NOT short-circuit the battery terminals with metal items etc.
- DO NOT use harsh chemicals, cleaning solvents or strong detergents to clean this phone. Always clean it with a soft, damp cloth.
- 8. DO NOT paint this phone. This can clog moving parts.

Page 136 - Chapter 11 Chapter 11 - Page 137

#### **OPERATING PROCEDURES**

Never violate any of the following Rules and Regulations of the FCC when using your phone. The following offenses are punishable by fine, imprisonment, or both:

- Using obscene, indecent, or profane language.
- Using the unit to give off false distress calls.
- Wiretapping or otherwise intercepting a telephone call, unless that person has first obtained the consent of the parties participating in the call.
- Making anonymous calls to annoy, harass, or molest other people.
- Charging to an account without authorization to avoid payment for service.
- Refusing to yield a party line when informed that it is needed for an emergency call (It is also unlawful to take over a party line by stating falsely that it is needed for an emergency).

# SAFETY INFORMATION FOR FCC RF EXPOSURE

WARNING! Read this information before using your phone

#### **CAUTION**

In August 1996, the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

#### **Body-worn Operation**

This device was tested for typical body-worn operations with the back of the phone kept 2.0 cm. from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 2.0 cm. separation distance between the user's body and the back of the phone, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Note: For more information about RF exposure, please visit the FCC website at www.fcc.gov.

Page 138 - Chapter 11 Chapter 11 - Page 139

#### SAR INFORMATION

#### THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.\* Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.25 W/kg and when worn on the body.

#### SAR INFORMATION

as described in this user guide, is 0.34W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/fccid after searching on FCC ID PP4TX-60B.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) web-site at http://phonefacts.net.

\* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Page 140 - Chapter 11 Chapter 11 - Page 141



#### U.S. Food and Drug Administration -Center for Devices and Radiological Health Consumer Update on Mobile Phones

#### 1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

# 2. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists. Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

• Support needed research into possible biological effects of RF of the type emitted by wireless phones;

- Design wireless phones in a way that minimizes any RF expo sure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

#### 3. What kinds of phones are the subject of this update?

The term "wireless phone" refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety

Page 142 - Chapter 11 Chapter 11 - Page 143

#### 4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

#### 5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

#### 6. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators.

Page 144 - Chapter 11 Chapter 11 - Page 145 of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

#### 7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects.

Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (http://www.fcc.gov/oet/rfsafety) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

#### 8. What has FDA done to measure the radiofrequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test

methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissuesimulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

#### 9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products—and at this point we do not know that there is-it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

 If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

#### 10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and

Page 146 - Chapter 11 Chapter 11 - Page 147

#### 11. What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that that no interference occurs when a person uses a "compatible" phone and a "compatible" hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.


#### 12. Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones: (http://www.fda.gov/cdrh/phones/index.html)
- Federal Communications Commission (FCC) RF Safety Program: (http://www.fcc.gov/oet/rfsafety)
- International Commission on Non-Ionizing Radiation Protection: (http://www.icnirp.de)
- World Health Organization (WHO) International EMF Project: (http://www.who.int/emf)
- National Radiological Protection Board (UK): (http://www.nrpb.org.uk/)

Page 148 - Chapter 11 Chapter 11 - Page 149

# **MEMO**

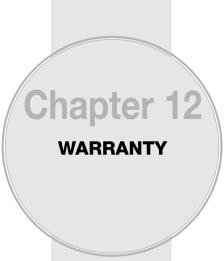

- Protect Your Warranty12 Month Limited Warranty

#### **PROTECT YOUR WARRANTY**

Read your Warranty carefully, with the special consideration to paragraph seven of the Limited Warranty for your unit.

"Warranty does not apply to... or to any product or part thereof which has suffered through alteration... mishandling, misuse, neglect or accident".

Many companies are making look alike accessories and in some cases, promoting that their product is equal to or better than the Audiovox product. Be careful. Some of these products may not be compatible to use with your Audiovox product and may damage the unit or cause it to malfunction. If service is required on your unit and it is determined that a non-Audiovox accessory has created the problem with your unit, the Warranty will not apply. In addition, if the unit has already suffered irreversible damage by reason of a non-compatible accessory, the Warranty will be voided. To protect your Warranty, use only compatible accessories which cannot damage or interfere with the functioning of your Audiovox product.



#### AUDIOVOX COMMUNICATIONS CORP.

555 Wireless Blvd., Hauppauge, New York 11788, 800-229-1235 16808 Marguardt Avenue, Cerritos, California 90703, 562-802-5100

#### **AUDIOVOX COMMUNICATIONS CANADA CO.**

5155 Spectrum Way, Unit #5, Mississauga, Ontario Canada L4W 5A1, 800-465-9672

#### 12 MONTH LIMITED WARRANTY

AUDIOVOX COMMUNICATIONS CORP. (the Company) warrants to the original retail purchaser of this Audiovox Handheld Portable Cellular Telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not assignable or transferable.

This Warranty does not apply to:

- (a) Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b) Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.
- (c) Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d) Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;

Page 152 - Chapter 12 Chapter 12 Chapter 12 - Page 153

#### 12 MONTH LIMITED WARRANTY

- (e) Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;
- (f) Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the Cellular System as a whole.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place or purchase for repair or replacement processing. In addition, for reference to an authorized Warranty station in your area, you can telephone in the United States (800) 229-1235, and in Canada (800) 465-9672 (in Ontario call 905-712-9299).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT

#### 12 MONTH LIMITED WARRANTY

WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage, so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

**IN U.S.A.:** Audiovox Communications Corp.

555 Wireless Blvd. Hauppauge, NY 11788 (800) 229-1235

**IN CANADA:** Audiovox Communications Canada Co.

5155 Spectrum Way, Unit #5 Mississauga, Ontario L4W 5A1

(800) 465-9672

Page 154 - Chapter 12 Chapter 12 - Page 155