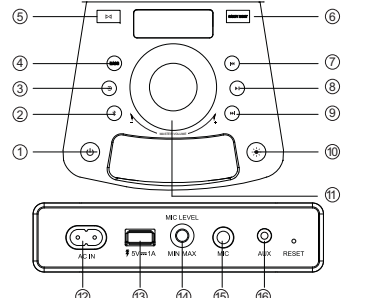 
 
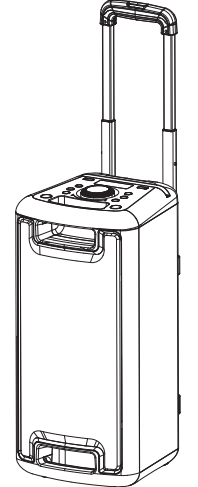 
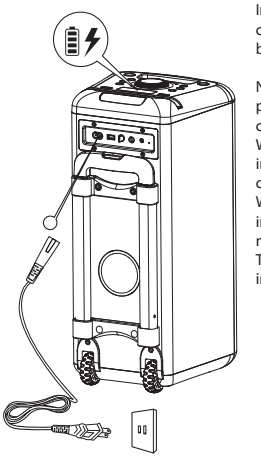 
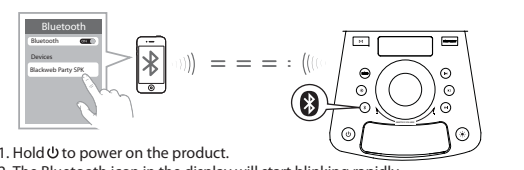 
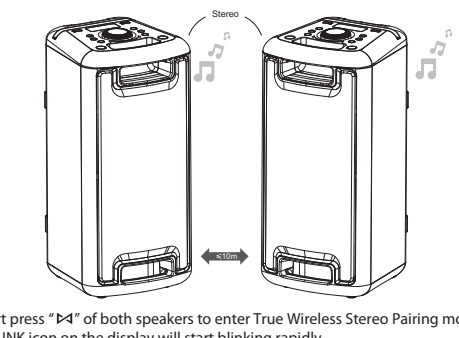 
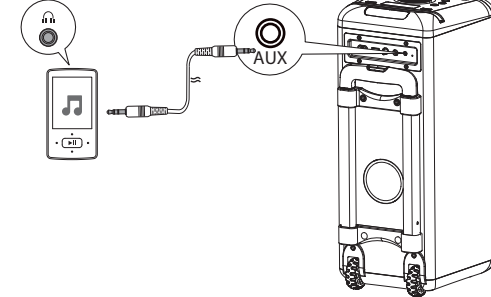 
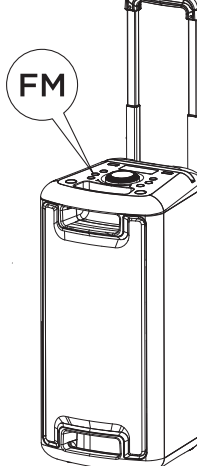 
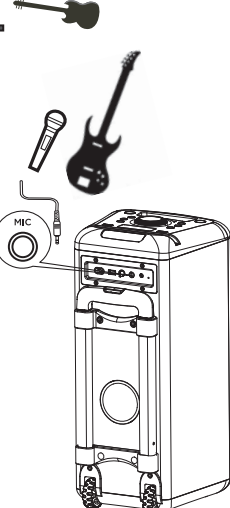 
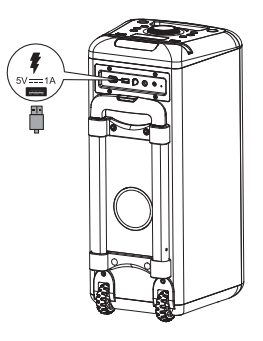 


 PORTABLE 160-WATT BLUETOOTH® PARTY SPEAKER Model: BWD19AA511 PRODUCT GUIDE Ver 01 Rev 01/22/18	IMPORTANT SAFETY INSTRUCTIONS - Read these instructions. - Keep these instructions. - Heed all warnings. - Follow all instructions. - Do not use this apparatus near water. - Clean only with dry cloth. - Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. - Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. - Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. - Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the pointwhere they exit from the apparatus. - Only use attachments/accessories specified by the manufacturer. - Use only the card, disc, record, cassette or cable specified by the manufacturer, or sold with the apparatus. When a card is used, use caution when removing the card apparatus combination to avoid injury from the card. - Unplug this apparatus during lightning storms or when unused for long periods of time. - Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. - Power Source: This product should be connected to a power supply only of the type described in these operating instructions, or as marked on the unit.	- Water and Moisture: This product should be kept away from direct contact with liquids. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus. - CAUTION: Danger of explosion! Battery is incorrectly replaced. Replace only with the same or equivalent type. Batteries in a battery pack or an installed battery shall not be exposed to excessive heat such as sunlight, fire, etc. - When the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable. - This symbol means the equipment is a Class I or double-insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth. - Do not install this equipment in a confined or "boxed-in" space such as a cupboard or similar unit, and maintain good ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspapers, newspapers, curtains, etc. - This apparatus is for professional use only. - When moving or not using the appliance, secure the power cord (e.g., wrap it with a cable tie). Be careful not to damage the power cord. Before using it again, make sure the power cord has not been damaged. If the power cord has been damaged at all, bring the unit and cord to a qualified service technician for repair or replacement as specified by the manufacturer. - WARNING: Please refer to any important information (e.g., electrical safety, etc.) printed on the exterior side enclosure before installing or operating the product. - WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The use of this apparatus in moderate climates where heat waves occur, such as lighted candles, should be placed on the apparatus. Minimum distances from around the apparatus for sufficient ventilation to prevent an environment, dispose of used batteries according to your local laws or regulations.	SERVICE INSTRUCTIONS Disconnect power cord before servicing. Replace critical components  only with factory parts or recommended equivalents. For AC line powered units - Before repairing repaired unit to user, use an ohmmeter to measure from both AC plug blades to all exposed metal parts. The resistance should be more than 2,000,000 ohms. SAFETY NOTICES CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE ANY COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY. CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN DANGEROUS VOLTAGE Warning is intended to alert the user to the presence of an un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock. SAFETY	INSTRUCCIONES IMPORTANTES DE SEGURIDAD - Lee estas instrucciones. - Conservar estas instrucciones. - Prestar atención a las advertencias. - Seguir todas las instrucciones. - No usar este equipo cerca de agua. - Limpiar solo con un paño seco. - No bloquear las aberturas de ventilación. Instalar el equipo de acuerdo con las instrucciones del fabricante. - No instalar el equipo cerca de fuentes de calor tales como radiadores, aberturas de entrada de calefacción, colectores u otros aparatos (incluidos amplificadores) que generen calor. - No anclar la función de seguridad del enchufe tipo polarizado con conexión a tierra. Un enchufe polarizado tiene dos patillas, una más ancha que la otra. Un enchufe de tipo de conexión a tierra tiene dos patillas y una clavija de punta a tierra. La patilla ancha o la terna o clavija son para su seguridad. Si el enchufe previsto no encaja en su tomacorriente, consulte a un electricista y pídaele que le reemplace del tomacorriente obsoleto. - Proteja el cable de alimentación de modo que no lo pinche ni quede atrapado, particularmente en los enchufes, tomacorrientes y el punto donde sale del equipo. - Use solo accesorios y accesorios especificados por el fabricante, o los vendidos con el equipo. Cuando se conecte a un tomacorriente de suministro eléctrico, use la conexión a tierra de protección. - Use solo el cable especifico, triple, trenzado o trenza especificado por el fabricante o vendido con el equipo. Si usa un cable, tenga cuidado al mover la combinación de cable y equipo para evitar que se dañe y se dañe. - Desconecte este equipo durante las tormentas eléctricas o cuando no lo use por períodos prolongados. - Seleccione toda versión o personal de servicio calificado. No repare servicio técnico de equipo o dañe de cualquier manera, por ejemplo si se dañara el cable o el enchufe de alimentación, si se dañara líquido o cualquier objeto dentro del equipo, si el mismo está expuesto a la lluvia o la humedad, si no funciona normalmente o se daña caer.	- Suministro eléctrico - Conecte este producto solamente a un suministro eléctrico del tipo que se describe en estas instrucciones de operación o según se indique en la unidad. - Agua y Humedad: Este producto se debe mantener fuera del contacto directo con los líquidos. Exponerlo no debe ser expuesto al agua o a la salpicadura y ningún objeto lleno de líquidos, como serían los floreros, debe ser colocado cerca del aparato. - PRECAUCIÓN: Peligro de la explosión si la batería se substituye incorrectamente. Substituir solamente por el mismo o el tipo equivalente. Las baterías (un bloque de baterías o una batería instalada) no se deben exponer a calor excesivo, tal como la luz solar, el fuego, etc. - Cuando se usa el enchufe del suministro eléctrico o el adaptador de un artefacto como dispositivo de desconexión, el mismo debe permanecer listo a operar. - Este símbolo significa que el equipo es un artefacto eléctrico Clase I o de doble aislamiento. Está diseñado de manera tal que no requiere un conexión de seguridad a la tierra eléctrica. - No instale este equipo en un espacio confinado o "dentro de una caja" tal como una habitación o una unidad similar, y mantenga buenas condiciones de ventilación. No debe impedir la ventilación cubriendo las aberturas correspondientes con elementos tales como periódicos, mantas, cortinas, etc. - Este aparato es para uso profesional únicamente. - Cuando instale o no use el artefacto, asegure el cable de alimentación (por ejemplo, envuélvalo con un precinto). Tenga cuidado de no dañar el cable de alimentación. Antes de usarlo nuevamente, asegure de que el cable de alimentación no está dañado. Si dicho cable presenta algún daño, lleve la unidad y el cable a un técnico de servicio calificado para su reparación o reemplazo según lo especifica el fabricante. - ADVERTENCIA: Antes de instalar o operar el producto, consulte toda la información importante sobre la relativa electricidad, seguridad, etc., impresa en la envuelta inferior exterior o el panel trasero. - ATENCIÓN: No retire ni toque de nuevo el cable de corriente, no exponer este aparato a las placas o a la humedad. La usage de cet appareil sous un climat tempéré, évitez de source des flammes non protégées, gardez-le des bougies d'allumage. Éloignez-le des sur cet appareil. Écarter de distance un minimum autour de cet appareil pour la ventilation suffisante pour protéger votre environnement, la disposition de batteries saines conformément à la loi locale ou aux règlements.	LAS INSTRUCCIONES DE SERVICIO Desconecte el cable eléctrico antes de ingresar al servicio. Substituya los componentes críticos  solamente por los piezas de la fábrica o las piezas equivalentes recomendadas. Para los unidades accionadas por CA - Antes de devolver la unidad reparada al utilizador, utilice un ohmmetro para medir entre las dos líneas del enchufe de CA y todas las partes expuestas. La resistencia tiene que ser más de 2,000,000 ohms. SEÑALES DE ADVERTENCIA PRECAUCIÓN: PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA NO QUITE NINGUN TAPADERO. DENTRO DE LA UNIDAD NO HAY COMPONENTES ÚTILES PARA EL UTILIZADOR. PARA EL SERVICIO SE DEBE ENVIAR SOLOAMENTE AL PERSONAL DE SERVICIO CUALIFICADO. PRECAUCIÓN RIESGO DE DESCARGA ELÉCTRICA NO SE ABRA VOLTAJE PELIGROSO NO AJUSTADO La señal de relámpago con la punta de la flecha dentro del triángulo equilateral está puesta para alertar al usuario de la presencia del "voltage peligroso no ajustado" dentro del recinto de producto que puede tener la magnitud suficiente de crear un riesgo de descarga eléctrica.	Speaker Overview  - Power ON/OFF - Bluetooth - Source - Bass boost - TWS - Party light - Previous/hold to seek FM station - Next/hold to seek FM station - Light mode - Master volume control - AC input port - USB charging output - Microphone/Guitar volume control - AUX input	Package Contents Main unit x 1 Power cable x 1 Product Guide x 1  
--	---	--	--	---	---	--	--	---

Charging  Insert the included power cable to charge the unit. The charging icon will be on in the display when charging. Notes: The unit can be used with the power cable while it is simultaneously charges the battery. When four charging indicators light up, indicates that the battery is low and needs to be recharged. To save power, when the speaker is not in use, always turn off the unit.	Bluetooth pairing  - Hold 1 to power on the product. - The Bluetooth icon in the display will start blinking rapidly. - Active the Bluetooth function on your device and search Bluetooth devices, and select "Blackweb Party SPK" to start connecting. - Once paired, the Bluetooth icon in the display will turn on steadily, and you will hear "Bluetooth Connected". - Play music on your device paired and connected with the speaker. During music play: - Turn the Master volume knob to adjust volume. - Press 1 to pause or resume music play. - Press 1 to skip to the previous/next song. - Press 1 to get rich bass. "BASS BOOST" will light up in the display. Notes: This speaker supports automatic connection with a previously paired device after power-off and power-on again. To pair with a new Bluetooth device or connect a previously paired device, first hold 1 to power on the product, and then repeat the above step 3.	Wireless Stereo Pairing  - Short press 1 of both speakers to enter True Wireless Stereo Pairing mode, the LINK icon on the display will start blinking rapidly. - When the two speakers connected, LINK icon will turn on steadily. - Long press 1 to disconnect True Wireless Stereo mode. - Follow the instruction of your device to pair the speakers and play music. With True Wireless Stereo technology, you can connect your speaker to another one and explore the best sound effects with left and right sound channels separated on different Bluetooth speaker.	Use a 3.5mm cable (not included) to connect the speaker to another audio source. Play and control music on your audio device, and use the volume knob on the speaker to adjust volume if necessary. Notes: In AUX mode, 1 can't be controlled. 	FM  - Press 1 to the FM mode. - A Press 1 repeatedly to tune to a station step by step. - Hold 1 to tune to a station automatically. - Turn the Master volume knob to adjust volume. To program FM radio station - Hold 1 2 seconds to search and program available stations. - LED display will show the program numbers such as: P. 1 or P. 2 (P. 100MHz). - Tune to a station with 1, and then press 1 to assign above program number to it. When successfully, the LED display will show "SAVE". - Short press 1 to select the corresponding station in your program list. Notes: The speaker will remember the last station it was on and start at that station when powered off and on again.	 - Connect your Microphone(not included) or Guitar(not included) to the MIC/Guitar socket. - Play Guitar through the speaker. - Start along with the Microphone when music played on Bluetooth/Aux/FM mode. - Turn the MIC/GUITAR knob to adjust the Microphone or Guitar volume.	Connect your device's charging cable through the 5V—1A charging socket to charge. USB charging only functions when the unit's power is turned on. Notes: To charge smartphones and tablets faster, put the device's screen to sleep. 	Technical Specifications - Output power (RMS): 80W - Battery type: Lead-acid rechargeable - Bluetooth transmitter frequency range: 2.402 ~ 2.480GHz	USER MANUAL INSERTS FOR FCC ID - Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. - NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. 4. RF Exposure Statement To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance between: Place this unit so your body only the supplied antenna. Product for West-Met Stores, Inc. Benningville, AR272714-Header 1-800-923-6278
---	--	---	---	---	--	---	---	---