


7941 Multimedia Keyboard Block diagram

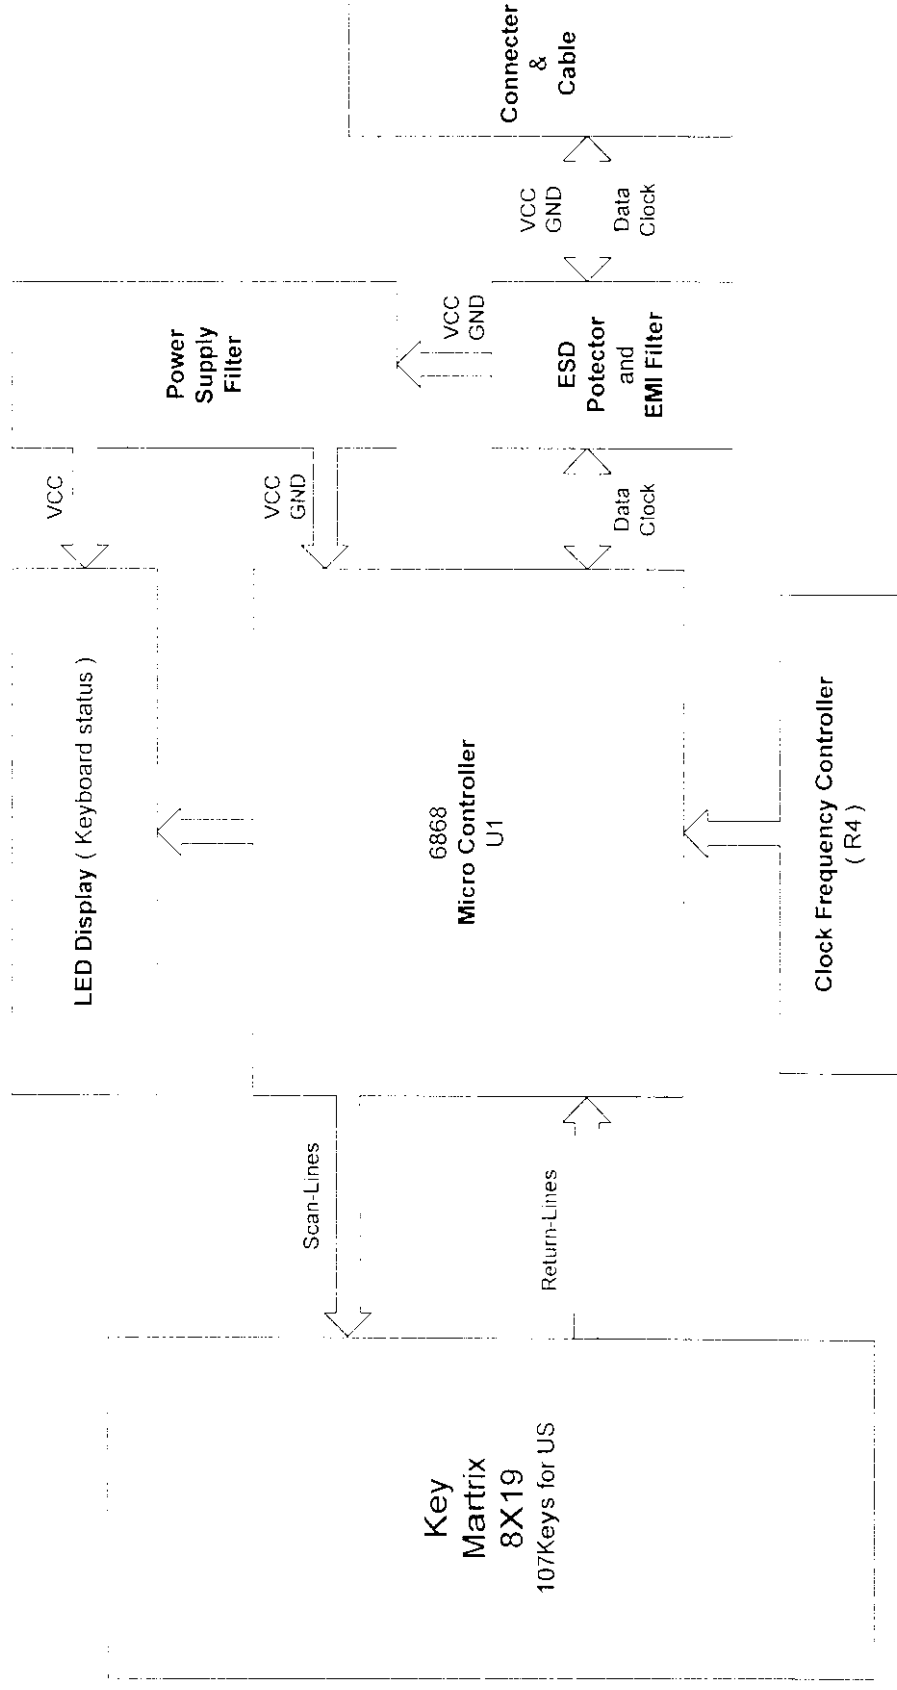

C-7941-UMC

	S0	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	S13	S14	S15	S16	S17	S18
139	Game	121	136	137	135	134	133	132	45	131	142	77	141	67	65	130	128	129	138
35	G	H	J	D	S	X	76	46	81	86	140			60		92	97	68	107
8	&	-	F12	Print	+	Back	115	116	80	85	56		78	14	66	91	96	82	113
9	*	^	6	5	4	3	125	114	1	126					58	89	84	79	110
25	O	I	P	F11	{	A	75	28	42	43	57				143	105	106	83	112
10	(	9	F9	K	L	:	41	52	51	29				62	144	100	95	90	101
11	)	0	F7	F6	B	V	53	54	55	61					64	103	98	93	102
23	U	Y	T	R	E	W	17	48	16	30	44				145	99	104	108	2
							Q	C	Tab	Caps	Shift				Wake	0	Del	Enter	!
										Lock	Left				up	Ins		(Pad)	1