



Operation instruction

	Serial number	Buttons/	ICONS	Function definition	Operation instruction	Prompt tone	Light effect/indicator light
	1	电源键	. . . :	1. Turn it on Step 2 Turn it off 3.EQ switch	1. Boot Press and hold for 3 seconds to boot (if USB or AUX is plugged in, boot default stat use mode.) 2. Power off. Press and hold for 3 seconds to power off (on state) 18 boot no operation, or not connected to Bluetodth, 15 minutes no connection, autemate. shadower, 3.0% Switch: Click switch EQ1/EQ2EQ3	 Boot guest audio source S-Suddown guest audio source SEQ: Customer audio source: EQ1 one ring /EQ2 two rings /EQ3 three rings; 	 Power on: the battery indicator light up, and the Bluetooth indicator flasher (if the USB flash drive or AUX is plugged in, the Bluetooth indicator lig is long bright) Shutdown: All lights are off
	2	灯光雕	12.	1. Switch the light effect	1. Light effect switch: Short press cycle switch light effect (light effect egenence; blue - red - green - pink - aqua blue - off) effect sequence; blue - red - green - pink - aqua blue - off) 2. Fold down 35 to turn offfon the indicator in the second of the second o	1	Light effect sequence: Blue - red - gre - pink - aqua blue - off) * Pulsating light effect: middle stretchi to both sides
	3	house		Volume adjustment Switch songs	Add volume: Click or click continuously to add volume (total 16 levels of volume) Next: Press and hold the next song for 2S	Maximum volume: customer specified voice package Next: No	,
	4	NEW		Volume adjustment Switch songs	Increase volume: Click or continuously click to reduce volume (a total of 16 levels of volume) Previous track: Press and hold the previous track for 2S	Minimum volume: None Previous: No	١
	5	暂停键		1. Pause/play	Pause/Play: Playing a song status: Click Pause/Play		
	6	TWS互联键	v."	1.TWS on/off 2. The Bluetooth is disconnected 3. Speaker reset	1.TWS interconnection: Hold down 15 to enter the TWS interconnection mode, 605 when no peripheral devices are found, the TWS pairing state automatically entits. You can also fould down 15 to eith TWS mode? 2. Blawbooth Disconnect: Click Blabsooth Disconnect: 2. Blawbooth Disconnect: Click Blabsooth Disconnect and the Committee of the Committe	TWS on/off: guest audio source TWS paired/disconnected: guest audio source Bluetooth disconnected: guest audio source Speaker resett guest audio source	1.TWS to be paired: The white indicate is blinking is blinking 2.TWS pairing is successful: The white indicator is on 3. Reset All lights go out
ı	-	USB-A	١.	Speaker charging	TYPE-C, connect to a DC SV power supply for charging * Support while filling	١	Charging: LED light flashes Full charge: LED long bright
		ALIX	٨	1.USB plays music	Insert U disk, automatically switch USB mode and play songs (MP3/WAV/APE/FLAC audio format is supported)	USB mode Prompt tone: Universal voice package	Playing music: Bluetooth indicator ligh is on Pause: The Bluetooth indicator is stead
		Charging light	٨	AUX playback	Insert AUX to automatically switch AUX mode and play songs	AUX mode prompt tone: universal voice package	Playing music: Bluetooth indicator light is on Pause: The Bluetooth indicator is stead
		Bluetooth indicator	١	Battery indicator	Charging indicator light corresponding to the amount of electricity, white light flashing. Fully charged: The white light is on A total of 4 light, each himp represents 25% power indicator, that it, the first 25%, the second 50%, the third 75%, the fourth 100%). Know battery: The battery drops to 20%, and the first indicator flashes until the battery runs out	There is no	4 white lights
	-	TWS interconnectio n indicator	\	Bluetooth status Indicator	Bluetooth to be paired status: The blue light is blinking Bluetooth connection status: blue light on AUX mode: The indicator is steady on TF card mode: The indicator is steady on	Successful connection: pure prompt tone (guest voice package) Bluetooth disconnect: pure prompt tone (guest voice package)	V.
		Low battery reminder	\	TWS interconnection status indication	1.TWS to be paired: The white indicator is blinkling 2.TWS pairing is successful: The white indicator is on	Enter TWS mode: pure prompt tone (guest voice package) TWS interconnection success: pure prompt tone (guest voice package)	Λ.
			-		Speaker nower drops to 20% start low power reminder the	1	

1. Long press the power button for 3S, switch to Bluetooth mode, open the phone Settings, search for "Soundstik V2" in Bluetooth, click Connect, the connection is successful, and then start playing audio through Bluetooth * Bluetooth connection valid distance is 10 meters"

Bluetooth disconnect:1. Click the "TWS" button to disconnect Bluetooth, or in the phone Settings, click Disconnect

TWS Interconnection:

1. Both speakers have been powered on, and in the Bluetooth unpaired mode, long press the "TWS" interconnection key of one speaker, 3S will enter the TWS mode and perform automatic pairing, and there will be a pure prompt tone if the pairing is successful;

2. Turn on the Bluetooth of the mobile phone to search for the pairing name
"Soundstik V2" and click Connect. If the connection is successful, the two
speakers can play songs at the same time;

* The effective distance of TWS interconnection is 6-8M;"

Speaker charging:

1. With DC5V power supply, connect the speaker and adapter, you can charge the speaker, full charge time is expected to take 4-5H Restore factory Settings:

1. Hold down the TWS key for 15S. The speaker will shut down and restore factory Settings.

factory Settings.

Product parameter:

Bluetooth version: 5.3 Rated power: 2X10W Battery capacity: 4400mAh/7.4V Charging time: 4-5H Usage time: 12H(50% volume without lights) Bluetooth distance: 10 meters

Warm reminder:

1. Please read the instructions carefully and use the product according to the operation instructions 2. Please use or store the product at room temperature 3. Do not use this product near heat sources, such as radiators, heaters or other heating instruments 4. To protect your hearing and extend the service life of the product, do not turn the volume to the maximum for a

5. Please choose a charger that has passed the formal manufacturer and safety certification to charge the product

6. It is recommended to fully charge the product before use for the first time. If you do not use the product for a long time, please fully charge the product every 3 months to avoid battery damage;

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.