



MINI WIRELESS BUDS

TRUE WIRELESS EARPHONES
WITH CHARGING CASE



MANUAL

XB09-0134-BLK

855.999.6041 | WWW.XTREMECABLES.COM

CHARGING YOUR MINI WIRELESS BUDS

The earphones and charging case have built-in rechargeable batteries. For optimal performance charge the batteries for 1 hour before use.

To charge the case: Connect the charging cable to the charging case and to a powered USB charging adapter or other USB charging source. The case's blue charging indicators will flash during case charging. The case is fully charged when the all 4 blue charging indicators are illuminated.

To charge the earphones: Place the earphones in the charging case and close the lid. While charging the earphones will illuminate red and the case's blue indicators will illuminate. When fully charged the indicators will turn off. Once fully charged the earphones can play for up to 3 hours, or can remain in standby for up to 150 hours. A fully charged case should charge the earphones up to 3 times.

POWERING ON

Remove the earphones from the case. The earphones will normally be powered on when they are removed from the charging case. If the earphones are powered off, touch the left and right earphone's touch controls for 3 seconds to power them on.

To power off, touch the left and right earphone's touch controls for 3 seconds. When the earphones are paired, powering off one earphone will power the other one off automatically.

PAIRING

1. Remove the earphones from the charging case.
2. They will automatically pair to each other and go into pairing mode to connect to your device.
3. Enable Bluetooth on your phone or other Bluetooth device that you wish to pair to.
4. Select "Xtreme XB09-0134-BLK" from the list of available devices to pair and connect.

If the earphones do not automatically pair, press the touch controls on both of the earphones at the same time for 3 seconds.

For best results during pairing, ensure that the earphones are unobstructed and in close proximity to the device you are trying to connect to. The earphones will be automatically paired after the first successful pairing to your Bluetooth device.

CALL ANSWERING

Press the right or left earphone's touch controls once to answer a call.

CALL HANG-UP

Press the right or left earphone's touch controls once during a call to hang up.

CALL REJECTION

Press the right or left earphone's touch controls for 2 seconds to reject a call.

CALL BACK

Touch the left or right earphone's touch control pad twice to call back the most recent call.

LOW BATTERY PROMPT

When the earphone battery level is low, the low battery tone will be played every 30 seconds until the earphone powers off.

TO CONTROL THE VOLUME

Use the music player device adjust the sound volume level.

TIPS:

- When you put the earphones in your ears, rotate them for the best secure fit.
- To avoid subjecting the ears to excessive volume, be careful to adjust the volume to the proper level.
- Do not use in high-traffic areas or environments where accidents could occur because of inattention or slowed reaction.
- Note that Bluetooth earphone signal can be degraded by interference of obstacles between the earphones and the Bluetooth device, by Wi-Fi or other high frequency signals, or if the product is brought out of range of the Bluetooth device.
- To ensure battery life do not store the case and earphones in an uncharged state for a length of time.
- Do not use abrasive cleaning solvents to clean the unit.

THIS ITEM CONTAINS A NON-REPLACEABLE BATTERY. WHEN THE BATTERY IS DEPLETED, PLEASE FOLLOW YOUR LOCAL OR STATE GOVERNMENT'S GUIDELINES FOR DISPOSAL.

CAUTION:

- Read all the instructions before using the product, and use the product as intended.
- Keep close supervision of this product if being used around children.
- Do not expose to rain or moisture, and do not use near water such as swimming pools, bathtubs, or sinks.
- Do not expose to heat sources, the sun, or leave in a hot vehicle. Exposure to fire or temperature above 212°F could cause an explosion.
- Do not disassemble, modify, or try to use for a non-intended purpose, and do not use if damaged or modified. Never insert objects other than the specified cables into the product.
- Disconnect the USB cable once the product is fully charged.
- Do not operate if damaged.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The illustrated products, specifications, and operation may differ from those supplied.

ONE YEAR WARRANTY

Xtreme warrants its products for one year against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

*Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service: customerservice@xtremecables.com.

Content is subject to change without prior notice. Some content may differ from how the product works with your specific device.

WHAT'S INSIDE

Mini Wireless Earphones
Charging Case
Micro USB Charging Cable
Instruction Manual

SPECIFICATIONS

Sensitivity: 120 $\pm$ 1-5dB

Earphone battery: 35mAh

Charging case battery: 300 mAh

Case charging time: 1 hour (with 5V, 0.5A charger)

Earphone charge time: 1 hour approx.

Music play time: 3 hours at approx. at 70% volume

Calling time: 2 hours approx.

Music play time: 3 hours approx.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.