 


Buttons and Features

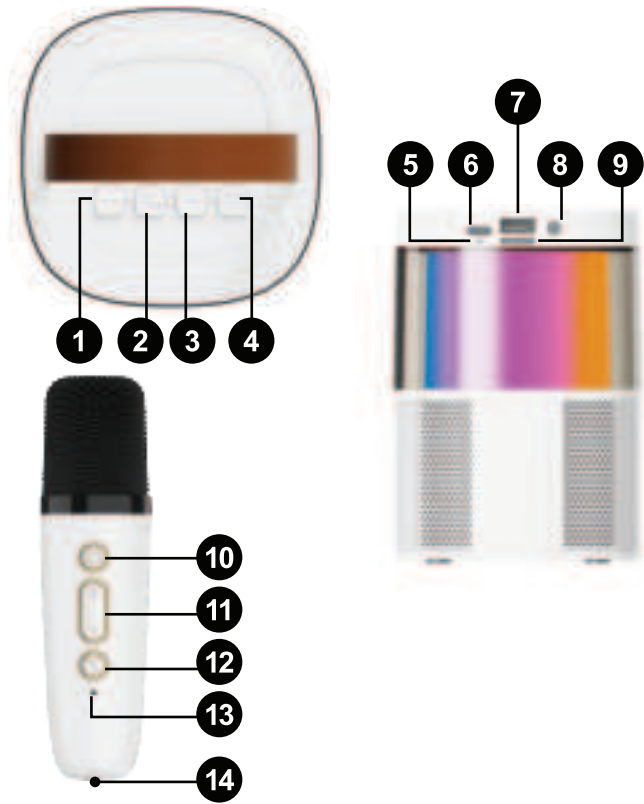

Buttons and Features

1	Vol-	Press once to decrease the volume of the speaker. Press and hold to play the previous song.
2	Power / Play / Pause	Press once to play the music. Press again to pause. Press and hold to turn the device on/off.
3	Vol+	Press once to increase the volume of the speaker. Press and hold to play the next song.
4	Mode	Press once to switch between the following modes: Bluetooth® / Memory Card / USB / AUX. Press and hold to turn the LED lights on/off. Press twice to change the light effect.
5	Indicator Light	This light indicates that the speaker is on.
6	Charging Port	Connects to charging cable.
7	USB Port	Connect to a USB device (sold separately).
8	3.5mm AUX Port	Connect to external device using an AUX cable.


Buttons and Features

9	Memory Card	Insert Memory Card here (sold separately).
10	Power	Press once to play music. Press again to pause the music. Press and hold for 2-3 seconds to turn the microphone on/off. Press twice to cycle between the 6 different voice effects.
11	Vol+ Vol-	Press once to increase/decrease the microphone's volume. Press and hold to play the next/previous song.
12	Karaoke	Press to turn Karaoke Mode on/off. Press and hold to dodge (the device will automatically adjust the volume according to input).
13	Indicator Light	This light indicates that the microphone is turned on.
14	Charging Port	Connects to the charging cable.

Note: Using the **Vol+/-** buttons on the microphone will increase/decrease the voice volume coming from the microphone. You can adjust the volume of the music separately using the volume controls on your connected external device (mobile phone/tablet/MP3 player).

Charging Your Speaker and Microphone

 Use the included USB-C® charging cable to connect your speaker/microphone to power. (Note: The USB-C® end of the cable should be connected to your speaker/microphone while the USB 2.0 end of the cable is connected to a power source.)

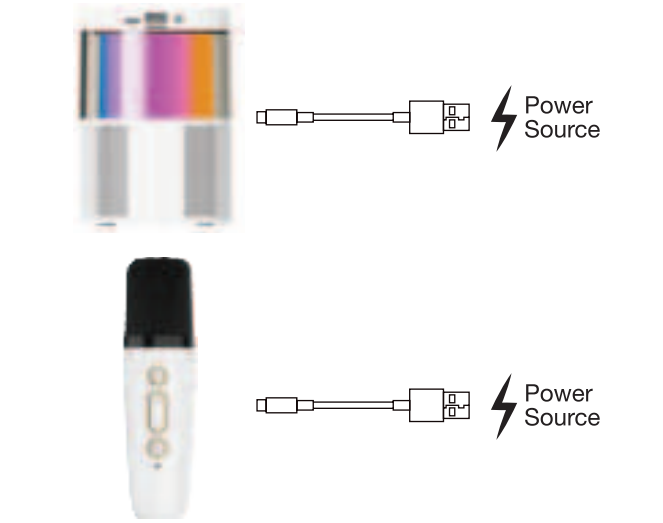

The indicator light on the speaker/microphone will turn red, indicating the device is charging. The light will turn off when the device is fully charged.

 
Setting Up Your Device (Bluetooth Mode)

- Press and hold the **Power button** on your speaker to turn it on.
- Press and hold the **Power button** on your microphone to turn it on. The microphone and speaker will automatically pair with each other.
- Press the **Mode button** on your speaker to enter Bluetooth® Mode. You will hear the voice prompt "Bluetooth®" indicating you are in Bluetooth® mode.
- On your external device (mobile phone/tablet/MP3 player), search for the Bluetooth® network "**KRMC200MC**" and connect to it.
- Once successfully connected, you are ready to play music from your external device.

AUX Mode and USB Mode

You may play music from an external device connected to the speaker via USB or AUX cables (sold separately).

To do this, simply connect your device to the speaker using the appropriate cable, then press the **Mode button** on your speaker to navigate to USB Mode or AUX Mode. You will hear a voice prompt indicating the mode you are in. You may then start playing music from your external device.

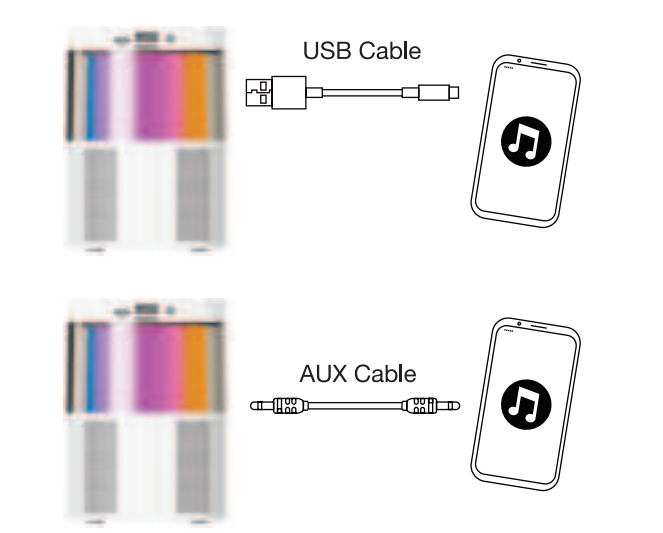

KRMC200MC  
Quick Start Guide

Wireless Bluetooth Mini Karaoke  
+ 2 Wireless Microphones

Memory Card Mode

To play music from a memory card:

- Press and hold the **Power button** on your speaker to turn it on.
- Press and hold the **Power button** on your microphone to turn it on. The microphone and speaker will automatically pair with each other.
- To play music from a memory card (sold separately), insert the card into the **Memory Card slot** on your speaker. The speaker will automatically switch to **Memory Card Mode**.

Proper Microphone Usage



Troubleshooting

Problem	Recommended Steps
No Bluetooth® connection	<ul style="list-style-type: none"><li>Press the Mode button on your speaker to enter Bluetooth® mode and reconnect to your Bluetooth® device.</li><li>Try adjusting the distance between the speaker and the bluetooth device.</li><li>The speaker may already be connected to a different device. Turn off Bluetooth® from the previously connected device before pairing to a new device.</li></ul>
There is no sound coming from the microphone	<ul style="list-style-type: none"><li>Make sure your microphone is charged and turned on.</li><li>The speaker and microphone may not have successfully paired. Please turn both devices off, then back on.</li></ul>
There is no music coming from the speaker	<ul style="list-style-type: none"><li>Check whether Bluetooth® was successfully paired.</li><li>Check if the sound was paused from the microphone. If so, press the Power button on the microphone to play the music.</li><li>Check if the volume on your external Bluetooth® device is turned up.</li><li>Check if the volume on your speaker or microphone is turned up.</li></ul>

Troubleshooting

Problem	Recommended Steps
There is noise interference	<ul style="list-style-type: none"><li>Adjust the distance between the speaker and your external Bluetooth® device.</li><li>Adjust the distance between the microphone and the speaker.</li></ul>
Device won't power on	<ul style="list-style-type: none"><li>Make sure your device is charged.</li></ul>

Specifications

- Multi-Colored LED Lights
- 3 LED Light Modes with LED Light Sync with Music
- 6 Voice Effects
- 3 Hour Battery Life (Battery life is measured as number of playtime hours with volume set at 50%)
- In the Box: 1x Portable Wireless Karaoke Machine, 2x Wireless Karaoke Microphones, USB-C® Charging Cable, Quick Start Guide, Warranty Card

Need Help?

For customer support regarding your device, please submit a request by emailing [support@dpaudiovideo.zendesk.com](mailto:support@dpaudiovideo.zendesk.com). You will be provided a ticket number regarding your inquiry, which you can refer to when contacting us further.

You may also reach a Core Innovations customer service representative by calling **1-833-909-CORE (1-833-909-2673)**. We are available Monday - Friday, 9am - 5pm PST, except major holidays. Core Innovations strongly urges customers to email their inquiry prior to calling, as this will enable us to better assist you.

Please make sure to note the model number and a description of your inquiry.

Thank you for purchasing a Core Innovations product.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

For information on recycling, please visit <https://www.coreinnovationsinc.com/support/>

