

● Audio Playback Mode

4) Sector Repetition (A↔B)



<Setting A Point>



<Setting B Point>

- Press the FUNC button shortly in the playback mode to start sector repetition.
- On:** Press the FUNC button once shortly during playback to set the A point.
Press the FUNC button shortly again to set the B point. Then, playback will be repeated between the point A and B.
- Off:** Press the FUNC button once shortly.

5) Audio Setting Mode

Collection of frequently-used audio menus

 
Press the FUNC button longer in the stop or playback mode to enter into the audio setting mode.

Press FUNC button in the audio play mode, the audio setting mode will be switched between EQ Setting⇒Repeat.



Press Longer

EQ Setting

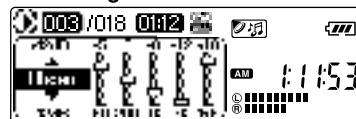


- ▶ Set the EQ mode using the REW(◀◀)/FF(▶▶) button.
(Normal⇒Rock⇒Jazz⇒Classic⇒Pops⇒User)
- ▶ For the User mode, set the level of 5 bands using the REW(◀◀)/FF(▶▶) button.

Repeat



 - ▶ Press the REW(◀◀)/FF(▶▶) button to change the repetition mode and the repetition region.

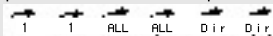

Press the REC/STOP button to change the shuffle mode to the reverse order.

● Audio Playback Mode

- Note**
- ▶ To return to the stop or playback mode in any setting mode, press the PLAY/STOP button.

Repeat Mode

Repeat Mode	Description
	Plays back the selected one file only and stops playback.
	Plays back the selected one file repetitively.
	Plays back all files and stops playback.
	Plays back all files repetitively.
	Plays back all files in the current directory and stops playback.
	Plays back all files in the current directory repetitively.
	Plays back all files once randomly and stops playback.
	Plays back all files repetitively with a random order.
	Plays back all files in the current directory randomly and stops playback.
	Plays back all files in the current directory repetitively with a random order.
	Plays back the file as long as specified in the menu. (1 ~ 30 seconds)

● Audio Playback Mode

 
6) Navigation

If you press the MENU button in the audio playback mode and the recording wait mode, the navigation mode will be selected.



Press Shortly

<File Navigation>

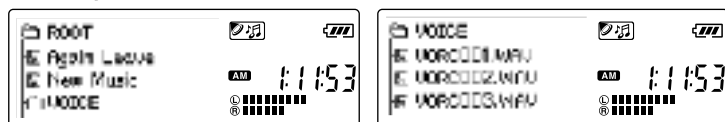


- ① Finding a directory or a file
Move to the directory or the music file you want, using the REW(◀◀)/FF(▶▶) button.
- ② Selecting a directory or a file
Press the PLAY/STOP button or the MENU button shortly to move to the target directory if you press the button on the directory name, or the file navigation will be closed and the selected file will be played back if you press the button on the file name.
- ③ Moving to the upper folder
Press the REW(◀◀)button to move to the upper director if it is not the root directory.
- ④ Exit from the file navigation
Press the FUNC button shortly once to exit from the file navigation.
- If you're in the root directory, the file navigation will be closed when you press the REW(◀◀)button.

● Audio Playback Mode

⑤ Deleting a folder or a file

Press the MENU button shortly once to enter the navigation in the stop mode, move to the folder or the file to delete, using the REW(◀◀)/FF(▶▶) button.

 - When you press the REC/STOP button, the deletion confirmation message will appear.
- Decide whether you will delete the folder of the file, using the PLAY/STOP button or REC/STOP button

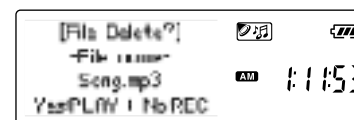

Note

- ▶ The file cannot be deleted during playback.
- ▶ The file cannot be deleted at voice recording mode.
- ▶ A folder cannot be deleted if there is any file in the folder.

● FM Radio Mode

1) Switching to the FM Radio Mode

- If you're currently in the mode other than the FM radio mode, press the FUNC button shortly once to change the mode.
- Select the FM radio mode and press the MENU button to enter into the FM radio mode.



Press Shortly



2) Changing the FM Mode

The FM radio has two modes. (Normal ⇒ Preset)
Press the MENU button to change the mode.



< Normal >



< Preset >

3) Auto Memory

If you press the FUNC button longer, only frequencies with good sensitivity will be saved in the preset. The auto memory function will work in the normal mode only.



Press Longer



Note

- ▶ You can set the FM sensitivity level using System Menu ⇒ FM Set ⇒ FM Sense.
- ▶ You may not be able to save the broadcasting channel in the weak sensitivity.

● FM Radio Mode

4) Frequency Search

<Normal Mode>.

Press the REW(◀◀)/FF(▶▶) button to increase or decrease the frequency band by one step (100kHz or 50kHz)

Press the REW(◀◀)/FF(▶▶) button longer to increase or decrease the frequency band fast and stops at the frequency with good sensitivity.



Press to the left/right once

<Preset Mode>

Frequency search in the preset mode is performed within 20 preset frequencies.

 
Press the REW(◀◀)/FF(▶▶) button to increase/decrease the saved channel number.

5) Changing Stereo/Mono Mode

Press the PLAY/STOP button shortly once to switch between stereo and mono mode.



Press Shortly

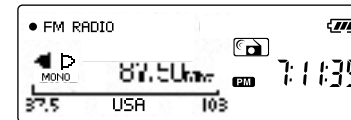


< MONO >



< STEREO >

6) Saving Frequency

You can save the current frequency in the preset in the normal mode.

Press the REC/STOP button longer once and then the  icon will appear.

Press the REW(◀◀)/FF(▶▶) button to increase/decrease the channel number to use.

Select the channel number you want and press the REC/STOP button to save and return to the normal mode. Or, press the PLAY/STOP button to exit without saving.

7) Deleting the Preset

You can delete the channel saved in the preset.

Press the REC/STOP button longer to delete the channel.

Recording

1) Switching to the Recording Mode

 
- Press the FUNC button shortly once to change the mode if the mode is other than the recording mode.
- Select the recording mode and press the MENU button.
- Or press the REC/STOP button longer once in the stop state of audio playback mode to start recording.



Press Shortly




2) Record / Stop

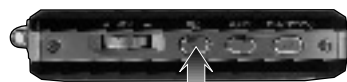

Press Shortly

Record: Press the REC/STOP button shortly once.

 Stop: Press the REC/STOP button shortly once again.

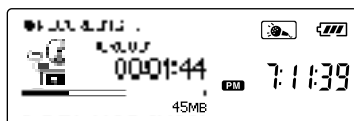

<Recording>

 


<Recording Stop>

3) Pause / Cancel pausing



Press Shortly

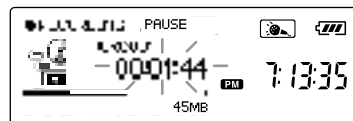

Pause: Press the PLAY/STOP button while recording shortly once.
Cancel pausing: Press the PLAY/STOP button shortly once again.

Recording

4) Voice Playback/Stop

- ① Press the PLAY/STOP button in the recording standby state to play back the latest recording file.
- ② Press the MENU button to enter into the file navigation mode. Select the target file in the voice file navigation and press the PLAY/STOP button to play back the selected file.



 
Playback: Press the PLAY/STOP button shortly once when the player is stopped.

Stop: Press the PLAY/STOP button shortly once again.

Note

- ▶ When you playback the files recorded in the voice mode, you can find them in the Root / Voice folder.

Menu

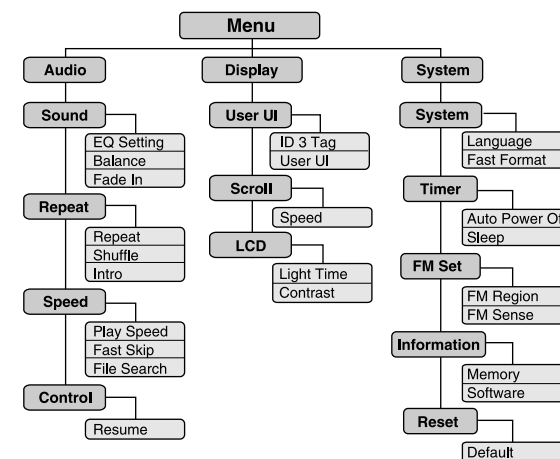

Menu

Basic Menu Handling

 
1) Entering into the Menu Mode

Press the MENU button longer in the audio playback mode, FM radio or recording mode to enter into the menu mode.



Press Longer

- Press the REW(◀◀)/FF(▶▶) button to select the target main menu and then, press the MENU button to enter into the sub-menu of the selected main menu.
- Select the end menu using the REW(◀◀)/FF(▶▶) button.
- Press the MENU button to display the popup window for details setting.
- Press the FUNC button to cancel the menu.

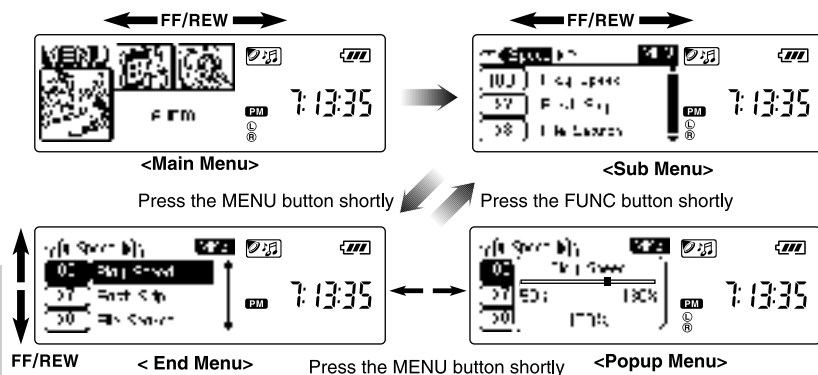

Menu

2) Moving back to the main menu from the sub-menu

- Press the FUNC button in the sub-menu to return to the main menu.

3) Moving back to the sub-menu from the popup menu

- Press the MENU button in the popup menu to save the modified setting values and to return to the sub-menu. Or, press the FUNC button to return to the sub-menu without saving the modified setting value.

 
4) Exit from the menu mode

- Press the PLAY/STOP button in any mode to exit from the menu mode.

5) Types of the popup menu


- There are three popup menus. Popup menu can be classified by the button types used for setting.

① Left/Right Scroll Popup Menu

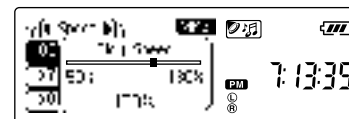

The popup menu shown left enables you to change the setting value using the REW(◀◀)/FF(▶▶) button.

 ② Up/Down Scroll Popup Menu

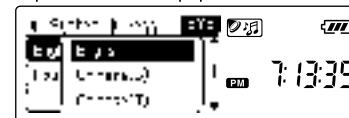

The popup menu shown left enables you to change the setting value using the +(Up)/-(Down) button.

Menu

 
Audio



Sound Repeat Speed Control

Sound

EQ Setting Balance Fade In

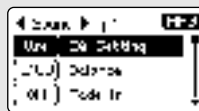


Press the MENU button to go into the Popup menu, move to the each setting section by the REW(◀◀)/FF(▶▶) and press the MENU button to select one, press the FUNC button to cancel it.



■ EQ Setting


(Equalizer- Normal, Rock, Jazz, Classic, Pops, User)
Select the equalizer you want using the REW(◀◀)/FF(▶▶) button or the +(Up)/-(Down) button that fits to your bass and treble preferences.

 - For the User mode, set the level of 5 bands using the REW(◀◀)/FF(▶▶) button.
- Control range: -12dB ~ +12dB, move by 1dB.

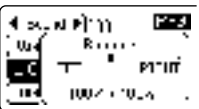

■ Balance

 Select the left/right balance using the REW(◀◀)/FF(▶▶) button by 5 steps (Left 0%/Right 100% ~ Left 100%/Right 0%).

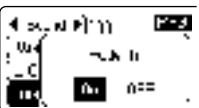


■ Fade In

Select whether you will use the fade in effect, using the REW(◀◀)/FF(▶▶) button. Once selected, you can prevent abrupt volume up or down when stopping or playing back since it increases/decrease steadily at the beginning for end.


Menu

Repeat

 Repeat Shuffle Intro

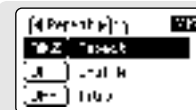

 
Press the MENU button to go into the Popup menu, move to the each setting section by the REW(◀◀)/FF(▶▶) and press the MENU button to select one, press the FUNC button to cancel it.

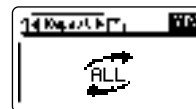

■ Repeat


Press the REW(◀◀)/FF(▶▶) button to change the repetition mode, or press the REW(◀◀)/FF(▶▶) button to change the repetition region.

 Press the REC button to change the shuffle mode to the reverse order.

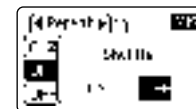

■ Shuffle

 You can set whether playback will be performed sequentially or randomly, using the REW(◀◀)/FF(▶▶) button.


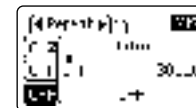


■ Intro


You can set time duration for Intro (OFF ~ 30 seconds), using the REW(◀◀)/FF(▶▶) button.

Menu

  Speed

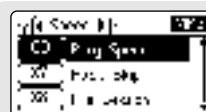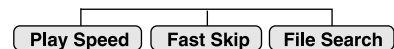


 Press the MENU button to go into the Popup menu, move to the each setting section by the REW(◀◀)/FF(▶▶) and press the MENU button to select one, press the FUNC button to cancel it.

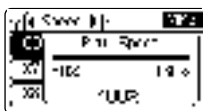


■ Play Speed

 You can set file playback speed between 50% and 130% using the REW(◀◀)/FF(▶▶) button.

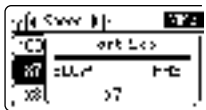

■ Fast Skip

 You can speed up file playback by 1 times to 10 times using the REW(◀◀)/FF(▶▶) button.

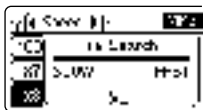


■ File Search


You can set file movement speed by 1 times to 10 times, using the REW(◀◀)/FF(▶▶) button.

Menu

 Control

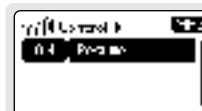

 Press the MENU button to go into the Popup menu, move to the each setting section by the REW(◀◀)/FF(▶▶) and press the MENU button to select one, press the FUNC button to cancel it.

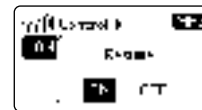

■ Resume

You can set whether the resume function will be performed or not, using the REW(◀◀)/FF(▶▶) button.

Example) During playback the second file for 20 seconds, if the set is turn off and turn on again

 
In case the resume function is set: Playback from 21 seconds of the second file.

In case the resume function is not set: Playback from the beginning of the seconds file.

Display



User UI

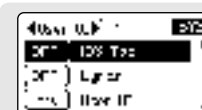

Press the MENU button to go into the Popup menu, move to the each setting section by the REW(◀◀)/FF(▶▶) and press the MENU button to select one, press the FUNC button to cancel it.