# HW4 Staff Quick Start Guide

# Included

- HW4 system
- Universal AC adaptor




# Set Up

Connect the universal voltage AC adaptor to the DC jack on the bottom panel of the unit and plug into a wall outlet that is not controlled by a light switch and is within easy

reach of the unit.

### **Charging Devices**

Connect USB cable (not included) to USB port and the other end to your device to charge.

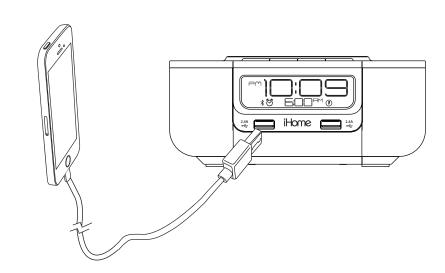

0000

oattery backup D

#### **Bluetooth Pairing**


Press and hold the Bluetooth Button \$\frac{3}{2}\$ on the top of the unit. The unit displays 'PAIR' while in pairing mode. Select "iHome HW4" on your device's Bluetooth menu. The unit will display 'BT' when a device is connected.

# Setting the Time Zone and Clock (Factory Preset Clock)


The first time you connect your new preset clock to the AC outlet, the unit will automatically show the correct Eastern Standard time, which is the default setting. If you are not in the Eastern time zone, you must change the default setting to match your time zone (see *Time Zone Setting* below). Once the correct time zone is set, if the time displayed is not correct, follow steps under *Manual Clock Setting* to set the correct hour, minute, year and date.

## **Time Zone Setting**


Press and hold the **time zone button** located on the bottom of the unit. The default EASTERN time zone will flash in the bottom of the display.

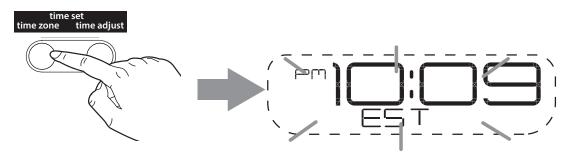


Press and release the **-** or **+ button** as needed until your time zone is displayed. The time display will also change according to zone selected.

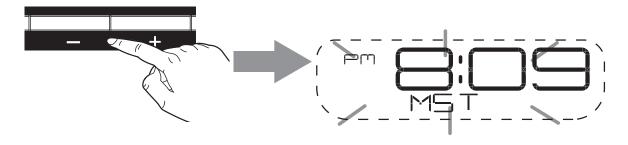

Press and release the **time zone button** to confirm time zone setting.

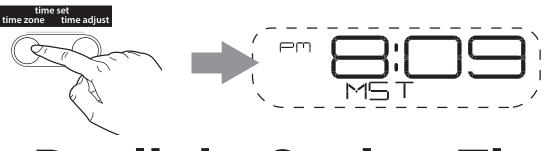


# **Daylight Saving Time**

 

The unit ships with the Daylight Saving Time (DST) switch located on the bottom of the unit in Auto position, and will automatically adjust when the time changes in March and November. To switch manually, slide switch to +1 to add an hour or to -1 to subtract an hour.


# **Volume Limiter**

 


The unit ships with the Volume Limit switch in HI position, and the maximum volume output will be at 100%. For smaller rooms, slide the switch to the LO position to limit/lower the maximum volume by 25%.

# **Manual Clock Setting**


Press and hold the **time adjust button** on the bottom of the unit to enter clock setting mode. The time will flash and SET will appear on the display.

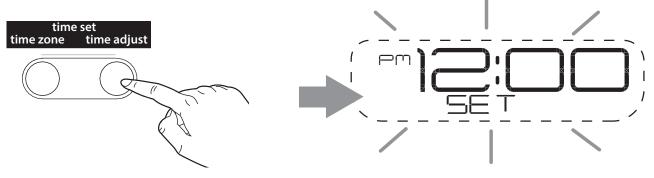


Press the - or + button to adjust time (hold for rapid adjust). Make sure to set the correct AM or PM time. The PM symbol will appear on the clock display. There is no AM symbol.

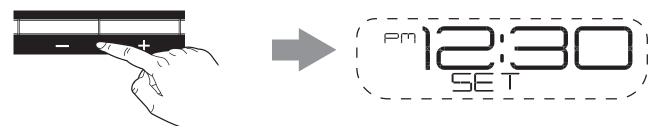


Press the time set button to confirm time. The year will flash.

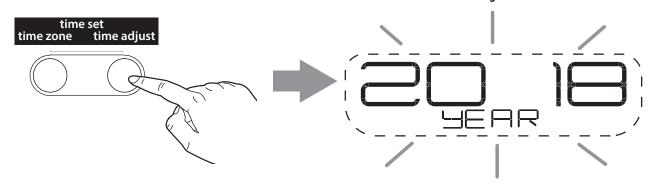


Press the - or + button to set the year.

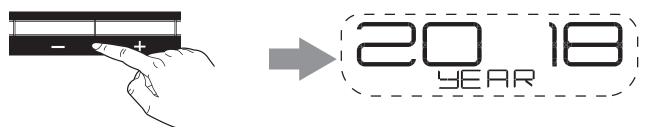


Press the time adjust button to confirm year. The date will flash.

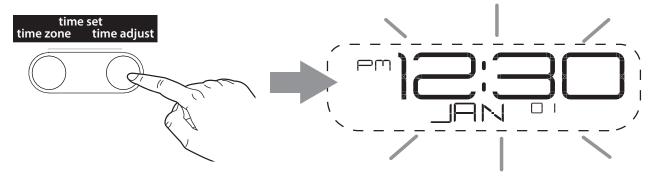

Press the - or + button to set the date (hold for rapid adjust).

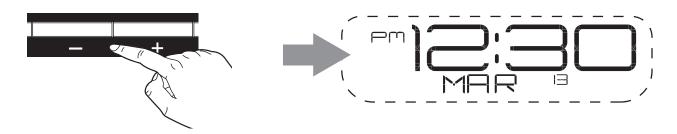


Press the **time adjust button**. 2 beeps will confirm Clock Setting is complete.

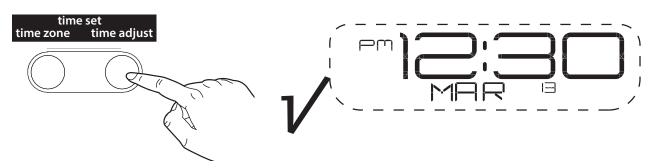


**Note**: Make sure that the Year, Month, and Date settings are correct so that the Auto Daylight Savings Time adjustments will occur on time.

TIP: Press the Alarm On/Off Button when display is flashing during clock setting to toggle between 12 hour and 24 hour display modes.

When Low Battery Icon flashes on the bottom right of the display, replace backup batteries with 2 fresh AA batteries. Keep unit connected to AC power when replacing batteries or you will lose settings. Make sure to match polarity (+/-) on batteries as shown below.

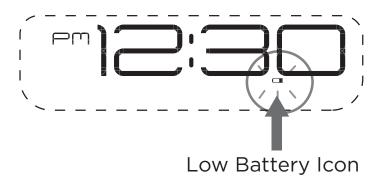

#### **Battery backup installation**

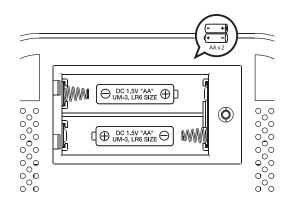

## **Battery Cautions and Tips**

- Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from product.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage, remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Do not dispose of batteries in the household trash or fire.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.

## Secure the attached Security Tether to a wall or other permanent surface.

CAUTION: DO NOT attach to an AC outlet or cause it to become entangled with anything that can create a hazardous situation.



- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Clean your unit with a soft, damp cloth. Strong cleaning agents, such as thinner or similar materials can damage the surface of the unit.

# **Tips For Guests**

Using the wireless charger:

Place Qi compatible device in the middle of marked charging target circle, with the front facing you.

Check the wireless charging indicator icon on the right of the display:



- Rapid blinking icon Device is not charging. Reposition device.
- Slow blinking icon Device is charging properly.
- Solid icon Device is charged (some devices do not support this feature).
- No icon Not in charging mode (no device on unit)
- Thick or metal device cases can interfere with wireless charging. Removing such a case may improve wireless charging.
- Wireless charging uses a magnetic field. Avoid placing any metal object and personal items with magnetic stripes, such as credit cards, bank cards, key cards, metal or magnetic phone cases, etc., near the wireless charging area to prevent damage.

Note: This unit is compatible with the Qi wireless charging standard. PMA wireless charging is not supported.

#### IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read and follow all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

- 1. Water and Moisture The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- 2. Ventilation The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
- 3. Heat The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- 4. Power Sources The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Only use the AC adapter that came with the unit.
- 5. Power-Cable Protection Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
- 6. Cleaning The unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.
- 7. Objects and Liquid Entry Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
- 8. Attachments Do not use attachments not recommended by the product manufacturer.
- 9. Lightning and Power Surge Protection Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
- 10. Overloading Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 11. Damage Requiring Service The unit should be serviced by qualified service personnel when:
  - A. the power supply cable or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled into the enclosure.
  - C. the unit has been exposed to rain.
  - D. the unit has been dropped or the enclosure damaged.
  - E. the unit exhibits a marked change in performance or does not operate normally.
- 12. Periods of Nonuse If the unit is to be left unused for an extended period of time, such as a month or longer, the backup battery should be removed from the unit to prevent damage or corrosion.
- 13. Servicing The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.
- 14. Magnetic Interference: This product's speakers contain powerful magnets which could cause interference or damage to sensitive equipment such as hard drives, CRT televisions and monitors, as well as medical, scientific, and navigational devices. Keep this unit away from these products at all times.

## **FCC** Information

HW4

FCC ID: EMOHW4 IC: 986B-HW4

#### **FCC Radiation Exposure Statement**

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. CAN ICES-3(B) / NMB-3(B)

#### **IC Statement**

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de license. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

#### LIMITED 30 DAY WARRANTY

(valid in contiguous U.S.A. only: not valid in Hawaii or Alaska)

Hotel Technologies, a division of HTI Industries LLC, (hereafter referred to as Hotel Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 30 days from the date of receipt of the item.

Should service be required by reason of any defect or malfunction during the warranty period, Hotel Technologies will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered. If service is still required:

- 1. Fax a representative at 915.633.1388 with a Return Authorization request including proof of purchase date (i.e., invoice number and date from distributor or HTI) to receive a Return Authorization Number. Issuance of Return Authorization Number is subject to review prior to granting.
  - NO ITEM CAN BE ACCEPTED WITHOUT A RETURN AUTHORIZATION NUMBER.
- 2. Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
- 3. Send the unit by method agreed to with your representative to the Factory Service Center listed below:

Consumer Repair Department Hotel Technologies Inc. 1330 Goodyear Drive El Paso TX 79936-6420

NOTE: Improperly packed items or Items received without an RA # cannot receive credit. NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 30 days, and Hotel Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If you did not purchase this product directly from Hotel Technologies, please contact the appropriate distributor for their warranty terms.

HWA Quick Start Guide (English) - Front Size: 432 x 440 mm Color: 10 + 10 (Ellack) Material: 100 gsm WF paper Date: June 19, 2018





Set Up

Connect the universal voltage AC adaptor to the D Clack on with 8 bottom panel of the unit and blug into a wall outlet that is not controlled by a light switch and its within easy reach of the unit.

Charging Devices
Connect USB cable
(not included) to
USB port and the
other end to your
device to charge.

Bluetooth Pairing

Press and hold the Bluetooth Button % on the top of the unit. The unit displays 'PAIR' while in pairing mode. Select "Homen HW4" on your devices Bluetooth menu. The unit will display BT' when a device is connected.

The frat time you connect your new preset clack to the AC andlet the unit will watcomstellarly show the connect Bestern Sandard time, which is the default setting. If you are not in the Eastern time zone, you must change the default setting to match your time zone (see Time Zone). Once the cornect time zone is set, if the time delapsyed is not connect, follow steps under Manual Clock Setting to set time cornect hour, minute. Setting the Time Zone and Clock (Factory Preset Clock)

Time Zone Setting
Press and hold the time zone button located on the bottom of the unit. The default EASTERN time zone will flash in the bottom of the display.



Press and release the - or + button as needed until your time zone is dispyed. The time display will also change according to zone selected.

Press and release the time zone button to confirm time zone setting.



The unit ships with the Daylight Saving Time (DST) switch located on the bottom of the unit in Auto position, and will automatically adjust when the time changes in March and November. To switch manually, sides which to 41 to add an hour or 10.10 subtract an Hour.

 
The state of the s

# The Company of the Co Volume Limiter

The unit ships with the Volume Limit switch in HI position, and the maximum volume output will be at 100%. For smaller rooms, siled the switch to the LO position to limit/lower the maximum volume by 25%.

# Manual Clock Setting

Press the - or + button to adjust time (hold for rapid adjust)
Wake sure to set the correct AM or PM time. The PM symbol wi
poser on the clock display. There is no AM symbol.



# LIMITED 30 DAY WARRANTY

FCC Information

IMPORTANT SAFETY INSTRUCTIONS

If you did not purchase this product directly from Hotel Technologies please contact the appropriate distributor for their warranty terms.

# When Low Battery con flashes on the bottom right of the display, verplace begalon batteries, two batteries, two pure replace begalon batteries rayou will lose a settings. Make sure to match polarity (+/-) on batteries as shown below.

HW4 Quick Start Guide - Inside

Press the time adjust button.

Note: Make sure that the Year, Month, and Date settings are correct so that the Auto Daylight Savings Time adjustments will cocur on time.

TIP: Press the Alarm On/Off Button when display is flashing during clock setting to toggle between 12 hour and 24 hour display modes.

Low Battery Kon

with a soft, damp cloth. Strong cleaning agents, or similar materials can damage the surface of the

Secure the attached Security Tether to a wall or other permanent surface. CALTION: DO NOT attach to an AC outlet or ausue it to become entangled with anything that can create a hazardous situation.



# Pues of compatible downers in the middle of marked danging larget cycle. When the first field globes is the middle of marked danging larget to cycle. When the first field globes is the market compared measure score in the right of the caping. **Tips For Guests**

Use the linking icon - Dwice is not charging. Reposition of Stable form - Dwice is not charging proceed. As a disclosured is charged (come devices do not supp. this feature). The control of the charged of the this feature. The charging mode for device on unit.) Thick or metal device cases can interfere with wireless thinging. Removing such a case may improve wireless charging.

Note: This unit is compatible with the Qi PMA wireless charging is not supported.

sispose of batteries in the household trash or fine applicable laws and local regulations for the disposal station of batteries.

CAN ICES-3(8) / NMB-3(8) CAN ICES-216 / CNR-216

La prise call by tremellar including inference internal populations and applicables aux appeals to the properties of the production of the

correlations.

16 dispositi rencontre l'exemption des limites courantes d'é722 et la conformité à l'exposition de RSS-722 et, utilissiteurs p
---- l'exemptition et la conformité de ric.