wireless speaker Front Back mode change light color charge bluetooth light M + K3 (81K) K3-O = press - volume down/ press - volume up/ hold - last track hold - next track port port press - pause/play/ answer call/end call hold - reject call Bottom on/off switch foldable tap the screen to change the light color included • Bluetooth Speaker • Micro USB Charging Cable • Power ON speaker using ON/OFF switch Rapid flashing white light, followed by a chime • Use bluetooth settings on your phone to pair with MORE THAN MAGIC 01 o White light turns solid, followed by an echoing chime - paring successful

4 in

indicators

- · Solid Red- Charging
- No Red Light Fully Charged
- Flashing White Pairing Mode
- o Solid White Bluetooth Connected
- Chirping Tones Powering on • Single Chime - Ready to pair
- Echoing Chime Paired
- Rapid Chirping Tone Low Battery
- Quick Low Tone Max Volume/Min. Volume Double Chime - AUX Cable Connected

• There are 10 options: Soft white, medium white, bright white, red, blue, green, light blue, rainbow, music matching and off

charging

- Plug micro end of charging cable into back of speaker
- Plug USB end of charging cable into a DC 5V USB power supply

AUX/mode

- Plug in an AUX cable to override bluetooth
- Switch to bluetooth by pressing mode and unplugging the AUX cable from your device

troubleshooting

- If the speaker is not working correctly, turn it on/off to reset
- . If the speaker won't turn on, recharge the battery and try again
- If the speaker won't charge, make sure the supply works, is 5V>1A, and not damaged If the speaker makes no sound or does not show as an available device, make sure it
- is not paired to another device, if so, unpair the device and re-pair the desired device
- This device does not have a pairing code. If prompted for one make sure you are connecting to the correct device. If you are, "forget" the device and re-pair. If you are still prompted enter 0000

need some help?

Can't get it to pair? Have a question or comment?



call us at: 877-698-4883 or: 877-MyTgtTech

online at: TargetTechSupport.com

- Do not use near any water source
- Do not modify or repair this device
- Do not use in temperatures or extreme weather
- Do not use chemical detergents to clean your device, use a soft dry cloth

FOC. DI AGGERISME Model BEPGE Page: 51 — Most 1A. Mode in China.

FINC DI AGGERISME Model BEPGE Page: 53 — Most 1A. Mode in China.

This device compless with Plant 15 of the China. Command is subject to the following how conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Warming: Changes or modifications to this unit not operately approved by the porty responsible for compliance could not be sore all public to operate the acquirement has been feeded and down to scorely with the limits for a Chies 0 digital device, pursuant to Part 15 of the PCD flade. These limits are desired in MOTE. This equipment has been feeded and down to scorely with the limits the radius of the communications. Limits and control and communications. Limits and communications. Limits and communications. Limits and communications are constructed with the instructions, may cause harmful interference to occurrence with their excitors. However, there is no guarantee that interference will not occur in a particular installation. If this equipment due cause harmful interference to indicate the received by harmful to expendent of and on, the use of encouraged by the cover the interference by near one of the following measures.

Radiotral or relactable the receivery authors. Increase the appointent and receive. *Connect the equipment into an outed on a circuit different town that is a table to reviewer to connected. *Connect the expense interval.**

Target Corp. Mpls. MN, 55403 Phone: 1-612-304-6073

5.6 in

front

back