

OPERATING INSTRUCTIONS

Please read carefully before starting to operate. It is recommended to operate the vehicle under adult supervision.

Note: Can not play 2 vehicles together in the same frequency.

CAUTION-ELECTRIC TOY

Not recommended for children under 8 years of age. As with all electrical products, precautions should be observed during handling and use to prevent the risk of electric shock.

FEATURES

- Full Function- runs forward, backward, turns left and right, stops and turbo speed.
- Runs with working head lights .
- Spin-out action.
- Blue and white lights underneath the chassis.

BATTERY REQUIREMENT (ALL INCLUDED)

- One "9V" battery for transmitter.
- One "9.6V" rechargeable battery pack for vehicle.
- One charger.

BATTERY INSTALLTION

(A) TRANSMITTER

- 1) Slide ON/OFF to OFF.
- 2) Grasp the tab of the battery compartment cover and lift the cover up.
- 3) Put the "9V" battery in the compartment according to the polarity symbols (+ and -) marked inside.
- 4) Replace the battery compartment cover.

(B) VEHICLE

- 1) Slide ON/OFF on the bottom of the vehicle to OFF.
- 2) Use a coin to turn the two battery door stoppers until they stop and remove the

battery door.

- 3) Plug the battery pack connector into the connector found in the battery compartment.
- 4) Carefully luck the wire into the compartment and insert the battery pack so that it lies flat in the compartment.
- 5) Replace the battery door and use a coin to turn the stoppers back.

HOW TO OPERATE:

- 1) Slide ON/OFF on the bottom of the vehicle to ON.
- 2) Slide ON/OFF on the transmitter to ON.
- 3) Use the transmitter's levers to control the movement and direction of the vehicle.

Left Control Lever

- Push forward to move forward.
- Pull backward to move backward.
- Release to stop.
- Push forward and press left top button to move turbo speed.
- Push forward and press both top buttons to spin anti-clockwise.

Right Control Lever

- Push left to turn left.
- Push right to turn right.
- Release to go straight.
- 4) Slide ON/OFF switches on both vehicle and transmitter to OFF when you are not to play with it.

CAUTION

- The battery pack must be charged by adult.
- Do not charge battery pack that shows leakage and corrosion.
- Do not charge battery pack if it is hot.
- Do not dispose of battery in fire.
- Do not attempt to disassemble the battery pack.
- Never leave dead or exhausted battery

pack in the battery compartment.

BATTERY CHARGING

NOTE: Follow the instruction on your 9.6V rechargeable Ni-Cd battery pack and charger system.

- The 9.6V rechargeable Ni-Cd battery pack must be fully charged prior to use.
- When charging rechargeable Ni-Cd battery pack, first connect the charger with the 9.6V rechargeable Ni-Cd battery pack, then plug the charger into a household outlet.
- Four hours is all required for fully charging the battery pack. Charging the battery pack for more than 4 hours will not give you longer running time.
- When your vehicle starts to more slowly, it is time to recharge the battery pack.
- After use, the battery pack will be hot. Wait at least 10 minutes until the battery pack cools down before charging. Recharging a hot battery pack will greatly reduce the recharging life of your battery pack.

TRIM CONTROL SWITCH

Trim switch is located on the underside of vehicle between the front tires. It is used to align the wheels of your vehicle for consistent turning and drive. Turn switch clockwise and anti-clockwise until desired alignment is reached.

THE FCC WANTS YOU TO KNOW:

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.