

Figure 9
Inside Configuration of the EUT



Figure 10
Inside Configuration of the EUT



Figure 11
Inside Configuration of the EUT

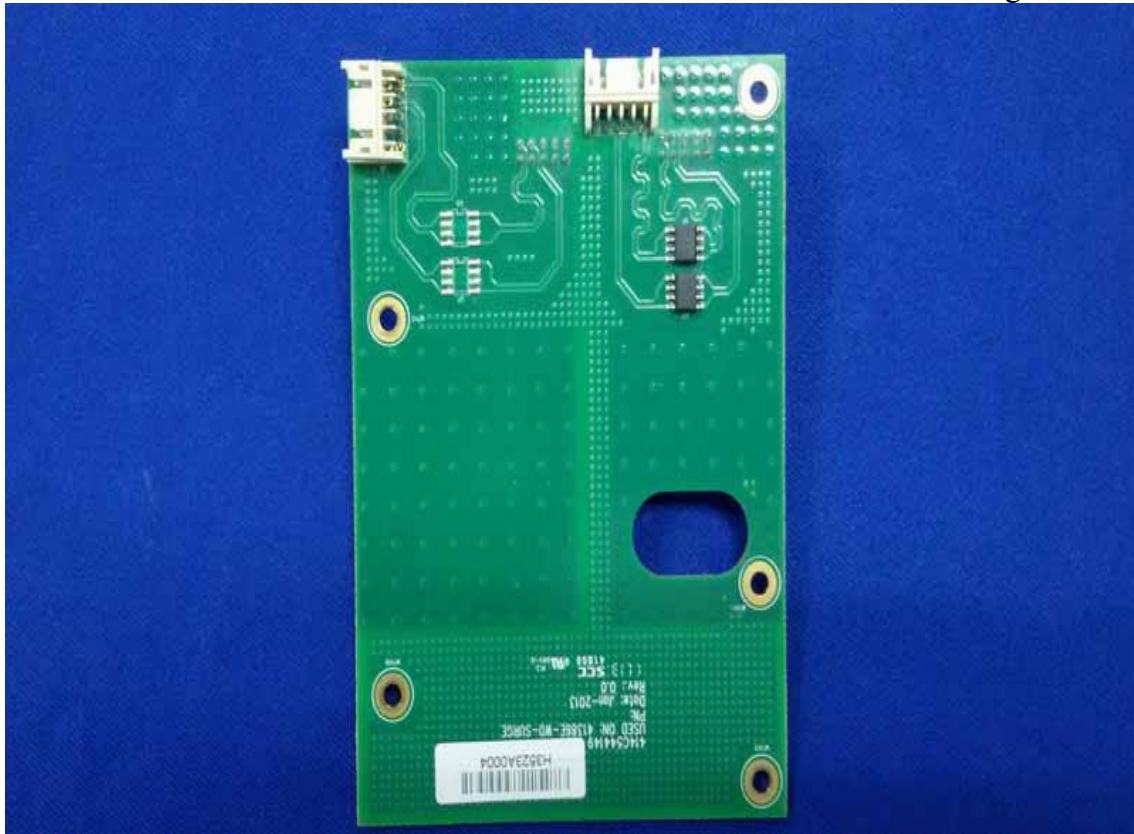


Figure 12
Inside Configuration of the EUT

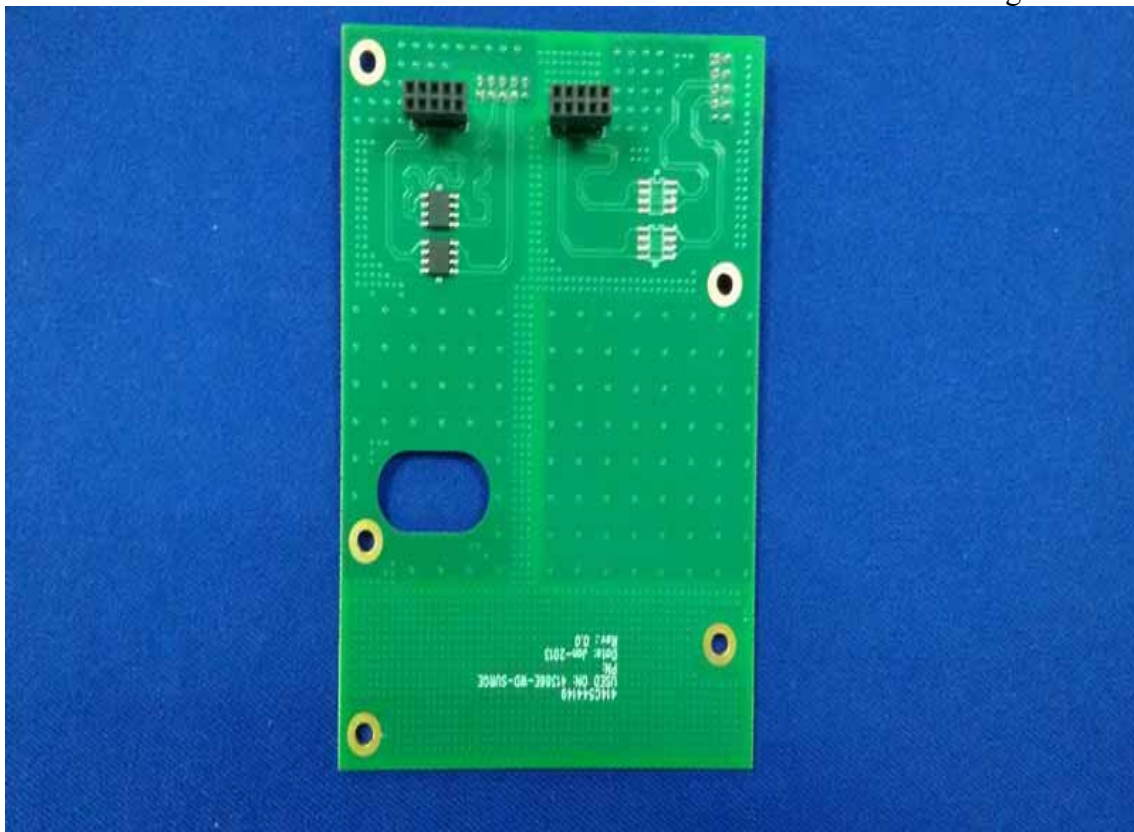


Figure 13
Inside Configuration of the EUT



Figure 14
Inside Configuration of the EUT



Figure 15
Inside Configuration of the EUT



Figure 16
Inside Configuration of the EUT

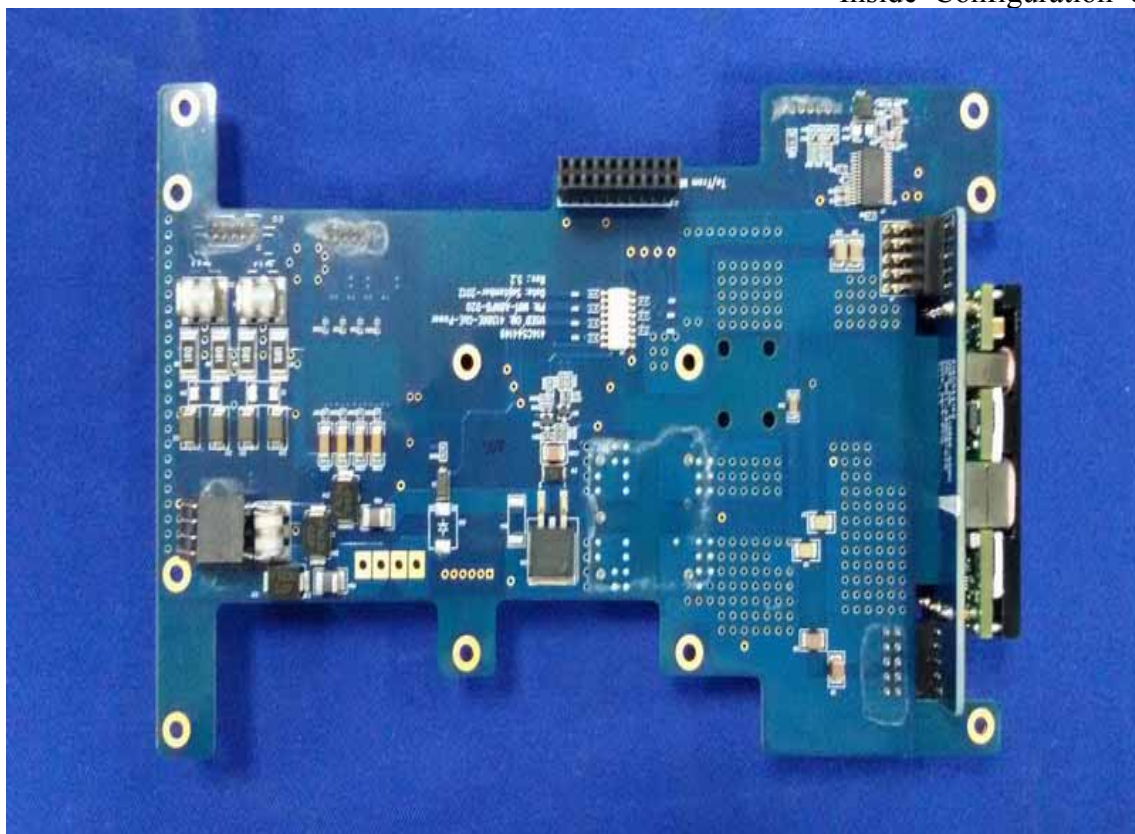


Figure 17
Inside Configuration of the EUT

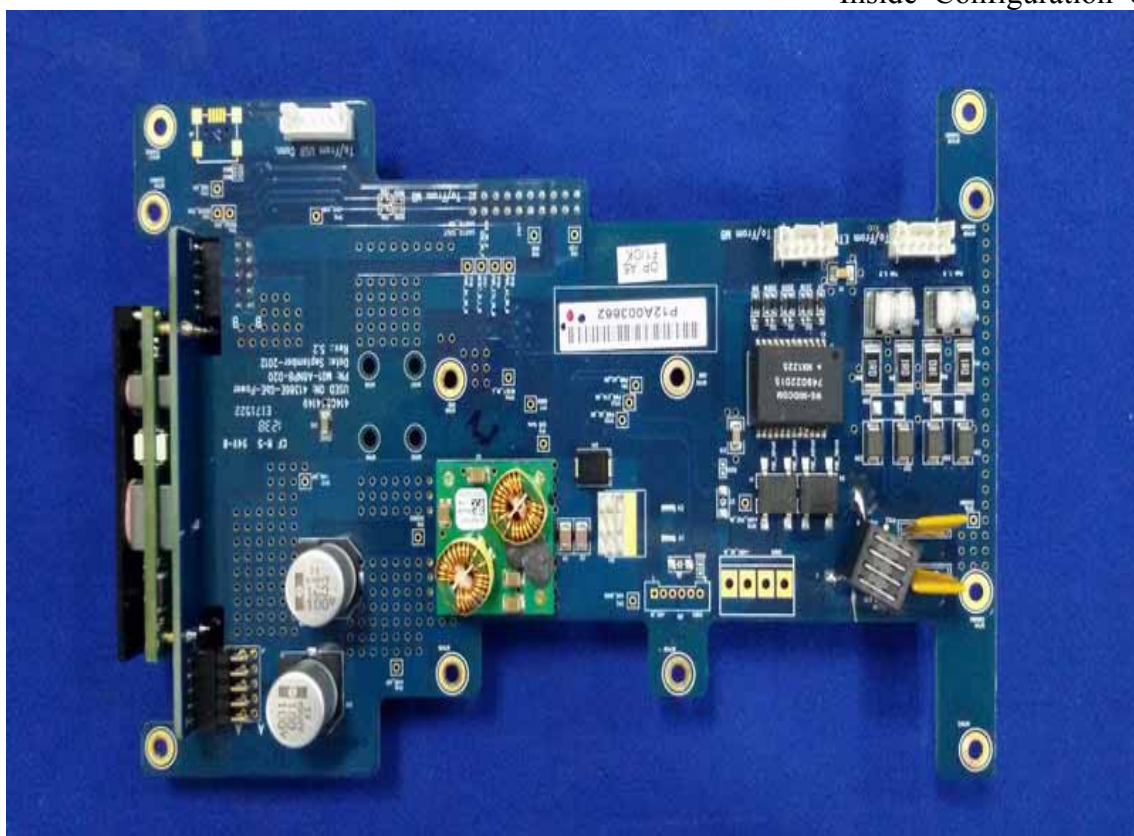


Figure 18
Inside Configuration of the EUT

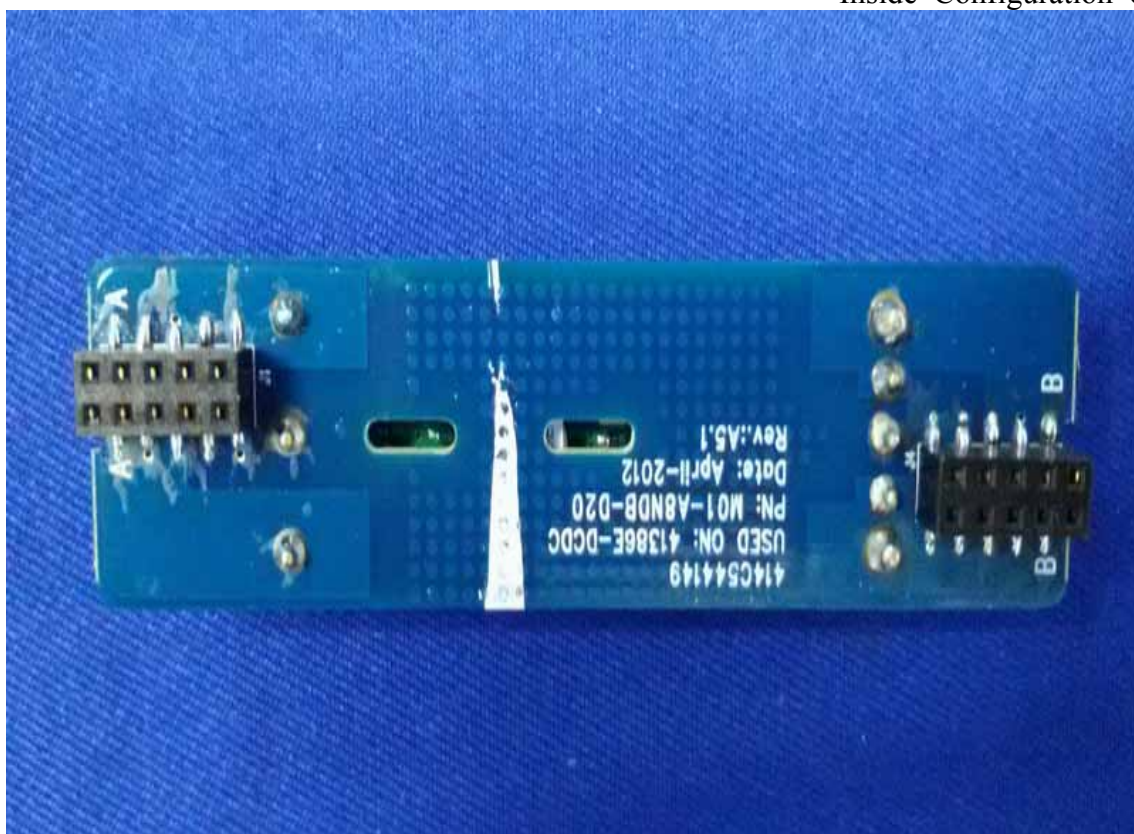


Figure 19
Inside Configuration of the EUT



Figure 20
Inside Configuration of the EUT

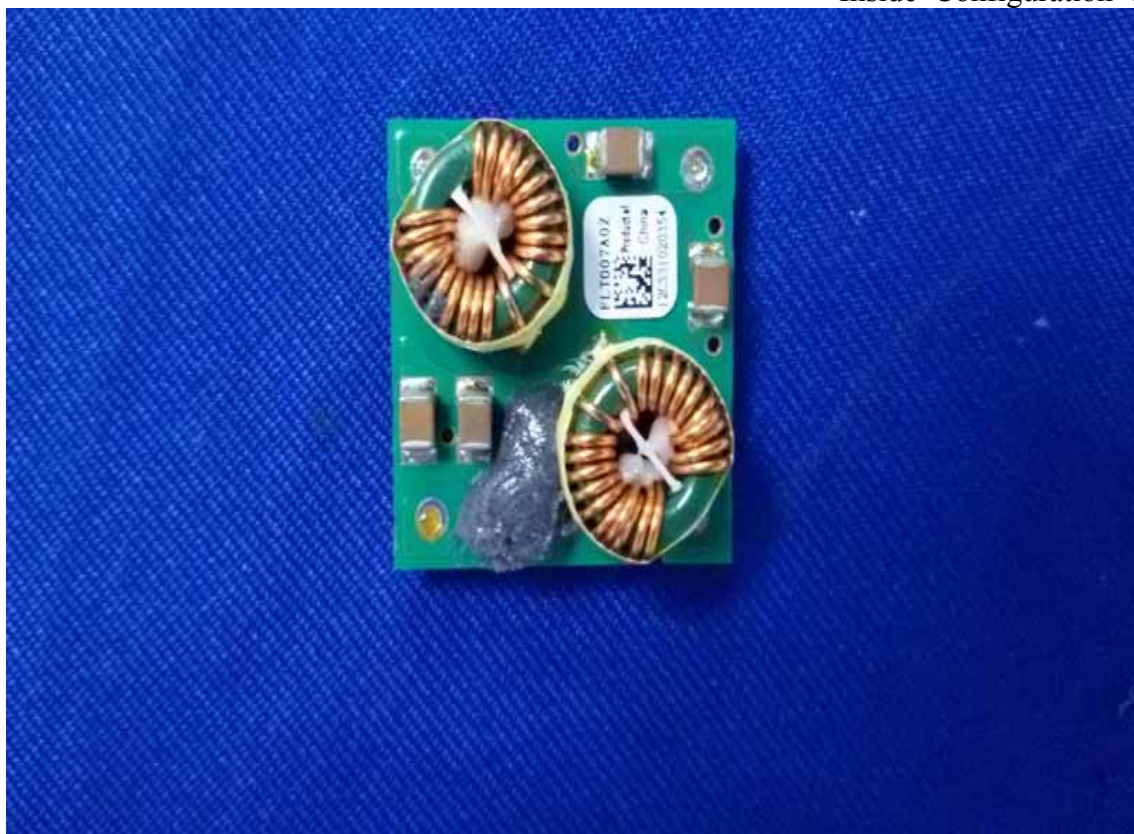


Figure 21
Inside Configuration of the EUT

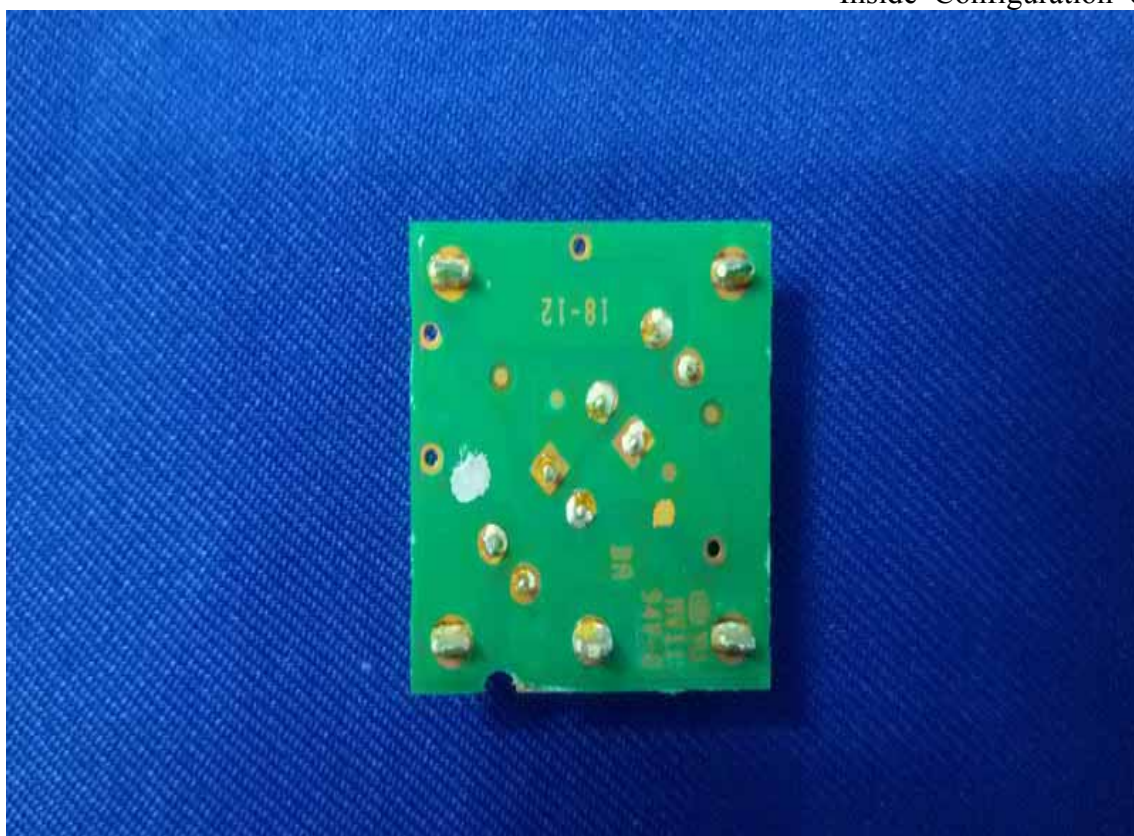


Figure 22
Inside Configuration of the EUT



Figure 23
Inside Configuration of the EUT



Figure 24
Inside Configuration of the EUT



Figure 25
Inside Configuration of the EUT



Figure 26
Inside Configuration of the EUT

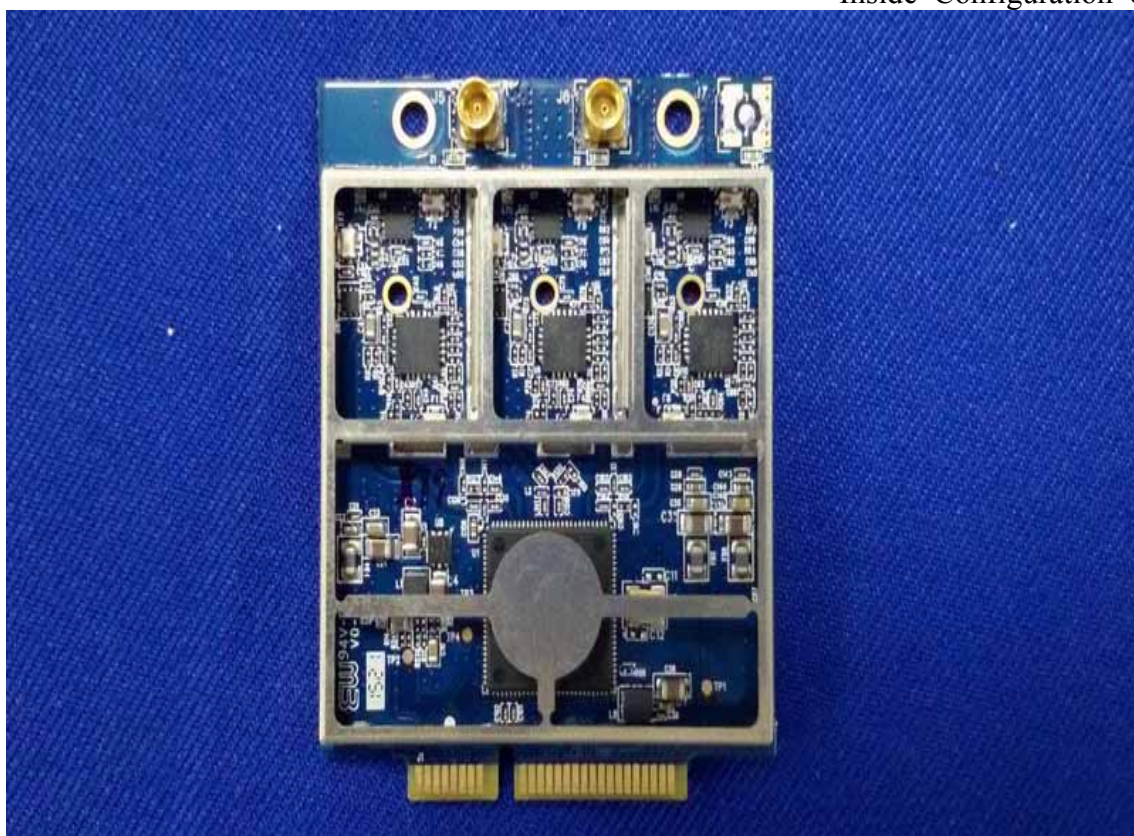


Figure 27
Inside Configuration of the EUT



Figure 28
Inside Configuration of the EUT



Figure 29
Inside Configuration of the EUT



Figure 30
Inside Configuration of the EUT



Figure 31
Inside Configuration of the EUT



Figure 32
Inside Configuration of the EUT

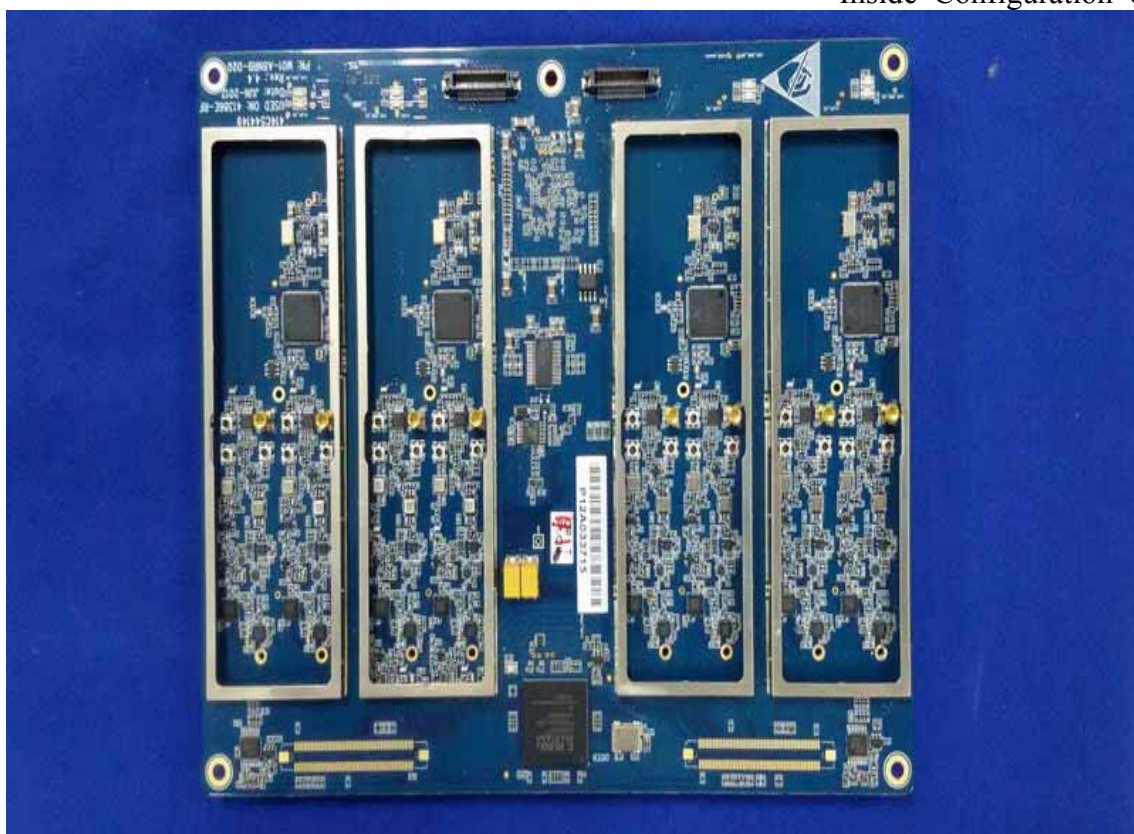


Figure 33
Inside Configuration of the EUT



Figure 34
Inside Configuration of the EUT



Figure 35
Inside Configuration of the EUT

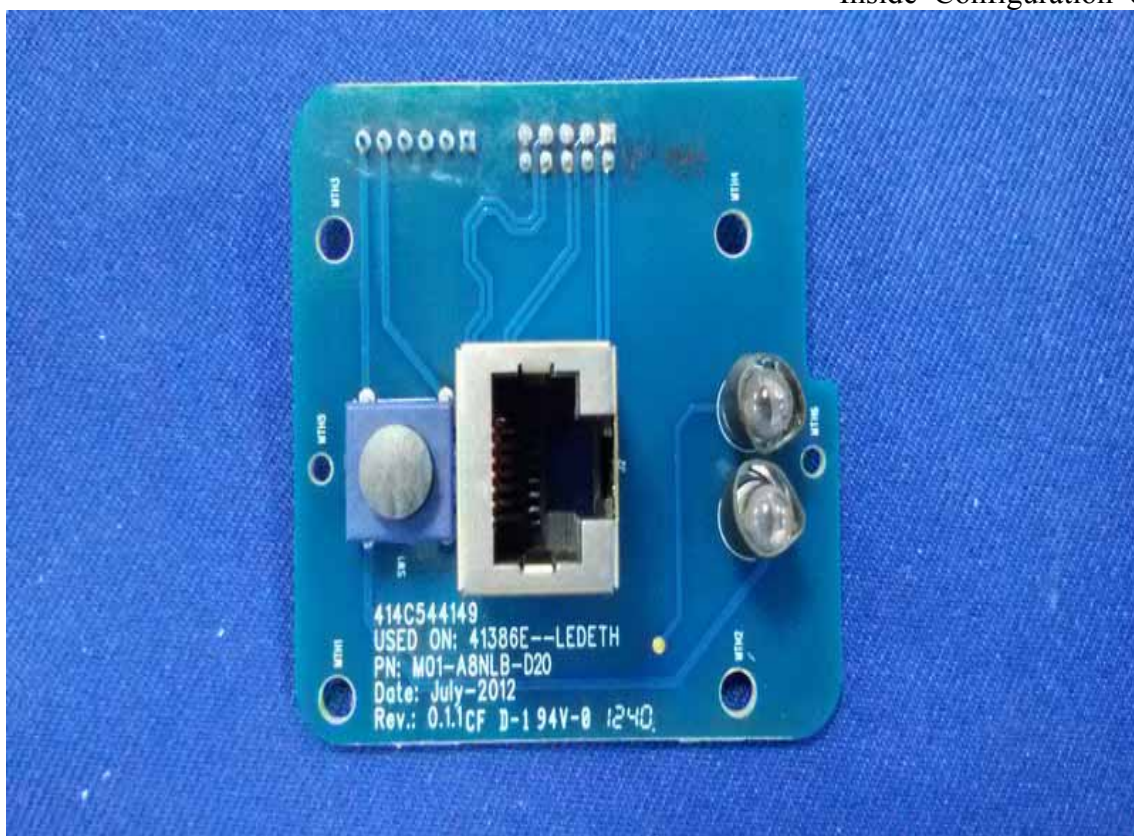


Figure 36
Antenna Connector Cable



Figure 37
Antenna for 2.4G



Figure 38
Antenna for 2.4G



Figure 39
Antenna for 2.4G



Figure 40
Antenna for 2.4G



Figure 41
Antenna for 5G



Figure 42
Antenna for 5G

