

Date: 09 DEC 2024 Product: SP-0263 IM	SKU:		ZEEVA INT LTD
--	------	--	------------------

SP-0263 IM

Size: 322.5(w) x 100(h) mm

 Thank you for purchasing the Reverb's Wireless Speaker. This manual provides more information about this wireless speaker, please read the instructions before using. 	Product Overview  1. USB Type-C Charging Port 2. LED Indicator 3. Volume Up/Next Song Button 4. Power/Bluetooth/FM Radio Mode Button 5. Volume Down/Previous Song Button Package Contents Includes: 1(One) Reverb's Wireless Speaker 1(One) Charging Cable / 1(One) Instruction Manual Power On/Off Power on: Press and hold 2 second on the Power Button. Power off: Press and hold 2 second on the Power Button. Note: Always power-off the speaker when not in use. Pair Wireless speaker with your mobile device 1. Keep the distance between your wireless speaker and mobile phone (or other devices) within 33 ft (10 Feet). 2. Power on the wireless speaker. 3. Activate the Bluetooth function on your phone within range and select "SP-0263 (SP)" from the list shown. 4. You will hear a beep sound when pairing is successful. Reconnect Wireless speaker to your mobile device When powered on, the wireless speaker will automatically connect with the last successfully paired device.	Charging your Wireless speaker ⚠️ For your safety, please always use appropriate TV output charger! Adapter to charge the product (REVERB USB Cables Charging USB Adapter) to charge the product, as it might damage the product. 1. Use the USB Type-C charging cable provided with this wireless speaker. 2. Open the wide-recessed cover, connect the USB plug to a USB port or an wall adapter, then connect the USB Type-C plug to a USB Type-C charging port on the speaker to begin charging. 3. The LED indicator will turn red while charging and will turn off once fully charged. NOTE: • You must select a qualified charger from a regular manufacturer. • You must charge the Wireless speaker if it has been not used for more than 6 months.  ⚠️ WARNING: The USB Type-C charging cable included with this item is intended for use with the product. Only use the included USB Type-C charging cable to charge the product. USB Type-C Charging Cable using 3rd party risk. Bluetooth Speaker Mode Play/Pause: Short press the Power Button once. Next Track: Short press the "V" Button. Previous Track: Short press the "V" Button. Volume Up: Long press the "V" Button. Volume Down: Long press the "V" Button. FM Radio Mode Switch to FM Radio Mode: Short press the Power Button 2 times. Short press the Power Button 2 times again will back to Bluetooth Speaker mode. Auto Scan: Short press the Power Button. Next Channel: Short press the "V" Button. Previous Channel: Short press the "V" Button. Volume Up: Long press the "V" Button. Volume Down: Long press the "V" Button. NOTE: Plug in the USB Type-C charging cable will enhance the FM Radio's sensitivity.
True Wireless Stereo (TWS) Mode (Open Reverb's Wireless Speakers are needed for TWS mode) 1. Turn-On both wireless speakers. 2. Disconnect both wireless speakers from any Bluetooth device. 3. Keep both wireless speakers side by side. 4. Triple Press the Power Button on ONE of the wireless speakers. And then it will have an alert sound. 5. The wireless-speakers will paired in few seconds. - When successfully paired, the speaker will have another alert sound. - Now you can follow the "Pair Wireless speaker with your mobile device" to pair with the mobile device. - To Disable the TWS mode, Triple Press Power Button on ONE of the wireless speakers. The speaker will have an alert sound and then unpaired. NOTE: TWS mode is not supported in FM mode. Technical specification Specifications: - Driver Diameter: 53 mm - Impedance: 4 (2ohm) - Power Supply: Li-ion Battery 3.7V 300 mAh - Playtime: 1.5-2 Hours - Charging Time: 1.5-2 Hours - Bluetooth Range: 30 Feet - Bluetooth Version: 5.3 - USB Type-C Charging Cable Included - FM Radio Mode	FAQ • If the Wireless speaker cannot be paired with your device, please try the following: Ensure that your speaker is in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated. • If the Wireless speaker cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works. ⚠️ Safety instructions for the lithium battery and charging the product -The input voltage to the product is DC 5V 1A. -In order to charge the product in safe manner and reliable conditions, please only select certified appropriate charger/adapter for charging the product. -Only charge the product at ambient temperatures between 10°C/50°F and 40°C/104 °F. -Do not heat above 70°C/158°F, eg. Do not expose to sunlight or blow into fire, switch off the product after use. -Please note that we won't take any responsibility for any wrong operation (eg. leakage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating processes during the time the user using the product. -In extreme cases, abuse or misuse of lithium battery pack can lead to explosion, heat generation, fire development or smoke development.	FCC STATEMENT This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or experienced radio/TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by REVA Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.  FCC ID: 2ACDMS-SP-0263 Keep All Relevant Information for Future Reference (ITEM# SP-0263) Distributed by REVA Holdings, Inc. 707 Market Street, Suite 500 Philadelphia, PA 19106 Made in China

Approval:	Date:
-----------	-------