


at any place where water exposure is possible.

- Please make sure the charging cover is well sealed before

- Do NOT submerge this speaker in any pool of water.

- If the speaker is exposed to salt or chlorinated water, gently rinse with fresh water following the exposure to remove residue. Make sure the connector port is fully

- Never attempt to charge the speaker while it is wet. Doing so may cause damage to the speaker.

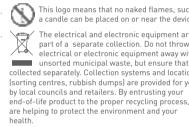

provided they are correctly supervised, or if the instructions related to the use of the device have been adequately given and if the risks involved have been understood. Children must not play with this device. Children should not clean or maintain the device without supervision.

6. The electrical socket must remain easily accessible if it

7. Always unplug the device before cleaning it.

8. Clean the device with a soft dry cloth only. Never use

9. Attention should be drawn to the environmental aspects of

exposed to excessive heat such as sunshine, fire or the like.

occur in a particular installation.If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 Reorient or relocate the receiving antenna. Increase the separation between the equipment and

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the eq

serves as the means of disconnection.

10. The battery (batteries or battery pack) shall not be