

BY-AU-BS-172-BK



WIRELESS SPEAKER COLOR CHANGING LIGHTS

Notice:

Please read user manual carefully and keep it for vour records.


- 1- Bluetooth Speaker
- 1- Micro USB Cable
- 1- Instruction Manual

- Do not let small children play this product Do not expose the speaker to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Do not use abrasive cleaning solvents to clean the speaker. - Store the speaker out of direct sunlight and extreme temperatures (above 45°C/113°F or below -10°C/- 14°F), as


this may shorten the battery life, affect the operation or degrade the performance of your speaker. Do not dispose of the speaker in a fire as it might result in

- an explosion. Do not expose the speaker to sharp objects as this will cause scratches and damage.
- Do not drop the speaker. This may cause damage to the internal circuitry.
- Do not attempt to disassemble the speaker. This may cause damage to the internal circuitry.
- If the speaker is left for long period without use, charge once per month to avoid the overconsumption of the
- This appliance is for indoor use only. Please do not use or store the unit in high temperature or hazardous locations. Please do not submerge the unit into
- water, as this will ruin the speaker. • The unit comes with a rechargeable battery, so please do not throw or put it in a fire to avoid explosion.
- The warranty for this product is invalidated if the product has been tampered, repaired or modified in any way.

Top of speaker:

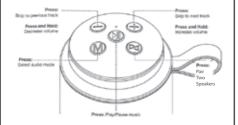

Back of speaker

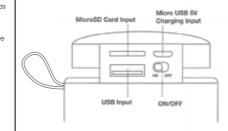

1. Power Switch: On the back of the speaker, togale the power switch to ON side to Power ON, toggle the power switch to OFF side to Power OFF.

2. Charaina:

- Plug the micro USB cable into the micro USB port on the back of the speaker, and connect the other end of the cable with any compatible charger or wall outlet.
- When charging, the small LED indicator will glow solid red. When fully charged, the LED indicator will turn off,
- Charaina time is approximately 1-2 hours.
- 3. Micro SD Function: Insert a Micro SD card. TF mode will start automatically.
- 4. USB Function: Insert a USB flash drive. USB mode will start automatically.
- If the speaker does not connect to the relevant mode, press "M" until it is selected. To avoid interference with playback, ensure that there is no TF card inserted while using USB Mode. NOTE: The Wireless Speaker will only recognize MP3 audio files.
- 5. FM Radio: Press "M" on the product to switch to FM mode. Radio will start automatically.

To AUTO-SCAN the stations, short press | button once, It will take few minutes to search all the stations. Once all the stations are scanned, they get registered in memory automatically.

Short press + or - button to skip selected stations. Long press + or - button to increase or decrease the volume.

6 Pair & Connect:

- Togale the switch to ON side, the Blue LED light will flash quickly, the speaker then will be in pairing mode.
- Then find the pairing name "BY-BS-172" from your list and connect to it. After the successful pairing, the speaker will play a tone, the Blue LED light will go on, and the speaker will be connected.

Note: if your device's Bluetooth version is below version 2.1 you may need to enter the password "0000"

- · Connect your device to the speaker via Bluetooth (see "Pair & Connect").
- Open your favorite music app and press play.
- . Change the track and volume, or control them from the controls on the speaker.
- Press III button once to play/pause music.
- Long Press ♣ or button to raise/lower the volume on the speaker. Short Press + or - to skip to the next/previous track. All audio, including music, games, videos, and notifications

8. Reconnect to Bluetooth:

will be routed through the speaker.

- You only need to pair your Bluetooth device with the speaker once.
- With your previously paired device's Bluetooth turned on & in range, power on the speaker.
- The speaker will automatically reconnect to the last Bluetooth device it was connected too.
- If you have a previously paired device that does not auto-reconnect, navigate to the Bluetooth settings menu on your device, turn on the Bluetooth feature and select BY-BS-172 from your list.

9. TWS CONNECTION:

- TWS Connection is only for two BY-AU-BS-172-BK speakers:
- Turn on both speakers.
- Press "
 " on any of the speaker to pair two speakers together for full stereo sound.
- The pressed speaker will become the master speaker.

Troubleshooting:

- 1. No power: Recharge your speaker using the included micro USB cable. Try using a different cable.
- 2. Music is not playing over Bluetooth: Make sure your Bluetooth device has A2DP profile. Check if both devices are paired and connected ove Bluetooth, Restart the speaker to reconnect our Bluetooth device. 3. Bluetooth device will not reconnect with the speaker: Navigate to your Bluetooth settings menu on your Bluetooth device, tap " BY-BS-172"
- and select "Forget". Now follow the steps to pair your device again.

SPECIFICATIONS:

- With FM. Bluetooth®, USB/TF card & TWS function.
- Input: 5V
- Battery Capacity: 400 mAh
- · Sound output: 5 W
- Charge time: 1-2 hours Play time: up to 2 hours
- Standby time: up to 120 hours
- Operating range: 33 feet (10m)
- Battery: 3,7V Built-in Li-ion
- Frequency Response: 100Hz-20KHz
- Speaker:52 mm 40 5W*1
- SNR:>70dB
- Sensitivity: <0.5% (1 W)
- Dimensions: W 3in x H 3in x D 6,7in
- . Compatible with most Bluetooth® enabled tablets and smartphones

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment

Bytech NY INC, warrants this product to be free from defects in materials and workmanship to the original purchaser for a period of 12 months from the original purchase date. Bytech's responsibility with regard to this limited warranty shall be limited solely to repair or replacement as its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. At any time during the 12 month period following the purchase, the product fails due to defects in material or workmanship, return the defective product (with freight prepaid) with proof of purchase. Please include \$5.00 for return shipping

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2AHN6-AUBS172

F© (€ X °

WWW.BYTECHINTL.COM Bytech NY Inc. 2585 West 13 street Brooklyn NY 11223 (718) 449-3700

©2021 BYTECH NY INC. *All Trademarks and copyrights are the property of the respective companies.

