


E200说明书

尺寸: 90mm X 60mm (折好后尺寸) - 360mm X 60mm (展开尺寸)

工艺说明: 单色正反面印刷, 105g 铜板纸.

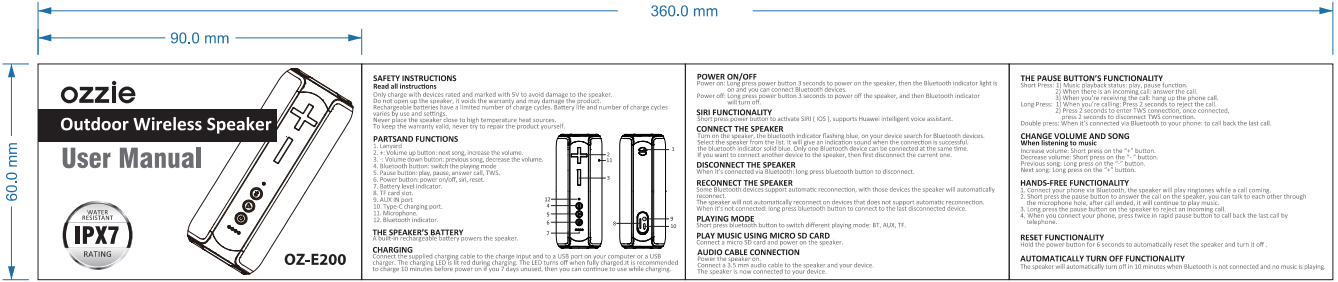

正面

TECHNICAL PARAMETERS - Model: OZ-E200 - Speaker (RMS): 40, 10W*2 - Charging time: 6 hours - Input: 5.0V $\pm$ 0.1V - Product weight: 553g - Waterproof level: IPX7 PACKAGE INCLUDING 1pc* E200 wireless speaker 1pc* Product manual 1pc* Type-C USB cable TWS CONNECTION - Turn on both speakers - Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a "ping" sound. The default is the primary speaker that you operated the Play/Pause button of this speaker for pairing initially. - Release Play/Pause button. It can take a few more seconds before speakers connect to each other. Once the indicator lights to dimmable (off) status. The blue light on one speaker is flashing blue for every 3 seconds that should be the left channel (the primary speaker); the blue light on the other speaker is solid blue that should be the right channel. - Go into the Bluetooth menu on your smartphone and pair the speakers with your phone by selecting the speaker model number. It will only display 1 number which is both combined in 1 to one. TWS DISCONNECTION - Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a "ping" sound.	EXPLANATION  The symbol indicates: The product is only suitable for the safe non-tropical climates. Notes: Please use the same type or equivalent type of battery to replace if the battery is scrapped. Otherwise, a fire or explosion may occur. FAULT AND MAINTENANCE First fault: connection failed. 1. Please check whether the red/blue indicator light flashes blue. Please power on your speakers if the light is not on. Please charge the speaker if the light is still not on. 2. Please turn off the other Bluetooth devices, if there are many Bluetooth devices surrounding. This may result in search difficulties. 3. Repeat search speaker on devices for Bluetooth search function. Second problem: The music player appears sound breaks. 1. Please check whether the connection distance is 10meters. 2. Ensure there is not any obstacle between the play device and speakers. 3. Check the playback device or whether the speaker is in a low power state. NOTES BEFORE USE This product is designed with full attention for safety performance. To ensure safe operation, please follow the following rules: - Place the speakers in a stable position avoid fall and cause damage or personal injury. - Do not drop, disassemble, open, crush, bend, puncture, tear, separate. - Do not close to any heat source (such as radiators, heating equipment, stoves, or other heat-generating equipment) unless the use of all speakers. - Please send professional maintenance staff to repair for any reason damage. - Before using with any other device, please set the power switch to the off position and unplug the power cord from the power outlet. - Health consideration, please adjust the sound to a suitable level. FCC STATEMENT: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or a competent radio/TV technician for help. FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. TROUBLESHOOTING The speaker does not turn on? The speaker does not turn off or does not respond? Make sure that your Bluetooth device is within range. From there is no obstacle in the way that can block the signal. Check via the device's Bluetooth connection if the speaker is connected with the device. There is poor sound quality? Move the device closer to the speaker or try removing obstacles between them. Cannot connect the device with the speaker? Close the Bluetooth connection on the device and turn it off again. Restart the device and reconnect it to the speaker. In order to avoid harming the product performance, please do charge your device each 3 months at least.
---	---

反面