



**AOMAIS**

Bluetooth Speaker

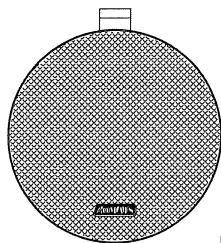

Model: F6

#### Layout

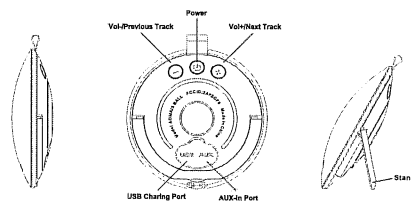

#### Specification:

Model: F6	Power(W):15W
Size:Φ145mm	Loudspeakers:Φ52mm
Weight:8.81oz	SPL(mV):200mV
Bluetooth Version:V4.0	THD:1% Volume max
Waterproof Level:IPX7	Load Impedance(Ω):4Ω
Charge Time:3 hours	S/N(dB):≥70dB
Playtime:8 Hours(50%)	Max Noise(mV):≤3mV
Power Supply:3.7V Lithium battery 2500 mAh	Charge Voltage:5V/1A

#### Package Components

- 1\*AOMAIS BALL
- 1\*USB Cable
- 1\*Aux-In Cord
- 1\*Quick Start Guide
- 1\*Foat Speaker Accessory

#### Operations:

- 1.Long press the button of Power,the blue indicator flashes quickly with voice prompt.The speaker will built in Bluetooth mode automatically without Aux-in cable.
  - 2.The speaker will be switched in Aux-in mode automatically once with Aux-in cable being inserted.
- A:Bluetooth mode:**
- 1.Speaker will be paired with last device automatically in 30s.The blue indicator flashes quickly when the speaker is searching for Bluetooth could be paired.(The pairing time will be different depending on different devices)
  - 2.Turn on the Bluetooth in your devices setting and select AOMAIS BALL until voice announced. The blue indicator flashes slowly once paired successfully.
  - 3.Play music after the Bluetooth is well paired.
  - 4.When there is a phone call coming, answer and hanging it up via press the button of Pause once. Long press the button of Pause to reject the call if necessary.
- B:Aux-in mode:**
- 1.The speaker will be switched in Aux-in mode once the Aux-in cord is inserted.
  - 2.The speaker can be connected with computer,Mp3 player by Aux-in cord.
  - 3.Line in cable:Please use 3.5mm cable line in the Input port,Bluetooth will cut off automatic change to line in mode

#### Functions:

- 1.Power:Long press the button to turn the speaker on and off.
- 2.Pause/Play/Hands-free:In playing mode,short press the button to pause or play music.When there is a call coming,short press the button to answer it and then press once to hang it up,Long press it for about 2 seconds to reject answer it.
- 3.Volume/Track
  - Short press the button to select volume up or down
  - Long press the button to select previous track or next track
  - Short press both Volume+ and Volume- button together to change default language,4 language could be selected.
  - Long press both of them about 5 seconds to cut the Bluetooth off
- Charge:Please use DC5V/1A adapter
- Line in cable:Please use 3.5mm cable line in the Input port,Bluetooth will cut off automatic change to line in mode
- 4.Advanced TWS Technology
  - Advanced TWS(true wireless stereo) technology,enables you to use two speakers pairing via Bluetooth to form a wireless left and right dual channel system to deliver true stereo sound effect,for two Aomais speakers' power are 30W. Each speaker can also be used separately.

#### Indicator:

- White light**
- Bluetooth Indicator:When the white light fast flashed(400s bright,400s dark)after turn on,indicate no Bluetooth connected or waiting for pairing.If it slow flashes(1s light,5s dark) indicate Bluetooth connected successfully
- Dual pairing Indicator:If the light flashes rapidly(light 100s,100s dark),indicate the speaker in search condition; If two speakers pairing successfully,white light of the main speaker will in light condition(white light 1s, 1s dark when sub-speaker pairing successful)
- AUX IN Indicator**
- When in Aux in mode,light flashes slowly 1s bright,3s dark
- Red light**
- Charge Indicator:When the battery in low condition,red light flashes slowly(1s light,1s dark);when charging, Indicator is red,red light will turn off full charged

#### Notice:

- 1.Default Volume:Grade 16,speaker default volume set to middle level

- 2.Line in connection priority,will cut down the Bluetooth when insert line in cable,connect phone automatic when pull out the cable
  - 3.The speaker will be powered off automatically after 2 minutes if there is neither connecting nor working speaker will be powered off automatically after 15 minutes if it is not working even enough connected with Bluetooth
- Warm note:**Please be attention the USB cover is keep tightly before you put it to test under water, otherwise it will damage the device

#### FAQ:

- 1.Poor sound quality
  - Please make sure the speaker and device is in effective transmission distance(32 feet) and there is no barrier between them.
- 2.Bluetooth can not be paired
  - Please ensure the both of the cell phone and speaker are in pairing mode.If the blue indicator is not flashes quickly,please restart the speaker till it is.
  - Please ensure that there is no Aux-in cord is insert,Bluetooth is disconnected once with the Aux-in cord in.
  - In one speaker could be paired with one device once,That means that when you are going to pair the speaker with the second different device,you may have to turn Bluetooth of the previous one off or remove the speaker from the Bluetooth record.

- 3.Can not charge the speaker
    - Please change the other charging cord or use an AC adapter to have a try again.
  - 4.Speaker shuts off automatically
    - Please ensure the power is full.The speaker will be powered off automatically 2 minutes if there is neither connecting nor working and will be powered off automatically 15 minutes if it is not working even though Bluetooth connected.Please restart the speaker if there is any occurrence happens above.
- Not recommend to play music in the water.The transmission-distance and stability of the bluetooth speakers will be effected in the water. Simultaneously, the voice will be unstable.
- Guarantees that it will stay safe in the shower, in the rain, by the pool or on a boat (Just make sure if water gets in the speaker, to let it dry out before use)
- FCC Warning:**
- The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not properly used, can cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If you experience interference, you are encouraged to try to correct the interference by one of the following measures:
- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

website : [www.aomais.com](http://www.aomais.com)  
customer service email: [support@aomais.com](mailto:support@aomais.com)