


# **DRAFT**

# **DRAFT**

## **Installation instructions**

1. **Install the unit in hidden location in the vehicle**

Use the Mounting Legs to screw the unit or to tie it up with strips.

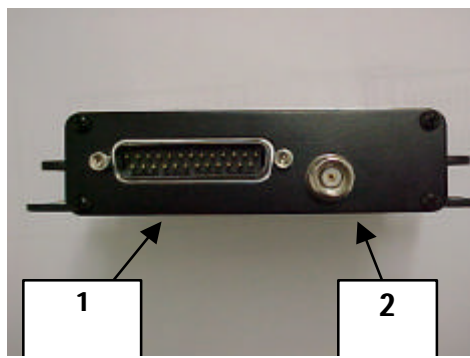

2. **Connect the main power (12 V) to the D25 connector (1) to pins No 1/14 (+) and pins No.3/16 (-)**
3. **Connect the RF- Antenna to the TNC connector (2).**
3. **Call Ituran operating center for unit remote initialization.**

**We will be happy to assist you at customer support center**

# **DRAFT**

# **DRAFT**

## **TULIP**



**Congratulation! You have joint the exclusive client group of Ituran, U.S.!**

**Our system allows for the location of vehicles in open area, urban and metropolitan area.**

**For efficient and useful operation of the TULIP, please follow the instructions.**