



GIANT R/C CENTIPEDE

CONTENTS :

- 1 x R/C Centipede with built-in non-replaceable rechargeable battery
- 1 x Transmitter
- 1 x USB charging cable

OPERATING INSTRUCTIONS:


CENTIPEDE

The Centipede is powered by a built-in non-replaceable rechargeable battery. The included rechargeable battery is not charged prior to shipment and must be charged before the first use.

Charging The Centipede

1. Make sure the Centipede's ON/OFF switch is in the OFF position. (See Diagram 1.)
2. Plug the charging cable jack to the charging socket at the underside of the Centipede.
3. Plug the charging cable USB socket to an USB certified port, i.e., desktop computer / laptop computer / smartphone charger / tablet charger / car charger.
4. The LED lights will stay ON to show it is charging.
5. Once the LED lights turned OFF, the Centipede is fully charged. Unplug the USB charging cable (See Diagram 2.)

DESKTOP COMPUTER,
LAPTOP COMPUTER,
SMARTPHONE CHARGER,
TABLET CHARGER,
CAR CHARGER

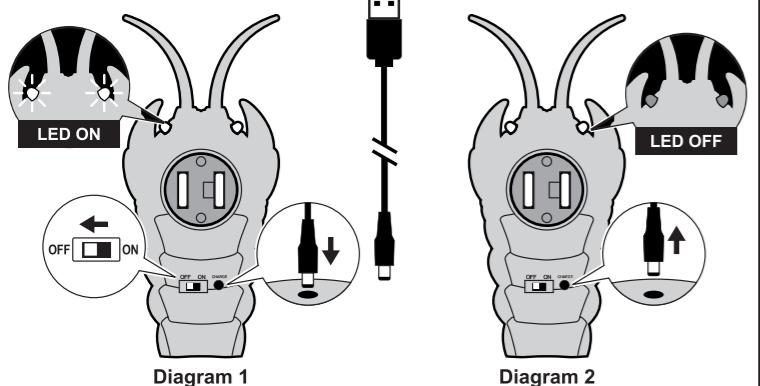

Caution : Built-In Battery Safety Information

1. The Centipede includes a non-replaceable battery. Do not open, disassemble or alter the Centipede in anyway.
2. Adult supervision is required when charging the Centipede.
3. Charge battery in isolated area. Keep away from flammable materials.
4. Do not expose to direct sunlight.
5. Do not recharge the toy if it is hot. Allow it to cool before recharge.
6. Do not allow the batteries to get wet.
7. Carefully read the instruction guide and use the batteries correctly.
8. Rechargeable batteries are only to be charged under adult supervision.
9. Routine examination for damage to the plug, enclosure and other parts. In the event of any damage, the toy must not be used with USB port until the damage has been repaired.
10. This toy is not intended for children under 3 years old.

O.I. NO. 5945

#5F63F56

5+

USB CABLE INCLUDED

AAA x2
NOT INCLUDED



TRANSMITTER

1. Unscrew the battery-compartment cover to open.
2. Insert two AAA/LR3 batteries by matching (+) and (-) sign as indicated in the battery compartment. (See Diagram 3.)
3. Replace the battery-compartment cover, and screw it closed.

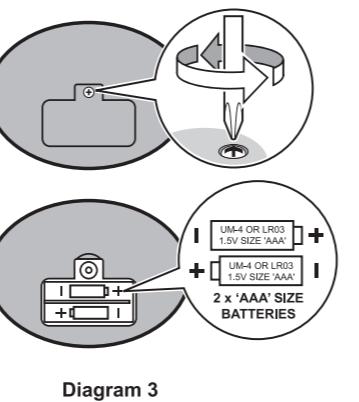


Diagram 3

HOW TO PLAY

TO BEGIN

1. Push the Centipede's ON/OFF switch to the "ON" position. (See Diagram 4.)

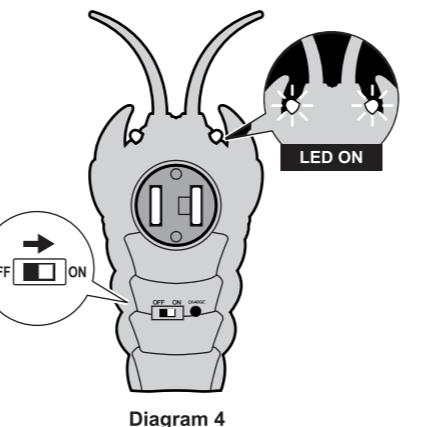


Diagram 4

RUNNING FORWARD

1. Press both "LEFT" and "RIGHT" buttons at the same time for forward motion. (See Diagram 5.)


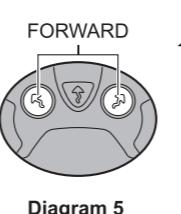


Diagram 5

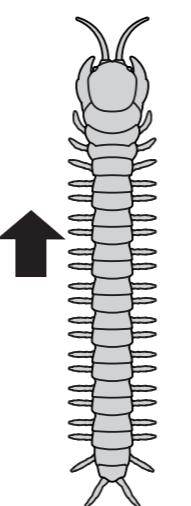

5+

TURNING

1. Press "LEFT" button to turn left. (See Diagram 6.)
2. Press "RIGHT" button to turn right. (See Diagram 7.)

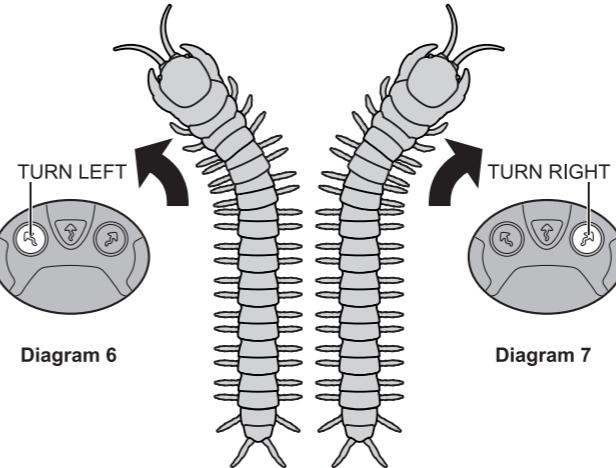


Diagram 6

Diagram 7

S-SHAPED MOVEMENT

1. Press the middle button for "S-Shaped Movement". (See Diagram 8.)

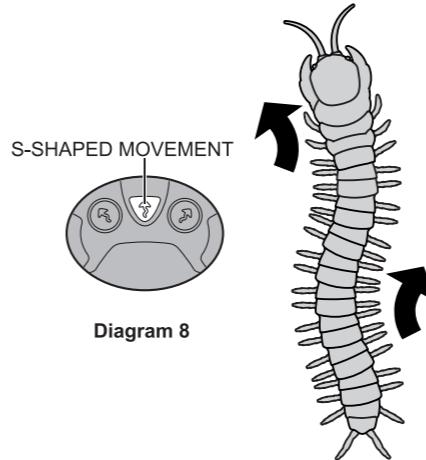


Diagram 8

TO STOP OPERATION

1. Release all buttons to make the Centipede stop. (See Diagram 9.)

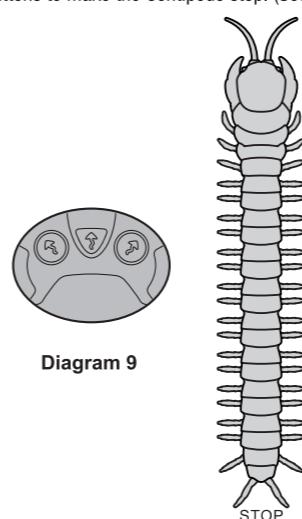


Diagram 9

PERFORMANCE TIPS:

- Do not operate on grass, sand or carpet.
- Keep toy away from water.
- Use fresh alkaline batteries.
- After every 15 minutes of operation, be sure to rest toy at least 30 minutes.
- When not in use, make sure toy's ON/OFF switch is in the OFF position.
- Do not bend antenna.
- Electrical or CB interference, mobile phones, air conditioning, elevators and buildings with steel girders will affect toy's operation.
- Do not leave toy or transmitter near sources of heat or under direct sunlight for long periods of time.
- When not in use, remove the batteries from transmitter.

BATTERY CAUTIONS

1. For maximum performance use Alkaline batteries.
2. Do not mix old and new batteries.
3. Do not mix alkaline, standard (Carbon Zinc) or rechargeable batteries.
4. Do not recharge non-rechargeable batteries.
5. Ensure batteries are inserted with the correct polarity.
6. Remove batteries when toy is not in use.
7. Remove exhausted batteries from toy and dispose of in accordance with the maker's recommendation.
8. Rechargeable batteries should only be charged under adult supervision.
9. The supply terminals are not to be short-circuited.
10. The antenna wires are not to be inserted into power outlets.

FCC NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ATTENTION PARENTS:

IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT ANY POTENTIALLY HAZARDOUS PARTS BE REPAIRED OR REPLACED.

ToysRus®

Contents and colors may vary.

CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

CAUTION: Remove all twist-ties and plastic loops before giving toy to child.

© 2016 DISCOVERY COMMUNICATIONS, LLC.
ANIMAL PLANET AND THE ANIMAL PLANET LOGO ARE TRADEMARKS OF (ET LE LOGO ANIMAL PLANET SON DES MARQUES DÉPOSÉES DE Y EL LOGO DE THE ANIMAL PLANET SON MARCAS REGISTRADAS DE) DISCOVERY COMMUNICATIONS, LLC, USED UNDER LICENSE (UTILISÉES SOUS LICENCE/UTILIZADO BAJO LICENCIA). ALL RIGHTS RESERVED (TOUS DROITS RÉSERVÉS/TODOS LOS DERECHOS RESERVADOS).
ANIMALPLANET.COM ANIMALPLANET.CA
www.toysrus.com www.toysrus.ca

© 2016 GEOFFREY, LLC, A SUBSIDIARY OF (UNE FILIALE DE/UNA SUBSIDIARIA DE) TOYS'R'US, LLC. MADE IN CHINA (FABRIQUÉ EN CHINE/FABRICADO EN CHINA), DISTRIBUTED IN THE UNITED STATES BY (DISTRIBUE AUX ÉTATS-UNIS PAR/DISTRIBUIDO EN LOS ESTADOS UNIDOS POR) TOYS'R'US, INC., WAYNE, NJ 07470. IMPORTED BY (IMPORTE PAR/IMPORTADO POR) TOYS'R'US (CANADA) LTD. (LTDÉ), 2777 LANGSTAFF ROAD, CONCORD, ON L4K 4M5. DISTRIBUTED IN AUSTRALIA BY (DISTRIBUÉ EN AUSTRALIE PAR/ DISTRIBUIDO EN AUSTRALIA POR) TOYS'R'US (AUSTRALIA) PTY LTD. (LTDÉ), REGENTS PARK NSW 2143.
www.toysrus.com www.toysrus.ca

O.I. NO. 5945