 
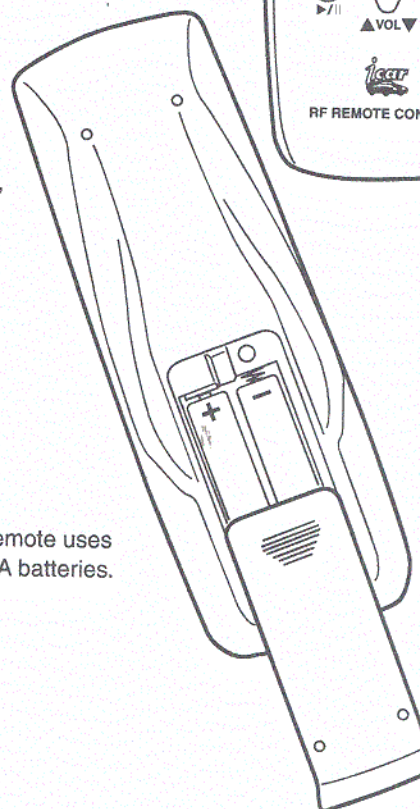 


Remote Control Functions – IC30RF

The IC30RF allows you to control the basic functions of the IC8010 such as:

 
 
- **POWER** (on/off)
- **MODE** Mode Select
(TUNE > CD > CDC > AV > AUX)
- **1 – 6** (six preset stations)
- **D.DN** (CDC previous disc)
- **D.UP** (CDC next disc)
- **PGM** (program track play)
- **RPT** (continuously repeat the same track)
- **RDM** (play all tracks on current CD in random order)
- **INT** (play first ten seconds of each track on current CD)
- **MUTE** (silence receiver)
- **BAND** (AM or FM bands)
- **SEL** Function Select
(VOL > TRE > BAS > BAL > FAD)
- **VOL** (↗↘) Adjusts current function:
Volume (↗↘), Treble (↗↘),
Bass (↗↘), Balance (right ↗↘ left),
Fader (front ↗↘ rear)
- **TUN/TRK** (◀▶) (tuning for radio or track selection for CD)
- **▶/II** (CD pause/play)
- **A/V** Audio/Video Select
(AV1 > AV2 > AV3 > AV4)

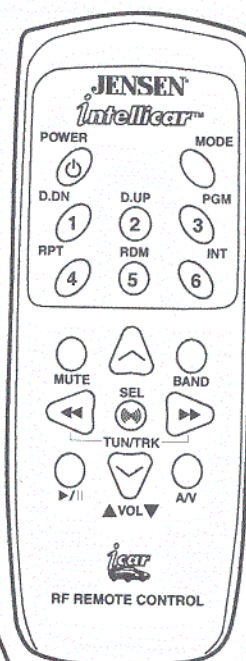

The RF Remote uses two (2) AAA batteries.

Remote Control – IC30RF

The IC30RF is an optional radio frequency remote control. Unlike an infrared remote control, the IC30RF can operate the Intellicar™ system from anywhere in or near the vehicle and is not limited to line-of-sight between the remote and the head unit. You can operate the remote control from the back seat (or any seat) and not worry about pointing the remote control at the head unit. The RF Remote Control system includes a transmitter (the remote control device) and a receiver (the module that connects to the Intellicar™ bus). To operate the IC30RF simply connect the module (receiver) to the Intellicar™ bus and install batteries in the remote control (transmitter); the “RF REMOTE” icon appears in the display.

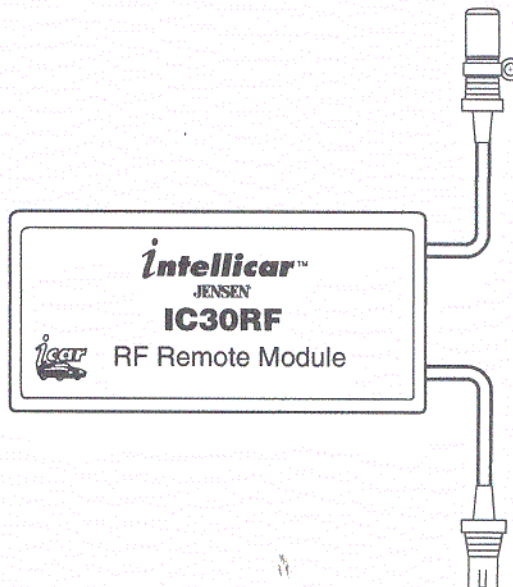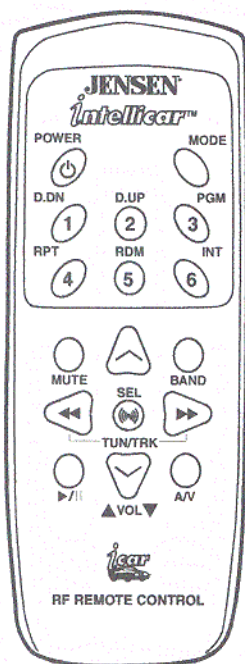

Wireless Remote Icon

RF REMOTE

If a Wireless Remote transmitter is connected to the IC8010 the RF REMOTE icon appears in the display.

The Wireless Remote Control operates on a radio frequency enabling it to function anywhere in or around the vehicle.

Note:

Both IR and RF remote controls can be used at the same time.

Audio/Video Mode



Press **MODE** until A/V appears in the display.

To access the A/V mode the IC20AV module must be connected to the Intellicar™ bus.

When the IC20AV is connected the SOURCE icon window appears in the display.



Note:

 
When A/V Mode is selected the audio signal coming from the A/V Source Selector is considered the primary audio source.

The audio sound track (AV1, AV2, AV3, AV4) from the source selector will be heard simultaneously through the vehicle speakers and optional wireless headphones.

Source Audio

This function allows a primary source to be heard through the optional wireless headphones connected to the Intellicar™.

When Source Audio is activated S-A (source audio) appears in the main display and A_S (audio source) appears in the sub display.

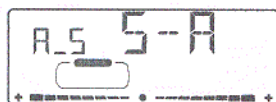

Depending on the display priority you choose (TIM or FREQ) you will see both S-A and A_S in the display or just the A_S.

Note:

The Source Audio option is only active when the IC20AV module is connected to the Intellicar™ bus.

 
A/V Source

In order for the A/V button to function, the IC20AV source selector must be connected to the Intellicar™ bus.



Press **A/V** button to sequence through audio/video selections:

AV1 > AV2 > AV3 > AV4

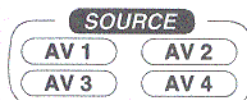

The current audio/video selection appears in the SOURCE window on the display.

Primary Source

A primary source is considered one of the following:

- Tuner AM/FM (TUN)
- CD Player (CD)
- CD Changer (CDC)
- A/V (Only considered a primary source when A/V mode is selected.)
- Auxiliary Input (AUX)

For example, if a back seat passenger wanted to listen to the radio through the optional wireless headphones, but the driver desired silence while driving in heavy traffic:

1. Select tuner mode on head unit.
2. Turn the volume on the head unit down until "1" appears in the display.
3. Press the **A/V** button until the SOURCE window appears with no additional icons inside.
4. The tuner can now be heard through the wireless headphones.

Note:

 
The volume on the head unit must be set to at least "1" or else all audio signals will be "muted."

Audio/Video Source Selector

The optional Intellicar™ Audio/Video Source Selector integrates video based multimedia into the mobile environment. The IC20AV can accommodate up to four different A/V input sources such as a VCR, DVD, video game or navigation. Only one of the four A/V inputs can be viewed at a time. When the IC20AV module is connected to the Intellicar™ bus, the "SOURCE" icon window appears in the display.

For the IC20AV Audio/Video Source Selector to operate you must have:



- at least one TV or monitor installed.
- IC20AV Audio/Video Source Selector module connected to the Intellicar™ bus.
- at least one A/V source connected to the IC20AV Source Selector (VCR, DVD, video game, navigation).

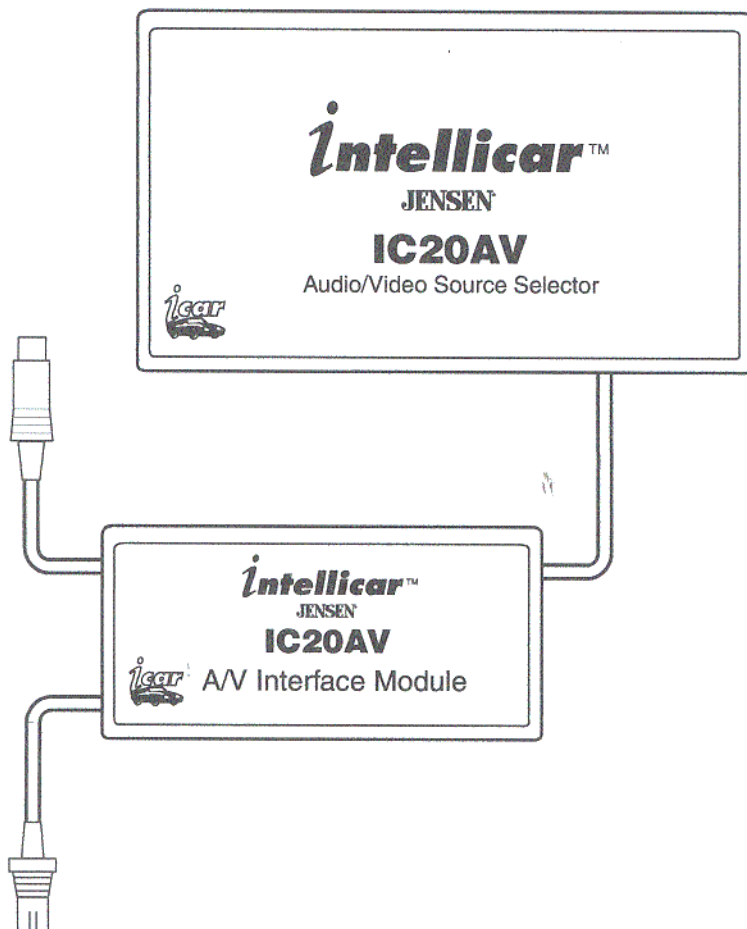



Wireless Headphones – IC40HP

  The IC40HP is an optional 900 MHz wireless headphone module. Wireless headphones allow private listening or allow occupants to listen to two different sources simultaneously, one source through the vehicle speakers and one source through the Wireless Headphones. The IC40HP includes a transmitter (the module that connects to the Intellicar™ bus) and a receiver (the wireless headphones). To operate the IC40HP simply connect the module (transmitter) to the Intellicar™ bus and install batteries in the head phones; the “HD PHONE” icon appears in the display.

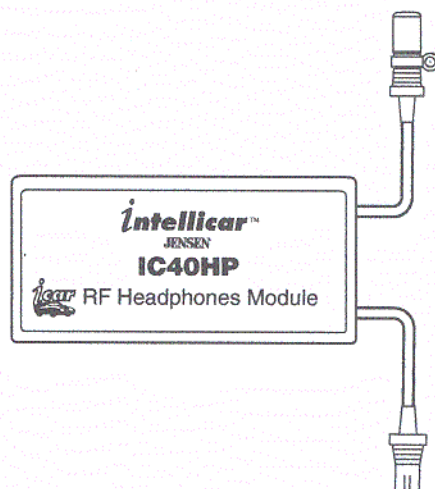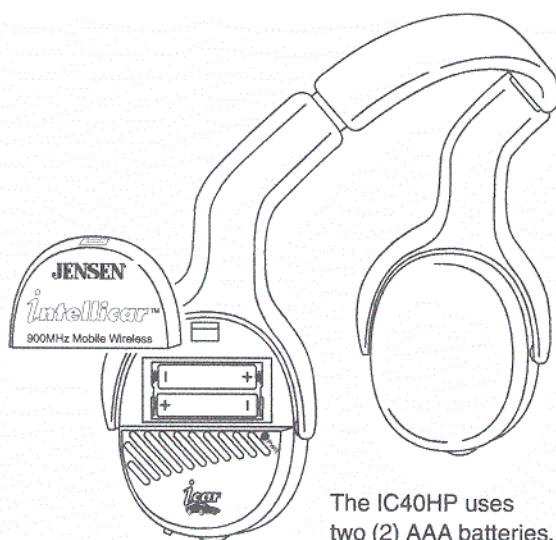

Headphone Icon

HD PHONE

If a Wireless Headphone transmitter is connected to the IC8010 the HD PHONE icon appears in the display.

Note:

If multiple headphones are connected to the IC8010, all headphones receive the same audio output.

Audio Source



The **A/V** button allows you to choose which audio output the Wireless Headphones will receive.

Press the **A/V** button to sequence through audio selections:

AV1, AV2, AV3, AV4

External Audio/Video sources connected to the IC8010 through an Audio/Video Selector.

Source Audio

A primary source (AM/FM/CD/CDC/AUX or the A/V mode) currently selected on the head unit. When “Source Audio” is selected using the A/V button, the selected primary source will be heard through the wireless headphones.

JENSEN[®] IC30RF

**How to Install and Operate the Intellicar™
IC30RF Radio Frequency Remote Control**

Installation

Before You Begin

Before proceeding with the installation, make sure you have the following:

- IC30RF transmitter – hand held remote
- IC30RF receiver – small module to connect to the bus

Overview

The IC30RF will operate the Jensen Intellicar system only. It uses a proprietary data bus that is exclusive to all Jensen Intellicar™ products. If desired, purchase an additional 5-meter extension cable (IC5MCABLE) to position the module in a more favorable location.

Installation Location

For best reception, install the remote transmitter under a seat or in the trunk area away from metal surroundings. If the remote transmitter is installed in-dash, position the antenna away from any metal surfaces. An inch or so of clearance between a metal surface and the antenna can make quite a difference.

Wiring

The Intellicar bus includes all power and audio signals in one easy to use 13-pin DIN cable. Before connecting anything to the bus make sure the head unit power is OFF. Plug the IC30RF module into the Intellicar bus. When a module is connected to the bus, and the power is turned ON, the head unit will display an icon indicating that the module was detected, recognized and is receiving power.

Mounting

The IC30RF receiver can be mounted using the screw tabs provided or by using double-stick tape or Velcro.

Operation

Please refer to the head unit's operation manual for complete instructions on how to operate the IC30RF Remote Control.

Technical Assistance

For technical assistance call 1-800-323-0221. Before calling, make sure all cable connections are correct and secure.

Limited One Year Warranty-USA and Canada

Length of Warranty. This warranty from Recoton Mobile Electronics shall be in effect for a period of one year from the date of the first consumer purchase.

Persons Protected. This warranty will be enforceable by the original owner and any subsequent owners during the warranty period so long as proof of date of purchase from an authorized Jensen dealer is presented whenever warranty service is required.

What is Covered. Except as otherwise specified below, this warranty covers all defects in material and workmanship in this product. The following are not covered: damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair or failure to follow instructions supplied with the product; damage occurring during shipment (claims must be presented to the carrier); elimination of car static or other electrical interferences; any product purchased outside USA or Canada, or on which the serial number has been defaced, modified or removed.

How You Can Get Service.

U.S. Purchasers. Please telephone Jensen at 1-800-323-4815. We will either inform you of the name and address of an authorized Jensen repair station which will service the product or will advise you to send the product to a factory service center.

Canadian Purchasers. The product should be returned to the Jensen dealer from whom it was purchased and such dealer either will service or arrange for service of the product.

If shipment of the product is required, it should be packed securely. The original dated bill of sale must always be included with the product as proof of warranty coverage.

What We Will Pay For. We will pay for all labor and material expenses required to repair the product, but you must pay any labor costs for the removal and/or installation of the product. If the product is shipped for warranty service, you must prepay the initial shipping charges, but Jensen will pay the return shipping charges if the product is returned to an address inside the USA or Canada.

Exclusion of Certain Damages. Jensen's liability is limited to the repair or replacement, at our option, of any defective product and shall not include incidental or consequential economic damages of any kind.

Some states and/or provinces do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and province to province.

JENSEN[®]

Recoton Mobile Electronics
A Division of Recoton Audio Corporation
A RECOTON[®] COMPANY
1090 Emma Oaks Trail
Lake Mary, Florida 32746

©2000 Recoton Audio Corporation

Welcome!

Thank you for choosing a Jensen product. For best results, read all of the instructions before you begin installation or operation.

Warranty Service

If your Jensen product should ever require service, you will need to have the original dated receipt. If you ever need to return the unit for any reason, always include the receipt with the product.