




Shenzhen XK Innovations Technology Co., Ltd.



A500

4CH 3D6G SYSTEM AIRPLANE

快速入门手册

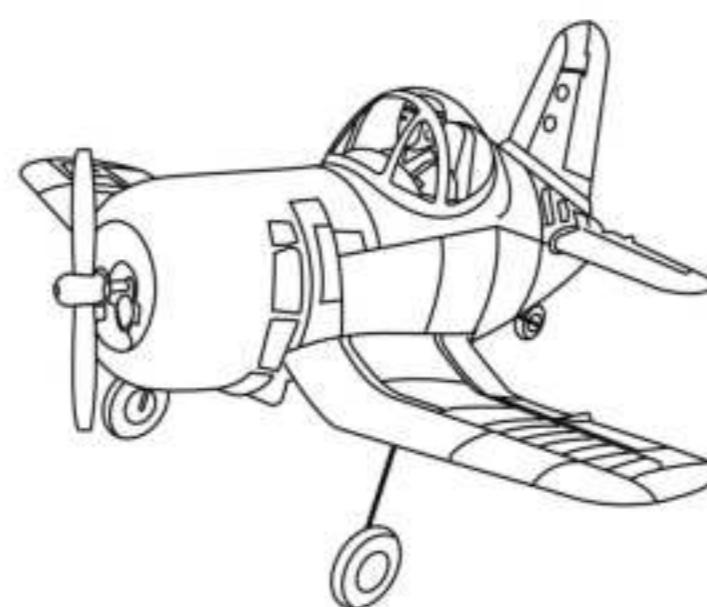

www.xk-innovations.com

Email: sales@xk-innovations.com

Make sure that the positive and negative electrode position are correct, do not mix old and new batteries to avoid affecting the battery life. Batteries should be used out if don't use for long time to avoid liquid leakage or any fault. If battery leakage do not use any more. Discarded appliances, please recycle according to the country or regional Waste Disposal Act of recycling, not to be discarded in order to avoid pollution of the environment.

安装电池时请确保负位置旧电池请勿同时混用以免影响电池寿命。若长时间不使用本产品,请取出电池,以免造成电池漏液、故障。若电池有漏液情况请勿再使用。废弃的电池,请依照该使用国家或地区的废弃物清理法令回收,切勿往任意丢弃环境。

Lipo battery is more dangerous than any other battery. Be sure to read the following precautions before use and follow precautions when using this battery. The Company will not be liable for any damages caused by improper use.

- (1) Do not use the charger to charge other than the original, in order to avoid the risk of explosion and fire accidents.
- (2) Do not cross-connect, reverse polarity, burning, avoid the metal object to touch the battery positive and negative, which will cause short circuit. And prevent sharp objects to pierce the battery to avoid the risk of fire.
- (3) When changing, please be careful to ensure it charges in your sight. And away from children to touch and avoid fire.
- (4) If battery is shorted, then the current is forbidden. Otherwise it will cause the battery to swell, deform or even explode on fire, endangering the safety of life and property.
- (5) Waste batteries to use in strict accordance with the country's recovery Waste Disposal Act, so as not to pollute the environment.)

锂电池比其他电池有更多的危险性,使用前请务必详细阅读并遵循以下注意事项。本公司将不对任何因不当使用所造成的损害负责。

- 严禁使用原厂以外的充电器进行充电,以免发生爆炸火灾的危险。
- 严禁反接、短接、正负极反接、某极烧毁,避免金属物品触碰电池正负极造成短路,并请防止尖锐的物体刺穿电池,以避免电池起火的危险。
- 充电时请谨慎小心,确保在您的视线范围内进行充电。并远离易燃物,以免发生火灾。
- 电池使用后如有发热情况,严禁充电,否则会造成电池膨胀、变形,爆裂甚至起火燃烧,危及生命财产的安全。
- 废弃的电池请按照该使用国家或地区的废弃物清理法令回收,以免污染环境。)

-3-

Keep away from heat and sunlight as much as possible to avoid deformation due to high temperatures or even the possibility of melting damage.
尽量远离热源、日晒,以避免因高温而变形甚至熔毁损坏的可能性。

This product uses ages over 14 years old, remote control glider has a certain degree of difficulty in the early stage of learning, want to skillfully control the model glider need simulator fly.

本产品适用年龄14岁以上,遥控滑翔机在学习初期有着一定难度,需要熟练操控模型机方可飞行。

Landing gear installation

起落架安装

Install the front and rear landing gear into the landing gear seat in the direction shown in the figure. The tilt angle of the front landing gear is forward, and the tilt angle of the rear left and right landing gear is backward.

将前起落架按图示方向,向后放进起落架座里。前左右起落架倾角朝前,后起落架倾角朝后。



Aircraft rudder adjustment

飞机舵柄调节

1. To power the aircraft, ailerons, elevator surface should be back in the middle, if the rudder surface is not in the middle position, by manually rotating the loose joint, make the rudder surface


2. Adjust the rudder trim to be at the middle, gyroscopic off. Gyroscope in repair status can not be accurately adjusted to the middle position of the rudder surface.

3. Rotate the wire can shorten the length of the wire sliding, sliding to the middle can be extended the length of the wire.

1.给飞机通电,调整升降舵面使中间,如果舵面不在中间位置,通过手动螺丝刀将舵面调到中间位置。副翼钢丝调节将机翼折开。

2.调整好飞机不能启动过,陀螺仪处在维修状态下不能准确的将舵柄调到中间位置。

3.钢丝向右滑动可减短钢丝长度,向左滑可加长钢丝线长度。

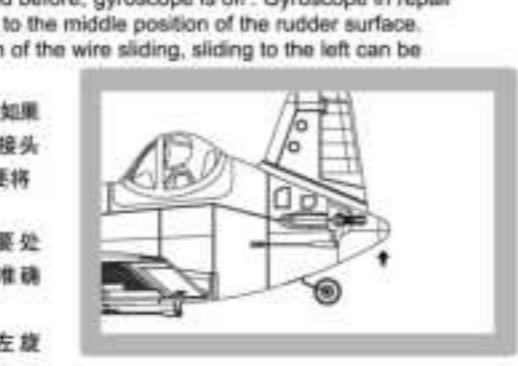

-4-


3D / 6G conversion

3D转换

1. The boot defaults to 6G attitude mode, by short pressing the mode switch button and making two beeps, it will be converted to 3D (Locking red indicator flash)

2. When flying in 3D mode, no matter what the flight attitude is, short press the mode switch button again to switch to 6G mode, and the flight will immediately return to a static attitude.

3. 6G gesture mode is suitable for beginners flight, 3D mode to do aerobatics.

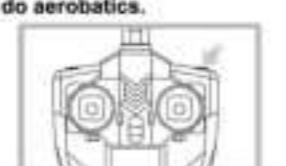

1.开机默认为6G姿态模式,通过短按模式切换按钮,并两次“滴滴”声,转换为3D(锁住红色指示灯闪烁)

2.无论何时在3D模式飞行,无论飞机处于什么姿态,通过短按模式切换按钮,再次“滴滴”声,转换为6G模式,飞行

3.6G姿态模式适合初学者飞行,3D模式可做特技飞行。

End Flight

At the end of the flight, take out the battery safety Please develop good habits, so as to avoid regret.

结束飞行时,请将机型内的电池安全塞。

培养良好习惯,以免造成遗憾。

Caveat:

警告:

The battery is not removed, it will cause the battery to excessive discharge damage, and even cause a fire burning danger.

电池未取下,将导致电池过度放电而损坏,甚至造成起火燃烧的危险。

Replace propeller

螺旋桨更换

Take out the fan blade assembly
用螺丝拆卸风扇叶片组件

Use a manual screwdriver to unscrew the fan blade fixing
用手动螺丝刀拆卸风扇叶片固定螺丝

The position marked "I" on the upper side of the upper wind blade clamp is aligned with the lower side of the lower wind blade clamp
上风叶夹具上标有“1”的位置与下风叶夹具上标有“1”的位置对齐

Arbitrary grooves of the upper wind blade clamp are aligned with the lower wind blade clamp
上风叶夹具上的任意槽位与下风叶夹具上的槽位对齐

First remove the fan blade assembly, hold the fan blade in your hand, then use a manual screwdriver to take out the fan blade fixing and replace the new fan blade and lock the screw back.
先取下风扇叶片,用手拿住叶片,然后用手动螺丝刀拆卸叶片固定螺丝,取出叶片,更换新的叶片后用螺丝锁回。

Note: When replacing the new blades and re-installing, align any groove of the upper wind blade clamp with any semicircular convex limit point of the lower wind blade clamp and install it in place obliquely.
注意:当更换新叶片并重新安装时,将上风叶夹具上任意槽位与下风叶夹具上一个半圆凸起限位点对齐后斜装。

When the fan blade is installed, the fan blade clamp is accidentally pulled out, you only need to align the position marked "I" on the side of the fan blade clamp with the flat position of the reduction shaft during installation.
当风扇叶片安装时,风扇叶片夹具意外脱落,只需要将叶片夹具上标有“1”的位置对准减速轴扁平位置即可。

Pre-flight preparation

飞行前准备

Take out the fan blade assembly
取下风扇叶片组件

Use a manual screwdriver to unscrew the fan blade fixing
用手动螺丝刀拆卸风扇叶片固定螺丝

The position marked "I" on the upper side of the upper wind blade clamp is aligned with the lower side of the lower wind blade clamp
上风叶夹具上标有“1”的位置与下风叶夹具上标有“1”的位置对齐

Arbitrary grooves of the upper wind blade clamp are aligned with the lower wind blade clamp
上风叶夹具上的任意槽位与下风叶夹具上的槽位对齐

First remove the fan blade assembly, hold the fan blade in your hand, then use a manual screwdriver to take out the fan blade fixing and replace the new fan blade and lock the screw back.
先取下风扇叶片,用手拿住叶片,然后用手动螺丝刀拆卸叶片固定螺丝,取出叶片,更换新的叶片后用螺丝锁回。

Note: When replacing the new blades and re-installing, align any groove of the upper wind blade clamp with any semicircular convex limit point of the lower wind blade clamp and install it in place obliquely.
注意:当更换新叶片并重新安装时,将上风叶夹具上任意槽位与下风叶夹具上一个半圆凸起限位点对齐后斜装。

When the fan blade is installed, the fan blade clamp is accidentally pulled out, you only need to align the position marked "I" on the side of the fan blade clamp with the flat position of the reduction shaft during installation.
当风扇叶片安装时,风扇叶片夹具意外脱落,只需要将叶片夹具上标有“1”的位置对准减速轴扁平位置即可。

Pre-flight frequency guide of TX and receiver

遥控器与接收机对频说明

Model you bought has completed frequency matching at factory. If need to match frequency again, please follow following tips:

1. Connect the transmitter to the power source and keep the aircraft stationary, then turn on the remote control, the indicator light of the remote control is on for a long time, indicating the frequency matching is completed.

2. The red indicator on the remote controller flashes, the red light of the receiver flashes slowly, and then becomes fast, and the frequency matching is completed. Install the battery vertically into the foam card slot.

3. When using the frequency matching, please avoid the same type of remote control with the same frequency to open, so as not to affect the frequency.

-5-

Motor replacement

马达更换

Take out the wing fixing screws, remove the wing and unplug the motor plug
卸下机翼固定螺丝,拆下机翼,断开电机插头

Break down the fan blade assembly obliquely in any direction
拆卸风扇叶片组件,沿任意方向拆卸

Take out the motor assembly and replace the motor
取出电机组件,更换电机

Note: When reinstalling the fan blade assembly, align any groove of the upper wind blade clip with any semicircular convex limit point of the lower wind blade clip and install it in place obliquely.
注意:当重新安装风扇叶片组件时,将上风叶夹具上任意槽位与下风叶夹具上一个半圆凸起限位点对齐后斜装。

When the fan blade is installed, the fan blade clamp is accidentally pulled out, you only need to align the position marked "I" on the side of the fan blade clamp with the flat position of the reduction shaft during installation.
当风扇叶片安装时,风扇叶片夹具意外脱落,只需要将叶片夹具上标有“1”的位置对准减速轴扁平位置即可。

Pre-flight preparation

飞行前准备

1. Open the battery cover, correctly connect the battery to the remote control, and then turn on the remote control, the indicator light of the remote control is on for a long time, indicating the frequency matching is completed.

2. Turn on the remote control, the indicator light of the remote control is on for a long time, indicating the frequency matching is completed.

3. Replace the battery in the battery compartment and cover the battery cover.

4. Turn on the transmitter, the indicator light of the transmitter is on for a long time, indicating the frequency matching is completed.

5. When using the frequency matching, please avoid the same type of remote control with the same frequency to open, so as not to affect the frequency.

-6-

Hand throwing takeoff right way

手抛起飞正确方法

As shown in the figure, against the wind, at full power, at an angle of 5°, try to throw the aircraft

如下图所示,逆着风向,开足马力,以5°的角度将飞机抛出。

(Note: Aircraft took off under 6-axis mode, on condition of throwing correctly, the aircraft will automatically default to climb attitude. Since aircraft has function of altitude correction, at this stage as long as the plane did not drop, it is not recommended pull the elevator rocker, otherwise the plane will fly back down.)

(注:飞机在6轴模式起飞,正常情况下,飞机从以爬升姿态飞行,由于飞机有姿态修正功能,此阶段只要飞机没有低头趋势,建议不要向下拉升杆摇杆,否则飞机会有向低飞的趋势。)

Wind direction
风向

Wind direction
风向