


TEST SETUP PHOTO(S)



TEST SETUP PHOTO(S) -EUT POSITIONS

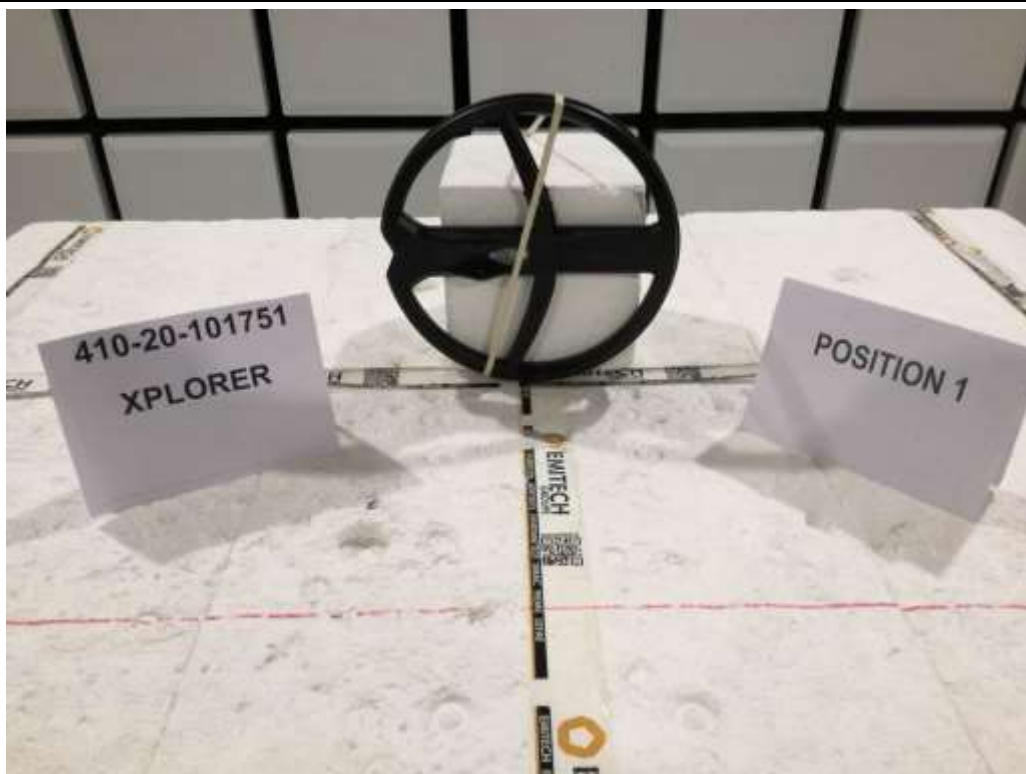


TEST SETUP PHOTO(S) -EUT POSITIONS



TEST SETUP PHOTO(S) – FOR PRELIMINARY MEASUREMENT



TEST SETUP PHOTO(S) -EUT POSITIONS

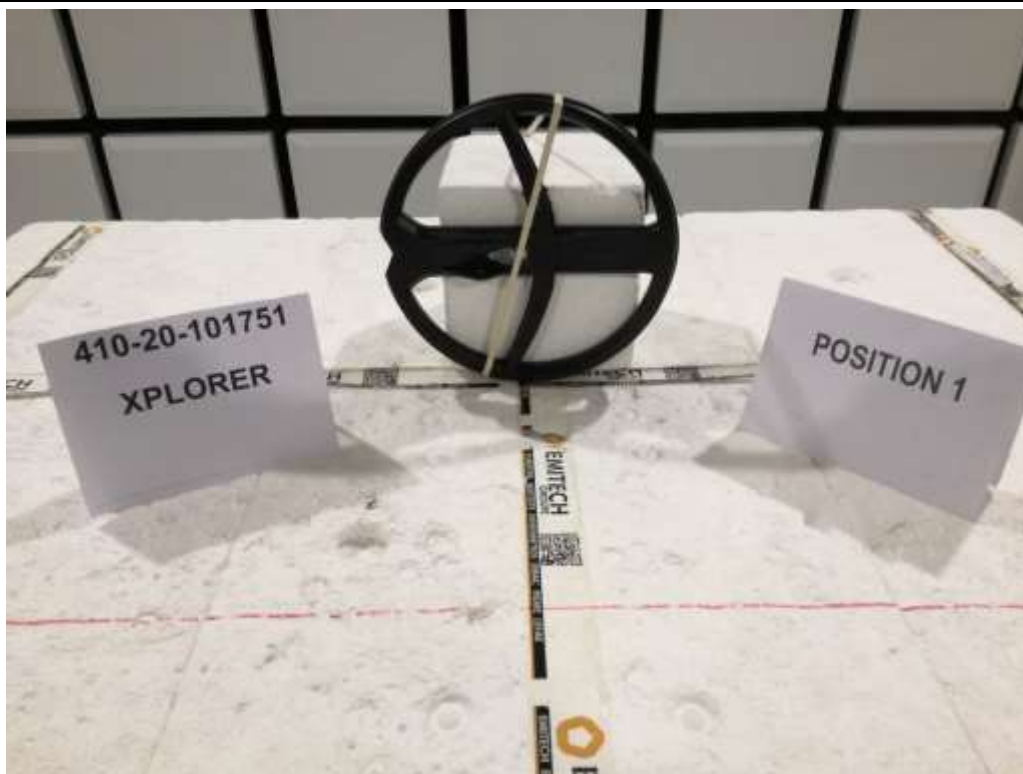


TEST SETUP PHOTO(S) -EUT POSITIONS



TEST SETUP PHOTO(S) – FOR FREQ < 200MHz



TEST SETUP PHOTO(S) – FOR FREQ > 200MHZ

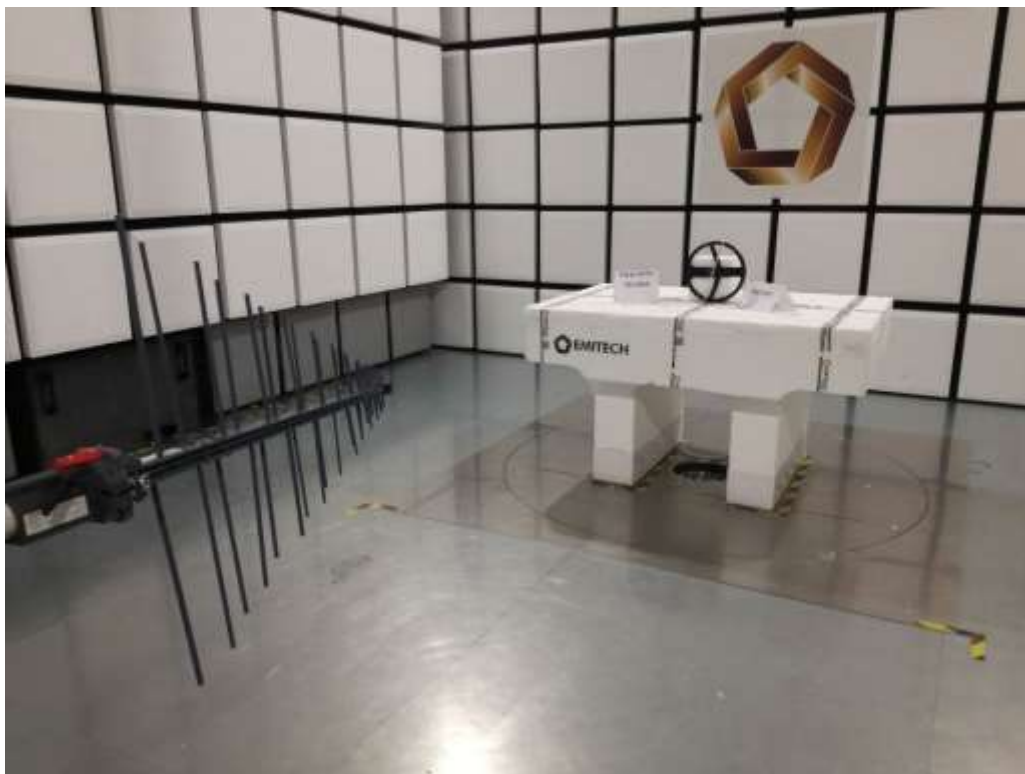

TEST SETUP PHOTO(S) -EUT POSITION 1



TEST SETUP PHOTO(S) -EUT POSITION 2



TEST SETUP PHOTO(S) -EUT POSITION 3



TEST SETUP PHOTO(S) - (OATS) - FOR FREQ 4.1KHZ



TEST SETUP PHOTO(S) - (OATS) - FOR FREQ 45.19KHz

