 
正面






Golf Caddie Pro

User Manual

www.dprofy.com

Overview



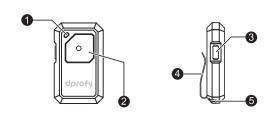

1. Indicator Lights

2. K1 Button

- > If you are on the tee: announce the hole information, hole type,
- and hole length;


 If you are on the fairway: announce the distance to the green and the

Reports the number of hazards within 30 yards of the green.

K1 + K2 : Press and hold to restore factory settings.

4. Metal Clip

5. Battery Compartment

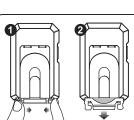

Replacement battery:

- 1. Press the locks on both sides of the bottom with your
- 2. Pull down the battery compartment to replace the battery.

WARNING

THIS PRODUCT CONTAINS A BUTTON BATTERY

If swallowed, a lithium button battery can cause severe or fatal injuries within 2 hours.

Keep batteries out of reach of children.

If you think batteries may have been swallowed or placed inside any part of the body, seek immediate medical attention.

反面

FCC Warning >>>

 \bullet This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- the following measures.
 Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for help.

FCC RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure.









Download Dprofy App

Google Play

How to use dual devices?



Step 1: Bind device for the first time

Open the mobile APP. When you log in to the APP for the first time, you will be guided to bind the device. Click < Bind Device > and 2 devices will appear. After selecting to bind, < My Devices > will show



Step 2: Invite friends and share devices

- 1. Invite friends:
- Friends need to download the APP and register an account. - Scan the QR code on the "Add Friends " page of the APP to



2. Shared Devices:

Click → Me → My Devices → Share Select your friends in the sharing list to complete the sharing.

- 1. The shared device cannot be used alone and can only be used in
- the same game with the device owner.

 2. You can choose one of the two devices to share with others at will.)



Step 3: Start a joint game

- Create a game
 1. Click " New Game " in the APP, select the course and invite friends
- to join.
 2. The system automatically generates a shared scorecard, and the hitting data of both parties will be synchronized in real time.

FAQ

If a friend does not have an APP account, can he use the shared device? No. The friend must first download the APP and register to ensure the

legal ownership and synchronization of the data.

Can it be shared with multiple friends at the same time? Currently only 1v1 sharing is supported.