


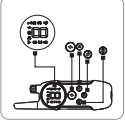 
 




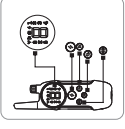 
 


尺寸: 80*105mm

<div><div><div>TZ-912</div><div>Rechargeable and Waterproof Remote Dog Training Collar Operation Guide</div><div>Please read the entire guide before using</div></div></div>	<div><div>Thanks for choosing the Rechargeable and Waterproof Remote Dog Training Collar.</div><div>Our mission is to provide you with the safe tools and techniques to train your dog.</div></div> <div><div>Contents</div><div><div>2 Features</div><div>2 How Does the Rechargeable and Waterproof Training Collar Work</div><div>3 Precautions</div><div>4 Components</div><div>5 Key Definition</div><div>7 Operation Guide</div></div><div><div>Step 1 Preparing the Remote Transmitter</div><div>Step 2 Preparing the Receiving Collar</div><div>Step 3 Encoding the Remote Transmitter and Receiving Collar</div><div>Step 4 Testing the Rechargeable and Waterproof Training Collar</div><div>Step 5 Fitting the Receiving Collar to your dog</div></div><div><div>12 Frequently Asked Questions</div><div>14 General Tips for Training Your Dog</div><div>15 Common Weights of Different Dog Breeds</div><div>16 Indicator & Display</div></div></div>	<div><div>Features</div><div><div>1. Rechargeable Remote Transmitter</div><div>2. Rechargeable and Waterproof Receiving Collar</div><div>3. 2000 feet remote control range between Remote Transmitter and Receiving Collar.</div><div>4. Beep Mode activates a correcting tone on the Receiving Collar</div><div>5. Adjustable vibration intensity level from 1-8 level</div><div>6. Adjustable static shock intensity level from 1-8 level (optional)</div><div>7. Power saving modes:<ul style="list-style-type: none">The Receiving Collar will go into Standby Mode if it's idle for more than 5 mins. Any movements will activate the Receiving Collar.The Transmitter will go into Standby Mode () will be light off with 30s, will be light off with 1min).</div><div>Press button to re-activate it from Standby mode.</div></div><div>8. The Remote Transmitter can be used to control up to 4 Receiving Collars.</div><div>9. 2 pairs of metal contacts (1 short and 1 long) are included to suit the length of your dog's hair.</div><div>10. The Transmitter with lock key function.</div></div> <div><div>How does the Rechargeable and Waterproof Dog Training Collar Work</div><div>The Rechargeable and Waterproof Training Collar has been proven to be a safe, comfortable, and effective training system for all dogs weighing over 15lbs. This system allows you to control your dog within a range up to 2000 feet. At the press of a button, the Remote Transmitter sends signal to the Receiving Collar and activates a Beep, a Vibration or a Static Shock correction output. By using the Training Collar properly, you can correct much of your dog's undesired behavior and teach basic and advanced obedience commands.</div></div>
--	--	---

<p>Testing the Vibration  Function</p> <ul style="list-style-type: none"> Press the  button on Remote Transmitter to launch vibration signal, if the Receiving Collar vibrates, the Vibration function works correctly. The intensity of the vibration can be adjusted by rotating the rotary knob from level 1-8.  	<p>Step 5 Fitting the Receiving Collar to your dog:</p> <ol style="list-style-type: none"> Center the Contact Points under your dog's neck(A).  <ol style="list-style-type: none"> The Receiving Collar should be positioned snugly around your dog's neck. Important: Make sure that you can fit one finger between the strap and your dog's neck(B).  <p>Note: Choose the correct Contact Points to suit the length of your dog's hair. If your dog has long hair or a thick coat, use the longer Contact Points.</p>	<p>I have fitted the Rechargeable and Waterproof Training Collar correctly, but my dog is not responding.</p> <ul style="list-style-type: none"> Ensure that the batteries are fully charged. You need to charge both the Remote Transmitter and the Receiving Collar for about 2 hours before they can be used for the first time. Check the Remote Transmitter can adjust the intensity level of the vibration or static shock to higher level more than level 1. Restart the Receiving collar by pressing the On/ Off button. Test the 3 functions (Beep, Vibration and Static Shock) before using the Receiving Collar for the first time. Please refer to "Step 4" (page 9) for instructions on how to do this. The Receiving collar will go into Standby Mode if it is idle for more than 5 minutes. Any movements will re-activate it. Make sure that the Contact Points are touching your dog's skin. Trim your dog's fur where the Contact Points touch the neck. Ensure that you are using the correct set of Contact Points suitable for the length of your dog's fur. If none of the above works, encode the Remote Transmitter and the Receiving Collar again. See 'Step 3' (Page 9) for instructions on how to do this. <p>I am trying to test the Receiving Collar manually, but it does not work.</p> <ul style="list-style-type: none"> If you want to test the Receiving Collar manually on your hand or leg, please touch the 2 Contact Points simultaneously. Touching only one of the Contact Points will not work. <p>The Receiving Collar is broken. It has not worked since I dropped it.</p> <ul style="list-style-type: none"> The Receiving Collar is not designed to be drop-proof. Please do not drop the Receiving Collar, as this will damage the interior circuits. 	<p>Frequently Asked Questions</p> <p>Q1: How old does my dog have to be before I start using the Rechargeable and Waterproof Training Collar?</p> <p>A: Your pet should be able to recognize basic commands such as "Sit" and "Stay". The Rechargeable and Waterproof Training Collar may be too large for dogs weighing less than 15lbs.</p> <p>The Receiving collar is adjustable in length from 9.5 to 26 inches. If your dog's neck is smaller than 26 inches, please cut the redundant part. This product is not suitable for dogs with necks larger than 26 inches.</p> <p>Q2: Once my dog is trained and has learned to obey my commands, will he have to continue wearing the Receiving Collar?</p> <p>A: Probably not, although you may need to reinforce the training with the Receiving Collar from time to time.</p> <p>Q3: Is the Receiving Collar waterproof?</p> <p>A: Yes. In fact, your dog can swim while wearing the Receiving Collar. Must seal well the charging port tightly, and keep it dry after get wet.</p> <p>Q4: What is the lifespan of the lithium batteries?</p> <p>A: The Lithium battery in the Remote Transmitter and the Receiving Collar can be charged for 400 times.</p> <p>Q5: How long should the training session for my dog last?</p> <p>A: The training sessions should be kept short for maximum effectiveness. It's advised not to train your dog for more than 10-15 mins at a time.</p>	<p>Common Sizes of Different Dog Breeds</p> <table> <tr> <th>Size</th><th>Neck (cm)</th><th>Chest (cm)</th><th>Back Length (cm)</th><th>Type</th></tr> <tr> <td>Mini</td><td>20-22</td><td>25-30</td><td>19</td><td>Chihuahua, Yorkshire Terrier</td></tr> <tr> <td>Small</td><td>20-24</td><td>26-36</td><td>23</td><td>Chihuahua, Yorkshire Terrier, Poodle, Pomeranian</td></tr> <tr> <td>Medium</td><td>23-28</td><td>35-42</td><td>28</td><td>Maltese Dog, Shin Tzu</td></tr> <tr> <td>Large</td><td>27-31</td><td>41-47</td><td>31</td><td>Miniature Schnauzer, Puli</td></tr> <tr> <td>Large</td><td>30-34</td><td>46-53</td><td>35</td><td>Schwarzau, English Cocker Spaniel</td></tr> <tr> <td>Large</td><td>33-37</td><td>52-59</td><td>40</td><td>Beagle</td></tr> <tr> <td></td><td>43-48</td><td>76-84</td><td>60</td><td>Husky</td></tr> <tr> <td>Huge</td><td>47-52</td><td>88-97</td><td>65</td><td>Labrador Retriever</td></tr> <tr> <td></td><td>52-62</td><td>92-100</td><td>70</td><td>Golden Retriever, Old English Sheepdog</td></tr> </table> <p>Common Weights of Different Dog Breeds</p> <p>Large Dogs(Body height over 61cm, weight over 58lbs)</p> <p>Medium Dogs(Height 40.7-61cm, Weight 24-58lbs)</p> <p>Small Dogs(Height 25.5-40.7cm, Weight 8-22lbs)</p> <p>Mini Dogs(Height under 25cm, Weight under 8lbs)</p>	Size	Neck (cm)	Chest (cm)	Back Length (cm)	Type	Mini	20-22	25-30	19	Chihuahua, Yorkshire Terrier	Small	20-24	26-36	23	Chihuahua, Yorkshire Terrier, Poodle, Pomeranian	Medium	23-28	35-42	28	Maltese Dog, Shin Tzu	Large	27-31	41-47	31	Miniature Schnauzer, Puli	Large	30-34	46-53	35	Schwarzau, English Cocker Spaniel	Large	33-37	52-59	40	Beagle		43-48	76-84	60	Husky	Huge	47-52	88-97	65	Labrador Retriever		52-62	92-100	70	Golden Retriever, Old English Sheepdog															
Size	Neck (cm)	Chest (cm)	Back Length (cm)	Type																																																																	
Mini	20-22	25-30	19	Chihuahua, Yorkshire Terrier																																																																	
Small	20-24	26-36	23	Chihuahua, Yorkshire Terrier, Poodle, Pomeranian																																																																	
Medium	23-28	35-42	28	Maltese Dog, Shin Tzu																																																																	
Large	27-31	41-47	31	Miniature Schnauzer, Puli																																																																	
Large	30-34	46-53	35	Schwarzau, English Cocker Spaniel																																																																	
Large	33-37	52-59	40	Beagle																																																																	
	43-48	76-84	60	Husky																																																																	
Huge	47-52	88-97	65	Labrador Retriever																																																																	
	52-62	92-100	70	Golden Retriever, Old English Sheepdog																																																																	
<p>The Remote Transmitter does not work</p> <ul style="list-style-type: none"> You must charge the Remote Transmitter before you use it for the first time. Charging time is typically 2-5 hours. Ensure that the Remote Transmitter has adequate power. Remote Transmitter will automatically go into Standby Mode if it is idle for 1 min. No LED light will be illuminated at this time. Press any button to re-activate the Remote Transmitter. <p>General Tips for Training Your Dog</p> <ul style="list-style-type: none"> Eliminate one behavioral problem or teach one command at a time. If you move too fast with the training, your dog may become confused. Be consistent. Give your dog a single Beep, Vibration, or Static Shock for each misbehavior. Do not over-correct your dog. Use a few stimulations as possible during training. Unless you can supervise him/her, it is recommended that you restrain your dog from environments in which he/she has a history of misbehaving. However, setting up a training session in this case can dramatically improve your chances of success. If your dog reacts to the training by hiding or acting fearfully, redirect his/her attention to a simple and appropriate behavior, such as the "Sit" command. 	<p>I have fitted the Rechargeable and Waterproof Training Collar correctly, but my dog is not responding.</p> <ul style="list-style-type: none"> Ensure that the batteries are fully charged. You need to charge both the Remote Transmitter and the Receiving Collar for about 2 hours before they can be used for the first time. Check the Remote Transmitter can adjust the intensity level of the vibration or static shock to higher level more than level 1. Restart the Receiving collar by pressing the On/ Off button. Test the 3 functions (Beep, Vibration and Static Shock) before using the Receiving Collar for the first time. Please refer to "Step 4" (page 9) for instructions on how to do this. The Receiving collar will go into Standby Mode if it is idle for more than 5 minutes. Any movements will re-activate it. Make sure that the Contact Points are touching your dog's skin. Trim your dog's fur where the Contact Points touch the neck. Ensure that you are using the correct set of Contact Points suitable for the length of your dog's fur. If none of the above works, encode the Remote Transmitter and the Receiving Collar again. See 'Step 3' (Page 9) for instructions on how to do this. <p>I am trying to test the Receiving Collar manually, but it does not work.</p> <ul style="list-style-type: none"> If you want to test the Receiving Collar manually on your hand or leg, please touch the 2 Contact Points simultaneously. Touching only one of the Contact Points will not work. <p>The Receiving Collar is broken. It has not worked since I dropped it.</p> <ul style="list-style-type: none"> The Receiving Collar is not designed to be drop-proof. Please do not drop the Receiving Collar, as this will damage the interior circuits. 	<p>Indicator & Display</p> <table> <tr> <th colspan="4">Receiving Collar Indicator</th></tr> <tr> <td></td><td></td><td></td><td></td></tr> <tr> <td>slays on</td><td>Blink</td><td>slays on</td><td>Blink</td></tr> <tr> <td>Charging</td><td>Low Battery</td><td>Full Charge</td><td>Encoding</td></tr> </table>	Receiving Collar Indicator								slays on	Blink	slays on	Blink	Charging	Low Battery	Full Charge	Encoding	<p>Common Sizes of Different Dog Breeds</p> <table> <tr> <th>Size</th><th>Neck (cm)</th><th>Chest (cm)</th><th>Back Length (cm)</th><th>Type</th></tr> <tr> <td>Mini</td><td>20-22</td><td>25-30</td><td>19</td><td>Chihuahua, Yorkshire Terrier</td></tr> <tr> <td>Small</td><td>20-24</td><td>26-36</td><td>23</td><td>Chihuahua, Yorkshire Terrier, Poodle, Pomeranian</td></tr> <tr> <td>Medium</td><td>23-28</td><td>35-42</td><td>28</td><td>Maltese Dog, Shin Tzu</td></tr> <tr> <td>Large</td><td>27-31</td><td>41-47</td><td>31</td><td>Miniature Schnauzer, Puli</td></tr> <tr> <td>Large</td><td>30-34</td><td>46-53</td><td>35</td><td>Schwarzau, English Cocker Spaniel</td></tr> <tr> <td>Large</td><td>33-37</td><td>52-59</td><td>40</td><td>Beagle</td></tr> <tr> <td></td><td>43-48</td><td>76-84</td><td>60</td><td>Husky</td></tr> <tr> <td>Huge</td><td>47-52</td><td>88-97</td><td>65</td><td>Labrador Retriever</td></tr> <tr> <td></td><td>52-62</td><td>92-100</td><td>70</td><td>Golden Retriever, Old English Sheepdog</td></tr> </table> <p>Common Weights of Different Dog Breeds</p> <p>Large Dogs(Body height over 61cm, weight over 58lbs)</p> <p>Medium Dogs(Height 40.7-61cm, Weight 24-58lbs)</p> <p>Small Dogs(Height 25.5-40.7cm, Weight 8-22lbs)</p> <p>Mini Dogs(Height under 25cm, Weight under 8lbs)</p>	Size	Neck (cm)	Chest (cm)	Back Length (cm)	Type	Mini	20-22	25-30	19	Chihuahua, Yorkshire Terrier	Small	20-24	26-36	23	Chihuahua, Yorkshire Terrier, Poodle, Pomeranian	Medium	23-28	35-42	28	Maltese Dog, Shin Tzu	Large	27-31	41-47	31	Miniature Schnauzer, Puli	Large	30-34	46-53	35	Schwarzau, English Cocker Spaniel	Large	33-37	52-59	40	Beagle		43-48	76-84	60	Husky	Huge	47-52	88-97	65	Labrador Retriever		52-62	92-100	70	Golden Retriever, Old English Sheepdog
Receiving Collar Indicator																																																																					
slays on	Blink	slays on	Blink																																																																		
Charging	Low Battery	Full Charge	Encoding																																																																		
Size	Neck (cm)	Chest (cm)	Back Length (cm)	Type																																																																	
Mini	20-22	25-30	19	Chihuahua, Yorkshire Terrier																																																																	
Small	20-24	26-36	23	Chihuahua, Yorkshire Terrier, Poodle, Pomeranian																																																																	
Medium	23-28	35-42	28	Maltese Dog, Shin Tzu																																																																	
Large	27-31	41-47	31	Miniature Schnauzer, Puli																																																																	
Large	30-34	46-53	35	Schwarzau, English Cocker Spaniel																																																																	
Large	33-37	52-59	40	Beagle																																																																	
	43-48	76-84	60	Husky																																																																	
Huge	47-52	88-97	65	Labrador Retriever																																																																	
	52-62	92-100	70	Golden Retriever, Old English Sheepdog																																																																	
<p>Testing the Beep  Function</p> <ul style="list-style-type: none"> Press the  button on Remote Transmitter to launch beep signal, if the Receiving Collar beeps, the Beep Function works correctly.  	<p>I have fitted the Rechargeable and Waterproof Training Collar correctly, but my dog is not responding.</p> <ul style="list-style-type: none"> Ensure that the batteries are fully charged. You need to charge both the Remote Transmitter and the Receiving Collar for about 2 hours before they can be used for the first time. Check the Remote Transmitter can adjust the intensity level of the vibration or static shock to higher level more than level 1. Restart the Receiving collar by pressing the On/ Off button. Test the 3 functions (Beep, Vibration and Static Shock) before using the Receiving Collar for the first time. Please refer to "Step 4" (page 9) for instructions on																																																																				

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.