COMFAST

Quick Installation Guide

Wireless Router M0304517 Version 2.0



1 Equipment wiring

1.1 If you use broadband dial-up Internet access, please connect in sequence 1, 2, 3, 4 as shown in the figure below; If you use residential broadband to access the Internet, please connect In the order of 2, 3, 4 as shown in the figure, and connect the router The WAN port directly accesses the broadband of the community.

Fiber / Tel

Dial-Up Internet

Broadband Internet





Special note: This manual is only for instructions on connecting to the Internet. If you have more functional requirements, please download the detailed operation manual from the COMFAST official website www.comfast.cn.



2.1 After connecting the router device, enter 192.168.0.1 in the address bar of the computer (mobile phone) browser to enter the device login page. Enter the default username admin and default password admin.

Compast		
username]	
p assword]	
Sign in	I	

2.2 Enter the setting interface and select the "Setting Wizard" routing mode setting. Fill in the broadband account and password in the "Setup Wizard"."External Network Settings", and set the broadband "uplink" and "downlink".

Note: If the user logs in for the first time (including the first login after restoring factory settings), he will directly enter the "Setup Wizard" page.

HOME PAGE > SETUP Router Mode	WIZARO	
2	3	
WAN Settings		
O ADSL/PPPOE	 Static IP 	 DHCP
Ip Address		
Subnet Mask		
Gateway		
Main DNS		
Up	1000	
Down	1000 1-1000((Mbps))	
Back	Next	

2.3 Fill in the IP address and subnet mask in "Setup Wizard"-"Intranet Settings".

Note: In most cases, this step only needs to be defaulted.

HOME PAGE > SETUP	WIZARO
Router Mode	
(1)(2)	4
LAN Settings	
Ip Address	192.168.0.1
Subnet Mask	255.255.0.0
L	
Back	Next

2.4 Fill in the wireless SSID and wireless password in "Setup Wizard"-"2.4GHz Settings".

Note: SSID is the WIFI name, and the wireless password is the WIFI password; the password must be a combination of letters and numbers.

HOME PAGE > SETUP WIZARO	
Router Mode	
33(4)	
WIFI Unification OFF	
2.4G Wireless Sttting	
SSID COMFAT_XXXX_2G	
rassworu	
Channel Width: 40MHz v	
Password China V	
Channel v	
Advanced WiFi Settings	
SSID COMFAT_XXXX_5G	
Password	
Channel Width: 80MHz v	
Password China v	
Channel auto v	
Back Next	

2.5 The setting is successful. Click "Finish", the page will jump to the login interface; after logging in again, you can view the basic information of the device, and you can also select more functional categories to set up, and enjoy the powerful business functions that this device brings to you.

HOME PAGE > SETUP	WIZARO	
Router Mode		
Router Mode		
IP Address Subnet Mask	192.168.0.1 255.255.255.0	
Back	Done	



3.1 What should I do if I forget the password to log in to the device (how to reset the router)?

A. Forgetting the password to log in to the device can only restore the device to the factory default settings, that is, reset. There is a RESET button between the power port of the device and the WAN port. When the device is powered on, press the RESET button with your finger for about 7 seconds, the indicator light flashes 3 times quickly and then release it, the reset is successful.

Note: After reset, the router's default login IP is 192.168.0.1, and by default, a password must be set for the first login. When logging in, please make sure that the computer's IP address is automatically obtained in the network segment 192.168.0.X (x can take any value between 2-254).

3.2 What should I do if I cannot log in to the management interface of the device?

A. Please make sure that the IP address of the computer and the login IP address of the device are in the same network segment: if the default login IP address of the device is 192.168.0.1, the computer IP address must be 192.168.0.X (x is any integer before 2-254);

B. Please make sure that the browser is set to "Never dial-up connection", and no proxy server is set; the method is as follows (take IE browser as an example): Select Tools-Internet Options-Connection, and select "Never dial-up connection" "; Click "LAN Settings" to remove the proxy server option.

C. You can try to change to another computer to log in; if the above prompt does not help you log in to the device, please restore the device to the factory and operate again. 3.3 Why can't my laptop search for wireless signals? A. If it is the built-in wireless network card of the laptop, please make sure that the wireless function switch is turned on (it is recommended to contact the pen vendor or consult the relevant manual);

B. Check whether the wireless network card driver is successfully installed and whether the wireless network card is enabled in the device manager;

C. Check whether the wireless service of the laptop is turned on, click My Computer on the desktop, and select Manage. Select "Services and Applications" in the computer management, and then check the status of "Wireless Zero Configuration" in the "Services page".

D. Please make sure that the wireless function of the device is turned on and SSID broadcast is allowed.

E. Try to see if the wireless signal can be searched at a close distance to avoid serious signal attenuation due to too many obstacles; if the above tips cannot help you, please confirm whether other wireless network cards can connect to the wireless router. If nothing works, please restore the device to factory settings.

\land Warning

 Please remove the router's power supply and all connections during thunderstorms to avoid damage by lightning;

2. Keep away from heat sources and keep well ventilated;

3. Please pay attention to waterproof in storage,

transportation and operation environment;

4. Use the power adapter attached to the router;

5. Place the equipment on a stable surface.

Quick Installation Guide

Statement Shenzhen Four Seas Global Link Network Technology CO.,Ltd.Company all rights reserved.

Without ours official writ permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means(electronic,mechanical,printing,recording or other possible means)or for the propagation of goods any commercial, profitable purposes.

COMFRST is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee

Manufacturer: Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company Address: Room 607-610,Block B Tao JINDI Electronic Business Incubation Base, Tenglong Road, Longhua District, Shenzhen, China Hotline: 4009-001-766 Website: en.comfast.com.cn FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection agains tharmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help. To maintain compliance with PCC' s RF Exposure guidelines. This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.