 




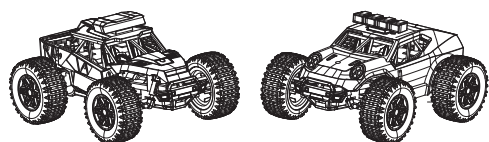


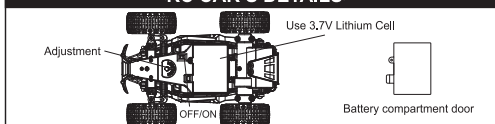 
Remote Control Car User Manual




<PACKAGE CONTENTS>

				
Stunt RC Car	Remote Control	3.7V Lithium Cell	USB Cable	Instruction of Use
x1	x1	x1	x1	x1

<RC CAR'S DETAILS>


 
<REMOTE CONTROL FUNCTIONS>

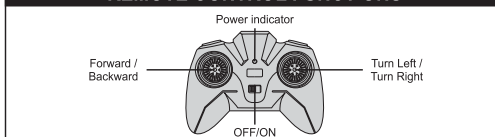


-1-

<BATTERY INSTALLATION>

1. Unscrew the battery cover and connect the lithium cell.
2. Close the battery cover and lock it firmly.
3. Charge the lithium battery in time, you can plug the USB cable into a 5V power source (e.g. PC, phone charger, power bank) with maximum 2A output.

 
1.Rc Car's Details

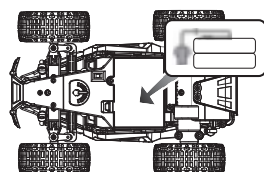

Notice:

1. Do not charge the battery immediately after use, let's the battery cool for at least 10 minutes.
2. The charging indicator will light up during charging and light will turn off when finishing charging, charging time may take about 140 minutes depending on how much power is left in the battery.

 2.Remote Control Battery

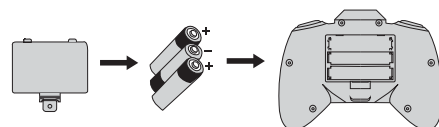

1. Open the battery cover.
2. Install 3x1.5V AAA batteries(not included) in the correct positive (+) and negative (-) polarities direction.
3. Close the battery cover.

Notice: If the remote control will not be used for a long time, please make sure to take out the batteries.

 
-2-

<OPERATION>


1.Paring

Once batteries are inserted into the car and remote, turn on the car and the remote, both will automatically pair.

2.Forward and Backward

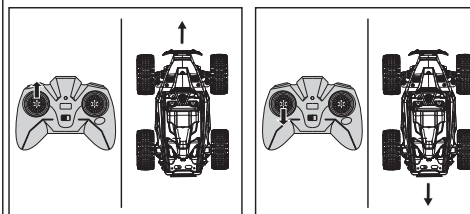

 3.Left Rotation and Right Rotation

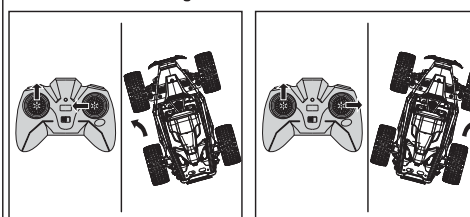

-3-

<SPECIFICATIONS>

Materials: ABS, TPR
Drive system: 2WD
Frequency: 2.4GHz
Dimension: 203x145x100mm
Car Weight: 340g
Play Time: about 25 mins
Control Distance: about 40 meters
Battery type for car: 3.7V 1000mAh Li-ion battery(included)
Battery type for remote control: 1.5V AAA batteries(not included)

<NOTE>

1. Keep the car away from water or other liquids.
2. Please play the car on clean flat surfaces.
3. Adult supervision recommended at all times.
4. Remove all batteries when not using it for a long period of time.

<TROUBLE SHOOTING>

PROBLEM	SOLUTION
The wheels cannot move	1. Power switch is off please turn on. 2. Battery exhausted, please charge. 3. Re-frequency.
Suddenly stopped during operation	1. Check if the battery is electrical. 2. Replace or recharge the battery.
Remote control power indicator flashes	Replace the battery.
R/C car becomes slow	Replace or recharge the battery.

-4-

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.