 



UG - Large Size  
OUT202

Outside

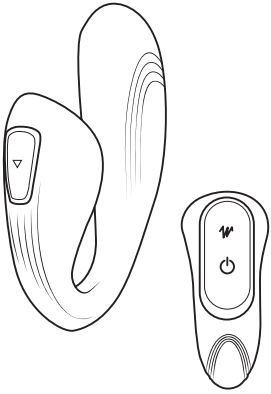


### Specifications

- 10 Vibration Modes
- Splashproof (toy)
- Material: Silicone + ABS Plastic
- Length: 4.3"
- Inserable Length: 3.5"
- Toy Weight: 91 g
- Remote Weight: 18 g
- Charge Time: ~2 hours
- Usage Time: ~1.5 hours
- Battery: 330 mAh










**WARNING:**

- Dispose of used batteries immediately.
- Keep new and used batteries away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



### Disposal Information

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):




The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

 
### Safety & Warnings

**Warning:** This product is for adults only. To avoid injury or aggravation of pre-existing conditions, this device should not be used on swollen or inflamed areas, or skin lacerations. No medical claims are warranted or implied by the use of this product.

**bboutlet.co**




### REMOTE CONTROL COUPLES VIBE

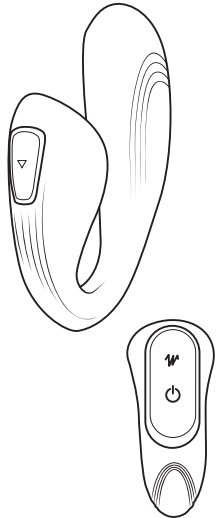


### User Guide

Inside

 
### Toy

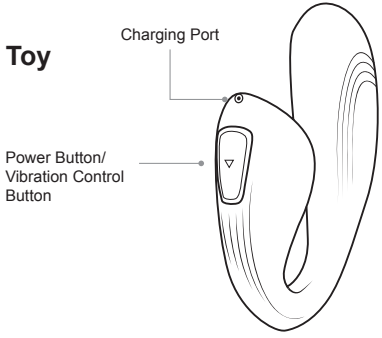

### Remote

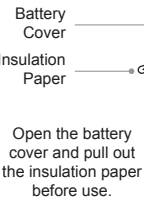 

 Open the battery cover and pull out the insulation paper before use.

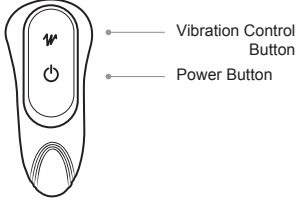

### How to Use

#### Using the Device

1. To turn the device ON or OFF, press and hold the ▽ button for 2 seconds
2. To switch between 3 speeds and 7 vibration modes, short press the ▽ button

#### Using the Remote Control

1. After the device has been turned on, press the ⚡ button to switch between 3 speeds and 7 vibration modes.
2. Press the ⏸ button to pause the vibration functions.

### Charging Your Device

Insert the included charging cable into the charging port of the device.

 
 
**Flashing LED Light:** Item is charging.  
**Solid LED Light:** Item is fully charged.  
Full charge takes approx. 2 hours.

### Maintenance, Cleaning & Storage

Clean your toy before and after each use using an antibacterial toy cleanser, or warm water and antibacterial hand soap.

Air dry or towel dry thoroughly before storing.

To prolong the life of your toys, store away from heat and sunlight.

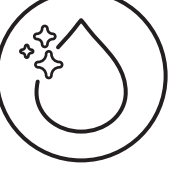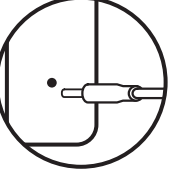

### Remote Control Battery Warning

- Do not expose this product to fire or water.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Do not attempt to disassemble the product yourself. Please contact after-sales service if there is an issue.
- The battery used in this product is a nonchargeable battery. Do not try to charge it.
- This product contains small parts such as battery, battery cover.

The small parts are not toys, do not allow children to play with them to prevent the risk of suffocation.

- Risk of safety issue if the battery is replaced by an incorrect type.
- Replacement of a battery with an incorrect type that can defeat a safeguard.
- Dispose of used batteries according to instructions.
- Do not ingest battery! Chemical Burn Hazard!
- This product contains a coin/button batter. If the coin/ button cell is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
- If the battery compartment dose not close securely, stop using the product and keep it away from children.

### Warranty

All Bellesa products come with a 1-year warranty from the date of purchase. If you experience any issue with your product, please email [care@bellesa.co](mailto:care@bellesa.co) with your order number and a video of the issue.

### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.