

FRONT

Fold Line Do Not Print

This guide is provided to help you get started quickly with your wireless headphones; please read it carefully and save it for future reference.

What's in the box?

- 1. MyWorld™ Wireless headphones
- 2. Instruction Manual
- 3. USB charging cable
- 4. Headphone Carry Case
- 5. Aux cable
- 6. Cable Case

Power Supply: We recommend that you fully charge the battery before using for the first time. Allow approximately 2 hours for a full charge.

- Plug the micro-USB into the Micro-USB Charging Port located under the right ear cup of the headphones.
- Plug the other end into a USB port on your computer or another device used for USB charging.
- Allow about 2 hours for a full charge. The indicator light will be red while charging. Once fully charged, the indicator light will be blue.

Warning: To prevent potential hearing damage, do not listen at high volume levels for long periods.

FCC Warning
 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1. Reorient or relocate the receiving antenna. 2. Increase the separation between the equipment and receiver. 3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. 4. Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Item Code: MyWorld™
 Bluetooth Chipset: CSR8635
 Bluetooth Version: 4.1
 Bluetooth Profile: HSP, HFP, A2DP, AVRCP, DI
 Operation Frequency Range: 20 Hz - 20 KHz
 Transmission Distance: 10m
 Driver Unit Size: 40mm
 Magnet Type: NdFeB magnet
 Sensitivity: 102dB±3dB At 1 KHz

Impedances: 32Ω±15% At 1 KHz
 Input Power: 10 mW
 Battery Capacity: 500 mAh
 Charging Time: 2 Hours
 Music Playback Time: 27 Hours
 Calling Time: 30 Hours
 Accessories: 1pc USB Charging Cable, 1pc Aux-in Cable
 Product Sizes (cm): 14.79 x 79.7 x 18.65



©2018 HandStands. All Rights Reserved. Made in China
 HandstandsPromo.com

ATOM®
 MyWorld™

wireless headphones

BACK

Welcome to the ATOM® MyWorld™ Wireless Headphones.

- A. Boost Button
- B. Multi-function button: Power On/Off. Pairing. Answer/Hang Up Calls. Play/Pause.
- C. Volume Up and Track Forward
- D. Volume Down and Track Backward
- E. Indicator Light
- F. Micro-USB Charging Port
- G. AUX-in Port
- H. Microphone

Boost On/Off
 Click Button 'A' once.

Power On/Off
 Press and hold Button 'B' for 3 seconds.

Answer/Hang Up Phone
 Click Button 'B' once.

Play/Pause
 Click Button 'B' once.

Pairing
 1) When power is off, press and hold Button 'B' for 5 seconds. Voice prompt, "MyWorld is ready to pair." Indicator light will blink quickly while in pairing mode.
 2) Voice prompt "bluetooth connected". When indicator light is solid blue, your device is connected.
 Note: When turned on, MyWorld™ will automatically pair with the last connected device.

Volume Up
 Click Button 'C' once.

Volume Down
 Click Button 'D' once.

Track Forward
 Press and hold button 'C'.

Track Backward
 Press and hold button 'D'.

