


PANEL FUNCTION

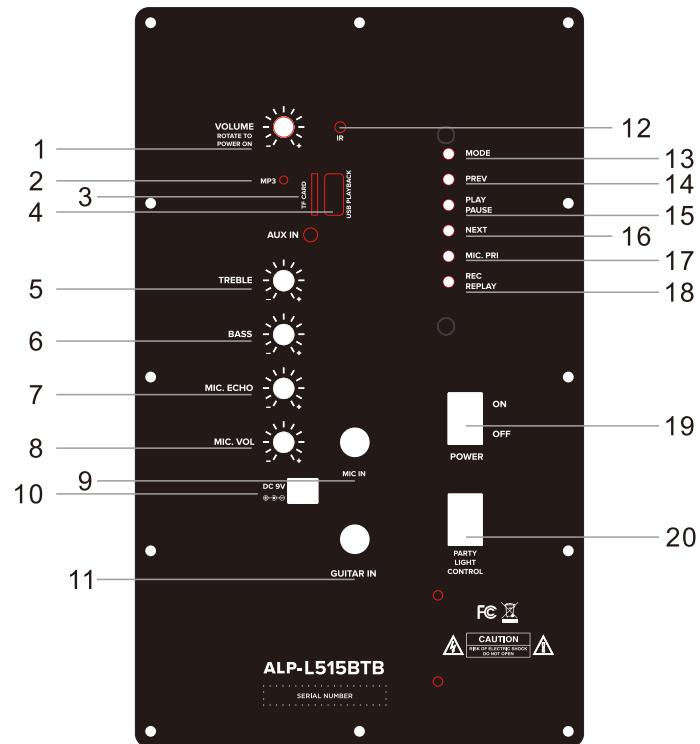

- | | |
|-----------------|----------------------|
| 1. M.VOL | 11. GT INPUT |
| 2. MP3 | 12. IR |
| 3. TF | 13. MODE |
| 4. USB/ LINE | 14. PREV |
| 5. TREBLE | 15. PLAY/ PAUSE |
| 6. BASS | 16. NEXT |
| 7. MIC. ECHO | 17. MIC PRIORITY |
| 8. MIC VOL | 18. REC/REPLAY |
| 9. MIC INPUT | 19. POWER SWITCH |
| 10. DC 9V INPUT | 20. LED LIGHT SWITCH |

OPERATION MANUAL



ALP-L515BTB

Carefully read operating manual to operate this unit properly,
and keep this manual handy for further reference.

FUNCTION DESCRIPTION

● OPERATION INSTRUCTION FOR KARAOKE & WIRELESS MICROPHONE

1. Insert the microphone plug into the microphone input MIC.
2. Adjust the microphone volume knob MIC VOL for proper volume. Then adjust the echo depth to the proper position. Now you can start the karaoke.
3. Open wireless MIC "on & off" button, Adjust the microphone volume knob MIC VOL for proper volume. and adjust the echo depth to the proper position. The you can start the wireless Microphone.
4. Use the "ECHO" knob to control microphone echo.

● Bluetooth Connection

1. Please press the "MODE" button to start the Bluetooth connection. This will turn on the Bluetooth flashing LED light on the control panel.
2. Your unit will now be ready to pair with your mobile device via Bluetooth. From your mobile device scan for "ALP-L515BTB".
3. You can control the volume and tracks from the unit's control panel or from your external Bluetooth enabled device.

● Matters need attention

1. Battery is integrated in the unit with an auto protection function. When the battery is out of power and you need to recharge your speaker unit be sure the power switch is ON before you connect the system to 110V-240V power plug. When your unit is charging the red LED indicator will be ON. the unit, the battery auto protection will take effect and the unit will not charge.
2. Full recharge takes 4-5 hours.
3. Voltage for recharge must be ~110V-240V
4. When you are using your unit while it is plugged to an external power source, be sure the battery switch is ON.
5. To protect the life span of the built in battery, be sure to fully charge your unit on the same day the battery runs out. Not charging your unit right away can hurt the long term life span of your unit.

FUNCTION DESCRIPTION

● Using Guitar Jack.

1. When using Guitar-plug your guitar into the guitar jack on unit main control panel.
2. Use the Guitar VOL knob to control the volume level of the Guitar.

"BASS" & "TREBLE" on unit control panel can be used to adjust sound when using TF/USB/EQ button on unit control panel or remote control can be used to adjust sound effect to preset levels.

● Using Aux(LINE IN 3.5mm)

1. To select Aux use "MODE" button on unit main panel or from remote control "LINE" will show on display
2. Disconnect USB, TF Microphone while using Aux.

● Record Function

Long press: IN the recording.


Short press: play the recording and play USB conversion.

REMARK: Need to insert the USB /TFwhen recording.

When recording the sound from outside (such as the voice of people) need to use WIRELESS MIC / WIRED MIC.

When recording AUX IN no need to use WIRELESS MIC / WIRED MIC just insert USB.

REMOTE CONTROL FUNCTION

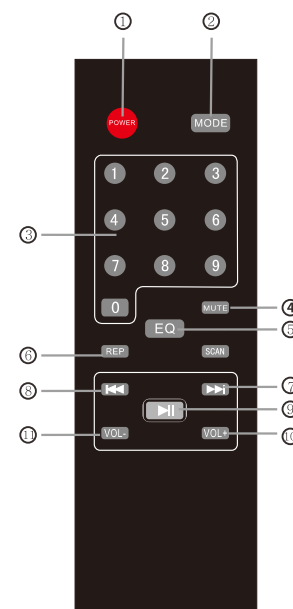

1. Power
2. Mode
3. 0-9
4. Mute
5. EQ
6. Repeat
7. Next
8. Previous
9. Pause
10. Volume up
11. Volume down

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter