


06

Phone

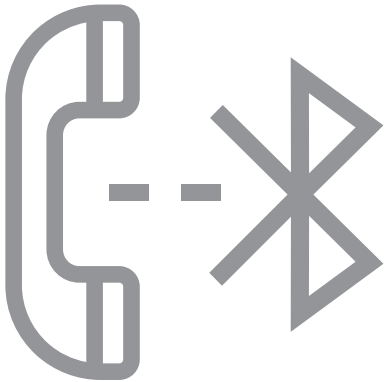

Connecting a Bluetooth device

Making a call via Bluetooth

Accepting an incoming call over Bluetooth

Checking a new message over Bluetooth

Connecting a Bluetooth device

Bluetooth is a short-range wireless networking technology. The Bluetooth communication function allows you to exchange data by connecting a Bluetooth device to another neighboring Bluetooth device without a cable connection. With this function, you can use different types of devices more efficiently.

To make a phone call or play audio from a Bluetooth device, check the following first:

- For a device that is not registered to the system,
▶ see “Registering a device.”
- A registered device will automatically connect to the system when you bring it near the system. If it does not automatically connect, ▶ see “Connecting a registered device”, “Disconnecting a registered device.”



Warning

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, or death. The driver's primary responsibility is the safe and legal operation of the vehicle, and the use of any vehicle systems, including the touch screen and steering wheel controls, which take the driver's eyes, attention, and focus away from the safe operation of the vehicle, or which are not permissible by law, should never be used during the operation of the vehicle.
 - Pull over the vehicle at a safe place before connecting a Bluetooth device to the system. It may take the driver attention off the road and cause a traffic accident which can result in damages, injuries, and/or death.
- ✍ The Bluetooth connection function supports only the hands-free and audio related functions. Connect your mobile phone, MP3 player, or device that supports the hands-free or audio function.
- ✍ For more information on Bluetooth-enabled devices and their functional compatibility, visit the KIA Motors America website (<https://www.kia.com>).

Registering a device


You can use the functions for Bluetooth call, Bluetooth audio, and phone projection after connecting a Bluetooth device.

- ✎ When registering a Bluetooth device that supports the wireless phone projection, connection can be made through Android Auto or Apple CarPlay.
- ✎ To use the wireless phone projection, your smartphone must support Android Auto or Apple CarPlay with the Bluetooth and Wi-Fi active. The phone projection is available only when the wireless connection is active in Phone Projection Settings.
▶ See "Configuring the phone projection connections settings."
- ✎ When the device supports OOB (Out Of Band) and a USB cable is connected, the device is automatically registered into the device list.
- ✎ When the device that supports only the wired connection is connected via a USB cable, it appears in the device list during use of Apple CarPlay. When the device is not automatically registered and the USB cable is removed, the device is deleted from the list.

1 On the All Menus screen, touch **Setup ▶ Device Connections ▶ Bluetooth ▶ Bluetooth Connections ▶ Add New**.

- ✎ To register a device for the first time, press the Call button on the steering wheel or by touching **Phone** on the All Menus screen. When there is any registered device, move to the device list.


2 Select the function to connect.

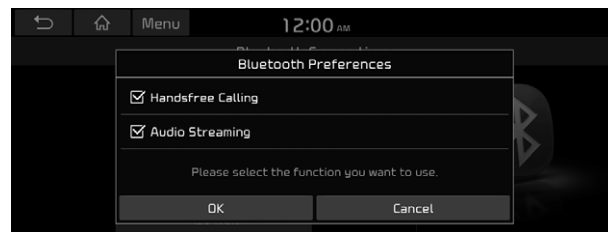

- ✎ To use your phone on the system via Bluetooth communication, touch **Handsfree Calling**.
- ✎ To listen to music on the system via Bluetooth communication, touch **Audio Streaming**.

3 Turn on Bluetooth on the Bluetooth device to connect and select the vehicle system on the list of searched devices.

- ✎ The system's Bluetooth name can be seen on the Add New window.

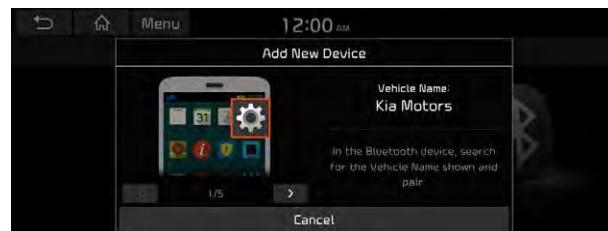

4 Check that the authentication code on the Bluetooth device screen matches the one on the system screen and approve the connection on the device.

5 When your smartphone is using Bluetooth communication, to download contacts from the phone to the system or use the text message notification, allow access to your phone.

✎ Access is only required to use Bluetooth calling. There will be no access request when you connect an audio device.

✎ After the access request is approved, it may take a while until the Bluetooth connection is completed. As soon as the Bluetooth connection is completed, the Bluetooth connection indicator icon appears at the top of the screen.

✎ Access to data can be enabled or disabled by using the Bluetooth Settings menu on the mobile phone. For more details, refer to the mobile phone's user manual.

✎ You cannot register another device while operating a Bluetooth device.

✎ In order not to use the automatic Bluetooth connection, turn off the Bluetooth function on the device.

✎ You can add Bluetooth devices up to 6.

✎ When registering a Bluetooth device that supports the wireless phone projection, connection can be made through Android Auto or Apple CarPlay.

Connecting a registered device

To use a Bluetooth or phone projection device, first connect a registered device to the system.

✎ You can add one Bluetooth hands-free kit or up to two Bluetooth audio devices.

✎ With any device connected for phone projection, only a Bluetooth audio device can be connected.

✎ You can connect registered devices up to 2.

1 On the All Menus screen, touch **Setup ► Device Connections ► Device Connections**.


2 Touch the device name or icons to connect.



3 Select the function to connect and touch **OK**.

- ✍ If you cannot connect your device, check to make sure its Bluetooth option is enabled.
- ✍ When the connection is terminated abnormally due to being out of range or device failures, the connection is automatically restored as soon as the device returns to the connection range or normal state.
- ✍ When wireless connection is active in Phone Projection Settings and the registered device supports wireless phone projection, you can select the wireless phone projection function to connect.
- ✍ When the connection is unstable due to a Bluetooth communication error, on the All Menus screen, touch **Setup ► Device Connections ► Reset**. Touch **Reset** to change the device's connection settings to the initial state and then connect it again. ► See "Reset."

Bluetooth connection screen

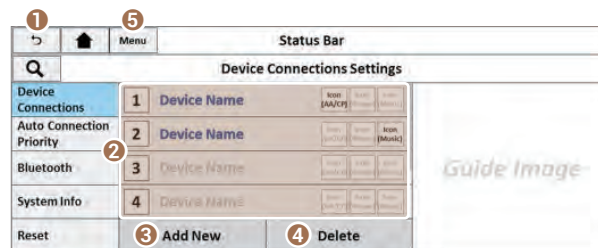

- 1 Returns to the previous step.
- 2 Select hands-free or Bluetooth audio to connect or disconnect Bluetooth devices.
 - ✍ A device list will appear when a Bluetooth device is added to the system.
 - ✍ The devices that support phone projection display the Android Auto or Apple CarPlay icon to the right of the device name.
 - ✍ After selecting the device list, you can select the wireless phone projection option to connect. The phone projection is available only when the wireless connection is active in Phone Projection Settings. ► See "Configuring the phone projection connections settings."
- 3 Add a new device to the system.
- 4 Delete a registered device from the system.

- 5 The list of menu items appears.
- **Display Off:** Turns off the screen (if equipped).
 - **Phone Projection Settings:** Changes the wired or wireless phone projection connection settings (if equipped). ► *Configuring the phone projection connections settings."*
 - **Search for Settings:** Search for a setting item by voice or by entering a keyword.
 - **Auto Connection Priority:** Set Bluetooth connection priority for devices to automatically connect them when starting the vehicle (if equipped).
 - **User's Manual on Web (QR Code):** Displays the QR code that provides access to the online user manual for the system.

Disconnecting a registered device

- 1 On the All Menus screen, touch **Setup ► Device Connections ► Device Connections**.
 - 2 Touch the connected device name or icons.
 - 3 Touch **Disconnect** in the connection settings window.
- ✎ To disconnect a function, select the function to disconnect and touch **OK**.

Deleting a registered device

If you will no longer use a Bluetooth device or you want to add a new device when 6 devices are already registered, delete an existing registered device.

- 1 On the All Menus screen, touch **Setup ► Device Connections ► Device Connections ► Delete Devices**.
 - 2 Select a device to delete and touch **Delete**.
To delete all registered devices, touch **Mark All ► Delete**.
 - 3 Touch **Yes**.
- ✎ When you delete a registered device, all related contacts, call logs, and text messages are removed from the system.

Making a call via Bluetooth

You can connect a Bluetooth device with the hands-free function to use a Bluetooth phone. The Bluetooth connection allows you to view call details directly from the system screen, and to make calls safely and easily use the system microphone and speaker.

Warning

- Pull over the vehicle at a safe place before connecting your mobile phone. It may take the driver attention off the road and cause a traffic accident which can result in damages, injuries, and/or death.
- While driving, do not make a call by dialing a phone number or do not pick up your phone to talk. Distraction by the use of a mobile phone may cause you not to recognize traffic flow around and not to cope with unexpected situations. As a result, a traffic accident may occur. If necessary, use the Bluetooth hands-free function and make the call as short as possible.

Dialing from the recent call list

Make calls directly from call history of your mobile device.

When you connect your mobile device and system over Bluetooth, the list of recent calls from the device will be downloaded to the system and you can call them again by selecting them from the system screen. The system has a built-in microphone and speaker that make using mobile phones safe and easy.


1 Perform any of the following methods:


- On the All Menus screen, touch **Phone**.
- On the steering wheel, press the Call button.

2 On the Bluetooth Call screen, touch .

3 Choose a call from the list.


The system dials the selected number.

-  You can also move to a desired number by using the Move lever/button on the steering wheel without touching on the screen.

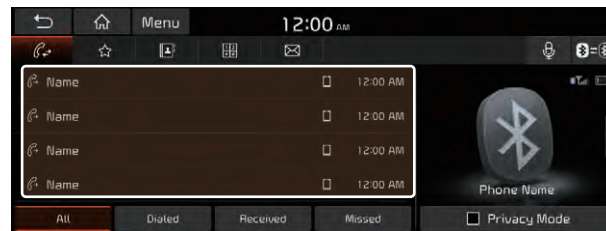

- ✎ The download may not work in some phone models.
- ✎ You can download up to 50 call records for each list.
- ✎ Call durations do not appear on the system screen.
- ✎ You cannot download call records when the download is prohibited by the phone. Some phone models may require approval for a download. When a successful download is not made, check the phone screen or its settings.
- ✎ When call records are newly downloaded, the previous records are removed.
- ✎ Learn more about receiving calls while using a Bluetooth connection. ► See [“Accepting an incoming call over Bluetooth.”](#)

Recent calls list screen

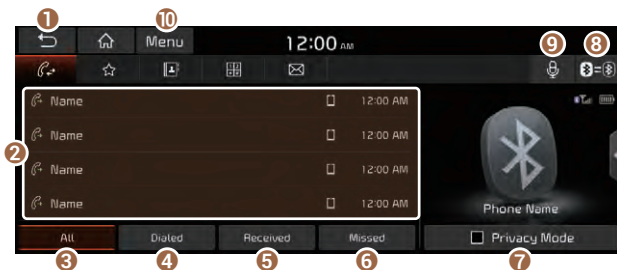

- 1 Returns to the previous step.
- 2 View a list of recent calls downloaded to the system from the device.
- 3 View all recent calls.
- 4 View only dialed calls in the list.
- 5 View only received calls in the list.
- 6 View only missed calls in the list.
- 7 Activate the lock mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.
- 8 Find and connect other Bluetooth devices.
- 9 Make a phone call using voice recognition. ► See [“Dialing with voice recognition.”](#)
- 10 The list of menu items appears.
 - **Download:** Download the list of recent calls from the connected mobile device.
 - **Privacy Mode:** Activate the lock mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.
 - **Change Device:** Find and connect other Bluetooth devices.
 - **Bluetooth Settings:** Can change the Bluetooth settings.
 - **User's Manual on Web (QR Code):** Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen:** Can turn on or off the split screen mode.

Dialing from the favorites list

Make a list of frequently used phone numbers to call them quickly in the future.



When you connect your mobile device and system over Bluetooth, your contacts stored on the device will be downloaded to the system, and you can add frequently used phone numbers to the favorites list. Call your favorite contacts quickly and easily by selecting them from the list.


1 Perform any of the following methods:

- On the All Menus screen, touch **Phone**.
- On the steering wheel, press the Call button.

2 On the Bluetooth Call screen, touch .

3 On the favorites screen, touch **Add New** and select a name from the displayed list.

-  If you already have contacts on your favorites list, touch **Menu ► Edit** on the Favorites screen.
-  To search for a contact by entering a name or phone number on your contacts list, touch **Menu ► Search**.

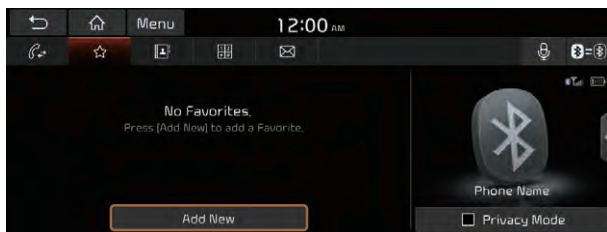




4 To set a phone number as a favorite, touch the button next to it.

The phone number is now added to your favorites list.




5 Choose a contact from the list.

The system dials the selected contact.

-  You can add up to 10 favorite contacts for each device.
-  When another mobile phone is connected, the screen does not display the contacts from the previous phone, but they are kept in the system until the phone is deleted from the list.
-  Learn more about receiving calls while using a Bluetooth connection. ► See **"Accepting an incoming call over Bluetooth."**

Favorites screen

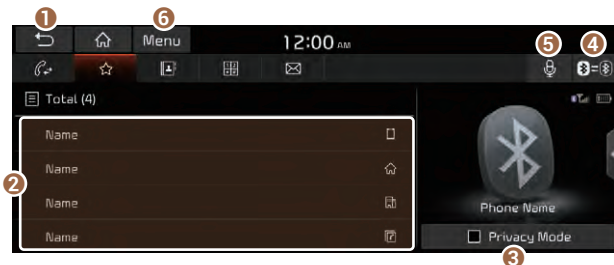

- 1 Returns to the previous step.
- 2 View a list of favorite contacts.
- 3 Activate the lock mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.
- 4 Find and connect other Bluetooth devices.
- 5 Make a phone call using voice recognition. ► See "Dialing with voice recognition."

- 6 The list of menu items appears.
 - **Add New/Edit:** Add a new contact or edit the favorites list from downloaded contacts.
 - **Delete:** Delete a contact from the favorites list.
 - **Privacy Mode:** Activate the lock mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.
 - **Change Device:** Find and connect other Bluetooth devices.
 - **Bluetooth Settings:** Can change the Bluetooth settings.
 - **User's Manual on Web (QR Code):** Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen:** Can turn on or off the split screen mode.

Dialing from the contacts

You can use contacts from the connected mobile device on the system.

When you connect your mobile device with the system via Bluetooth, contacts from the device are downloaded to the system, and you can choose to call them from the system screen. The system has a built-in microphone and speaker that make using mobile phones safe and easy.


1 Perform any of the following methods:

- On the All Menus screen, touch **Phone**.
- On the steering wheel, press the Call button.

2 On the Bluetooth Call screen, touch .

3 Select a contact from the list.


The system dials the selected contact.

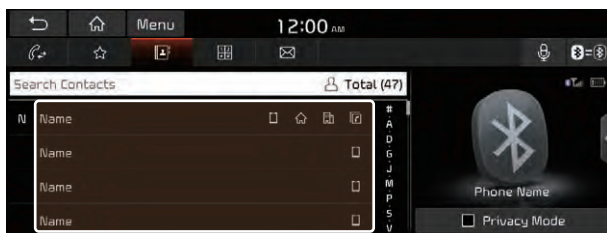


- ✎ You can download only the contacts that can be displayed on the connected Bluetooth device. The contacts may not appear in some applications.
- ✎ You can download up to 5,000 contacts for each device.
- ✎ The download may not work in some phone models.
- ✎ Contacts from both the mobile device and its SIM card are downloaded at the same time. The system may not be able to download SIM card contacts from all phone models.
- ✎ When speed dial numbers are set to contacts on the phone, press and hold a speed dial number on the dial pad to make a call easily. Some mobile phone models may not support the speed dial function.
- ✎ You cannot download contacts when the download is prohibited by the phone. Some phone models may require approval for a download. When a successful download is not made, check the phone screen or its settings.
- ✎ Depending on the phone model or operation status, downloading may take longer than usual.
- ✎ When a new contacts list is downloaded, the previous records are removed.
- ✎ The downloaded contacts cannot be edited or deleted from the system.

- ✎ When another mobile phone is connected, the screen does not display the contacts downloaded from the previous phone, but they are kept in the system until the phone is deleted from the list.
- ✎ Learn more about receiving calls while using a Bluetooth connection. ► See “Accepting an incoming call over Bluetooth.”

Contacts list screen

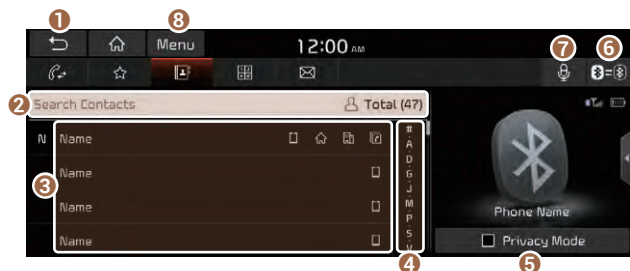

- 1 Returns to the previous step.
- 2 Enter a contact's name or phone number to search the list. You can also search for a contact by touching  and saying the contact's name or phone number.
- 3 View a list of contacts downloaded to the system from the device.
- 4 Use the index to quickly find the contact you are looking for.
- 5 Activate the lock mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.

- 6 Find and connect other Bluetooth devices.
- 7 Make a phone call using voice recognition. ► See “Dialing with voice recognition.”
- 8 The list of menu items appears.
 - **Download:** Download the list of contacts from the connected mobile device.
 - **Search:** Search contacts by entering a name or a phone number.
 - **Privacy Mode:** Activate the lock mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.
 - **Change Device:** Find and connect other Bluetooth devices.
 - **Bluetooth Settings:** Can change the Bluetooth settings.
 - **User's Manual on Web (QR Code):** Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen:** Can turn on or off the split screen mode.

Using the dial pad

Enter a phone number using the dial pad to make a call.

When you connect your mobile device to the system via Bluetooth, you can enter and dial a phone number from the system screen, without interacting with the device. The system has a built-in microphone and speaker that make using mobile phones safe and easy.

Warning

Do not manually dial a call while driving. Distraction by the use of a mobile phone may cause you not to recognize traffic flow around and not to cope with unexpected situations. As a result, a traffic accident may occur.


1 Perform any of the following methods:


- On the All Menus screen, touch **Phone**.
- On the steering wheel, press the Call button.


2 On the Bluetooth Call screen, touch .

3 After entering a phone number, touch .

A call is connected to the entered phone number.

-  When contacts are on the system, search for the desired contact by entering the initial letters or number on the dial pad. (e.g. John Doe ► JD).

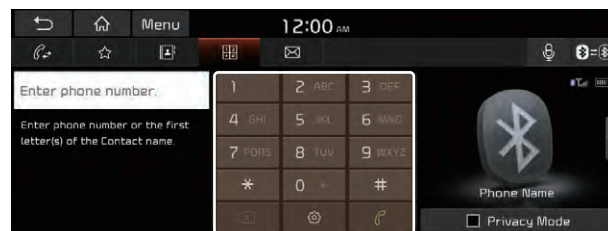

-  Learn more about receiving calls while using Bluetooth connection. ► See “Accepting an incoming call over Bluetooth.”

Dial pad screen




- 1 Returns to the previous step.
- 2 Use the dial pad to enter phone numbers.
- 3 Delete an entered number.
- 4 Can configure the Bluetooth connection settings.
- 5 Touch to dial the number you entered.
 - ✍ If you have recent calls stored on your system, you can use the following feature before entering a phone number.
 - Touching this button will display the most recently dialed numbers in the field.
 - Touch and hold this button to automatically call the most recently dialed number.
- 6 Activate the lock mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.

- 7 Find and connect other Bluetooth devices.
- 8 Make a phone call using voice recognition. ► See "Dialing with voice recognition."
- 9 The list of menu items appears.
 - **Privacy Mode:** Activate the lock mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.
 - **Change Device:** Find and connect other Bluetooth devices.
 - **Bluetooth Settings:** Can change the Bluetooth settings.
 - **User's Manual on Web (QR Code):** Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen:** Can turn on or off the split screen mode.

Dialing with voice recognition

When you connect your mobile device to the system via Bluetooth, contacts from the device are downloaded to the system, and you can choose to call them using voice recognition.

 To call using voice recognition, there must be contacts stored on the system.

1 Perform any of the following methods:

- On the All Menus screen, touch **Phone**.
- On the steering wheel, press the Call button.

2 On the Bluetooth Call screen, touch .


3 When a guiding beep is heard, say the name of the contact to make a phone call.

The system dials the selected contact.

 In case of the dial pad screen, touch  say the phone number to make a call.

Accepting an incoming call over Bluetooth

The system screen alerts you when you receive a call while connected using Bluetooth.

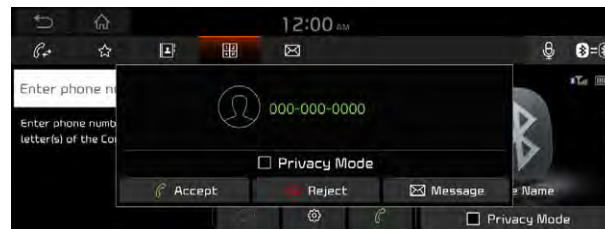


Perform any of the following methods:

- Touch **Accept** on the screen.
- On the steering wheel, press the Call button.

Warning

- Pull over the vehicle at a safe place before connecting your mobile phone. It may take the driver attention off the road and cause a traffic accident which can result in damages, injuries, and/or death.
- Do not talk on your mobile device while driving. Distraction by the use of a mobile phone may cause you not to recognize traffic flow around and not to cope with unexpected situations. As a result, a traffic accident may occur. If necessary, use the Bluetooth hands-free function and make the call as short as possible.


 When a mobile phone is connected to the system, the vehicle's speaker may be used to output a call tone even after you leave the vehicle. To disconnect the call, disable the Bluetooth connection on the system or turn off the Bluetooth function on the mobile phone.

Rejecting a call

Perform any of the following methods:

- Touch **Reject** on the screen.
- On the steering wheel, press the End Call button.

 To reject by sending a call-reject message, touch **Message**. From the list, select the call-reject message and touch **Send**.

 The call-reject or auto-reply message may not be supported in some phone models.

Using functions during a call

During a call, the following screen appears.

Touch to use the available options.



- 1 Returns to the previous step.
- 2 Can turn off the microphone so that the other party cannot hear you.
- 3 Can adjust the microphone volume.
- 4 Displays or hides the dial pad screen.
- 5 Used to switch the call to the mobile phone. This option may not be available in some phone models.
- 6 Used to end a call.
- 7 Activate the lock mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.

8 The list of menu items appears.

- **Privacy Mode:** Activate the lock mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on (if equipped).
- **Split Screen:** Can turn on or off the split screen mode.

✎ If you set the microphone volume too high, the other party may have a difficulty understanding you due to noise or echoing, depending on their mobile phone and surroundings. Setting the volume to 30 or lower is recommended.

✎ When the caller is in the contact list, the caller's name and phone number of the caller are displayed. Otherwise, only the phone number appears.

✎ During a call with a Bluetooth connection, you cannot switch to another screen such as Radio/Media mode.

✎ Depending on the phone model, the call volume of the other party may differ.


✎ Depending on the phone model, the telephone number may not appear.

Switching to another call

You can receive another incoming call while in a call. This option is available only when the connected mobile phone supports the call hold function. The original call is put on hold.

To switch between two calls, use either option.

- Touch **Switch**.
- Touch a displayed phone number.

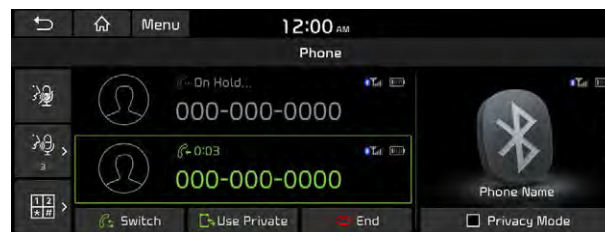

✎ This option may not be available in some phone models.


Checking a new message over Bluetooth


After connecting a mobile phone via Bluetooth, you can check the received messages through the system screen and listen to voice messages converted from the text messages. This option is available when a mobile phone is connected via Bluetooth. You can also send the brief reply message registered in the system.

Checking a new message


When a message is received, the new message notification window appears.

To check the message, touch **View**.

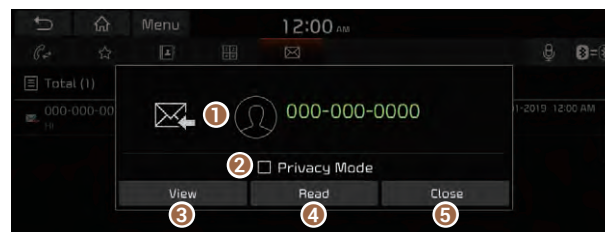


- ① View caller details.
 - ② Activate the lock mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.
 - ③ Can see the message details.
 - ④ Reads out the message through the speakers in the vehicle.
 - ⑤ Used to close the notification window.
-  The message notification window does not appear when the privacy mode is enabled or the message notification is turned off.


Bluetooth message screen

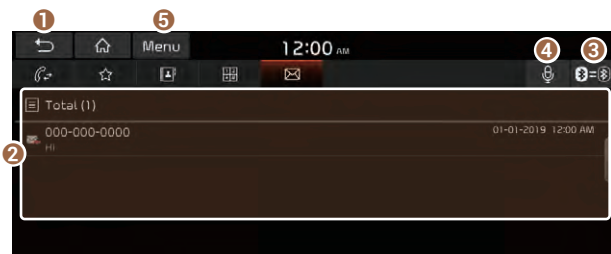

- 1 Returns to the previous step.
- 2 View the list of received messages.
- 3 Find and connect other Bluetooth devices.
- 4 Can text a message by using the voice recognition.
▶ See "Sending a text by using the voice recognition."
- 5 The list of menu items appears.
 - **Message Settings:** Displays the message settings screen (if equipped).
 - **Privacy Mode:** Activate the lock mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.
 - **Change Device:** Find and connect other Bluetooth devices.
 - **Bluetooth Settings:** Can change the Bluetooth settings.
 - **User's Manual on Web (QR Code):** Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen:** Can turn on or off the split screen mode.

Checking a new message from the list

- 1 Perform any of the following methods:
 - On the All Menus screen, touch **Phone**.
 - On the steering wheel, press the Call button.
- 2 On the Bluetooth Call screen, touch .
- 3 Select a message from the list.
- 4 Check the message.

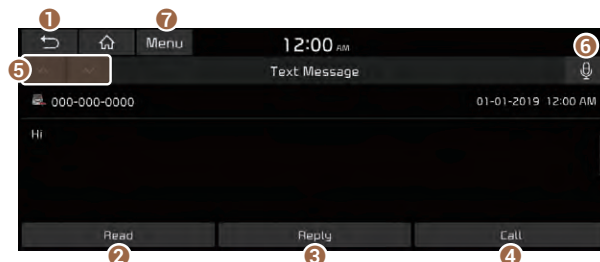

- 1 Returns to the previous step.
- 2 Reads out the message through the speakers in the vehicle.
- 3 Used to select a message registered in the system for sending a brief reply message.
- 4 Used to make a call to a message sender.
- 5 Used to move to the previous or next message.

⑥ Can text a message by using the voice recognition.

► See "Sending a text by using the voice recognition."

⑦ The list of menu items appears.

- **Message Settings:** Displays the message settings screen (if equipped).
- **Bluetooth Settings:** Can change the Bluetooth settings (if equipped).
- **Split Screen:** Can turn on or off the split screen mode.

✎ The auto-reply messaging may not be available depending on the smartphone model.

✎ To edit or delete a message, pull over the vehicle at a safe place and access the messaging function on your smartphone. You cannot edit or delete a message from the system.

✎ When an iPhone is connected to the system, there are some restrictions when receiving messages as follows:

- Only the sender name appears when the sender information is saved.
- When the sender information is not saved, only the phone number appears.
- You cannot use the auto-reply message function.
- When the incoming message notification or lock-screen view option is off, messages cannot be received.

✎ The message reader function may not be supported depending on the system language.

Sending a text by using the voice recognition

When you connect your mobile device to the system via Bluetooth, contacts from the device are downloaded to the system so you can text a message to a contact by using the voice recognition.

✎ To call using voice recognition, there must be contacts stored on the system.

✎ It is available only when the UVO service is active.

1 Perform any of the following methods:

- On the All Menus screen, touch **Phone**.
- On the steering wheel, press the Call button.

2 On the bluetooth message screen, touch .

3 When a guiding beep is heard, say the message.

The system sends the text to the selected contact.

07

Voice functions



Voice recognition
Using the Siri Eyes Free
Voice Memo

Voice recognition

With the voice recognition function, you can access various functions of the infotainment system without manipulating the screen or buttons. This function prevents driver distraction and dangerous situations.

Use voice commands to access various functions easily.

✍ The system can recognize the specified voice commands.
► See "Available voice commands" or the voice recognition help.

✍ Note the following for accurate delivery of command when saying it.

- Pronounce a command accurately and naturally like a conversation.
- Keep the correct posture and say commands toward the direction of the microphone.

✍ Voice recognition is automatically ended when:

- You make or receive a call.
- A media source is connected or disconnected.
- The front or rear cameras operate (if equipped).
- The [RADIO] or [MEDIA] button is pressed to perform another function.
- Rerouting or other unexpected action is made due to deviation from the route during guidance.

✍ Voice recognition may not work properly when:

- The sunroof or windows are open so the wind is strong.
- The fan speed of the air conditioner or heater is high (level 3 or below is recommended).
- The vehicle is passing through a tunnel.
- The vehicle is driving on an unpaved road and its noise and vibration are loud.
- Noise is loud due to a heavy rain or storm.

Using the voice recognition

1 On the steering wheel, press the Voice Recognition button.

Voice recognition starts along with voice guidance.


✍ To skip the voice guidance, press the Voice Recognition button on the steering wheel.

2 When a beep sound is heard, say a command to perform (e.g. navigation, music, call). ► See "Available voice commands" or the voice recognition help.

The recognized command appears in text at the top of the screen and the corresponding function is performed.

✍ When an additional command is required to perform, the commands that can be followed in the next step appear on the screen. Say a command or touch a command.

✍ When there are several similar commands, say a command number to perform.

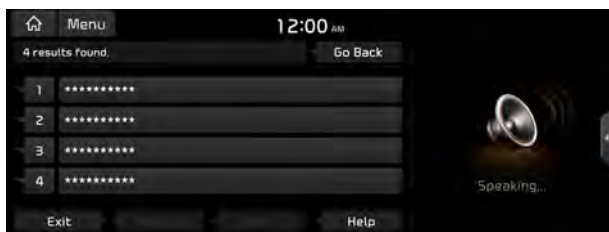


3 To end the voice recognition, perform one of the following methods:

- In standby mode for voice recognition, say "Exit"
- On the voice recognition screen, touch **Exit**.
- On the steering wheel, press and hold the Voice Recognition button.

✍ When the Voice Recognition button is pressed in standby mode for voice recognition, the standby time is extended.

✍ When the voice recognition is not available, press the Voice Recognition button on the steering wheel and use the voice recognition on your smartphone via phone projection. ► See "Using the phone projection function."

Voice recognition screen

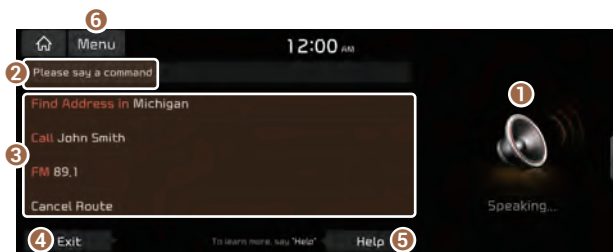

- 1 According to voice recognition, the icons for voice recognition, voice guidance, and command process appear.
- 2 The recognized voice command appears in text.
- 3 Shows the representative voice command.
- 4 Ends the voice recognition.
- 5 Displays the voice recognition help.
- 6 The list of menu items appears.
 - **Split Screen:** Can turn on or off the split screen mode.

Adjusting the voice guidance volume

Adjust the voice guidance volume when the system volume is so low or high and it interferes with your driving.

When the voice recognition is active, turn the Volume knob on the control panel.

Seeing the voice recognition help


You can see more details on how to perform various functions by voice commands.




Caution


Pull over the vehicle at a safe place and see the help.


- 1 On the steering wheel, press the Voice Recognition button.
- 2 Say "Help"


 When the mode time exceeds before you speak, you can touch **Help** instead.

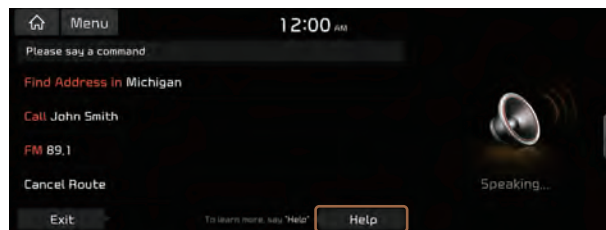


3 Select the desired option and see its help.

- To see the entire help for use of voice commands, touch  at the bottom of the screen.

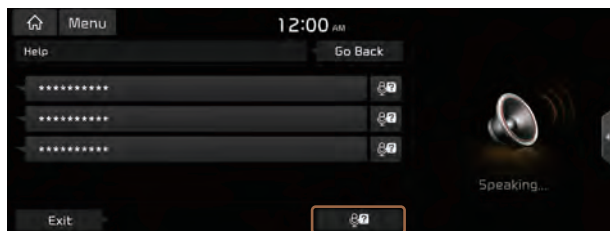

- To see more details on how to use voice commands for each function, touch  next to the function name.

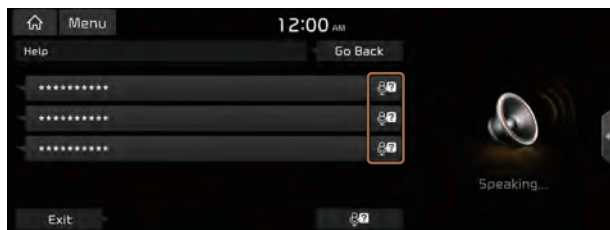


4 After seeing the help, perform any of the following methods.

- On the help screen, touch **Exit**.
- In standby mode for voice recognition, say "Exit"

Voice recognition Help



- 1 Returns to the previous step.
- 2 The function list appears.
 -  To see the list of voice commands that can be used for each function, touch or say the function.
- 3 You can see the usages for each function.
- 4 Ends the voice recognition.
- 5 You can see the entire help for use of voice commands.
- 6 According to voice recognition, the icons for voice recognition, voice guidance, and command process appear.
- 7 The list of menu items appears.
 - **Split Screen:** Can turn on or off the split screen mode.


Available voice commands

Call commands

Command	Function
Call	You can make a call to one of your mobile phone's contacts. Say a contact's name to begin a call.
Call <Name>	The system dials the phone number of that contact. If the contact has multiple phone numbers, select a phone number.
Call <Name> on Mobile	The system dials the phone number saved as "Mobile" for that contact.
Call <Name> at Work	The system dials the phone number saved as "Work" for that contact.
Call <Name> at Home	The system dials the phone number saved as "Home" for that contact.

Command	Function
Call <Name> on Other	The system dials a phone number saved as other than "Mobile", "Work", or "Home" for that contact.
Dial Number	You can make a call. Say a phone number to begin a call.
Dial <Phone #>	You can make a call immediately to that phone number.
Send Message	<p>You can send a text message to one of your mobile phone's contacts. Say a contact's name and then enter the message content by following the guidance.</p> <p>This command is available only if UVO is activated.</p>
Send Message to <Name>	<p>You can send a text message to that specific contact. Enter the message content by following the guidance.</p> <p>This command is available only if UVO is activated.</p>

Command	Function
Send Message to <Name> <Message>	You can send a text message to that contact more directly. This command is available only if UVO is activated.
Change Bluetooth Device	You can search for and connect another Bluetooth device.

 To use call commands, your mobile phone must be connected to the system via Bluetooth and your contacts must be downloaded. ► See “Connecting a Bluetooth device.”

Navigation commands

Command	Function
Find <POI or Address>	You can search for a designated POI name or address. For example, say "Find Kia dealerships" or "Find Kia dealerships in Seattle."
Find Address in <State>	You can search for a location with its address in a designated state. Say an address in order of the house number, street, and city.
Find <POI>	You can search for a designated category of POIs nearby. ► See “POI names.”
Frequently Visited Points	You can select a location from the list of your frequently visited points. Say the number of the location you want.
Address Book	Access the address book screen.

Command	Function
Previous Points	You can select a location from the list of your previous destinations, frequently visited points, and starting points. Say the number of the location you want.
Previous Destinations	You can select a location from the list of your previous destinations. Say the number of the location you want.
Previous Starting Points	You can select a location from the list of your previous starting points. Say the number of the location you want.
Traffic Information	Access the traffic information screen.
Go Home	Set the location saved to the Go Home shortcut button in your address book as your destination.
Go to Work	Set the location saved to the Work shortcut button in your address book as your destination.
Change Home	You can change the location saved as your home.

Command	Function
Change Work	You can change the location saved as your work.
Pause Route	Pause the navigation guidance.
Resume Route	Resume the navigation guidance.
Turn Guidance On	Unmute the navigation guidance.
Turn Guidance Off	Mute the navigation guidance.
Zoom In	Zoom in on the map.
Zoom Out	Zoom out from the map.
Cancel Route	Stop the navigation guidance and cancel your current destination.
Destination Information	View information on the distance and time to your current destination.
Route Options	Find another route.

Command	Function
Emergency Services	You can select a location from the list of nearby police stations, hospitals, dealerships, and roadside assistance services. Say the number of the location you want.
Police Stations	You can select a location from the list of nearby police stations. Say the number of the location you want.
Hospitals	You can select a location from the list of nearby hospitals. Say the number of the location you want.
Dealerships	You can select a location from the list of nearby motor dealerships. Say the number of the location you want.
Roadside Assistance	You can select a location from the list of nearby roadside assistance services. Say the number of the location you want.
Show Route	View the entire route on the map.

- ✎ When you use a command starting with "Find," the system searches for locations within the state or province where your vehicle is currently located. To search for locations in another state or province, say the state or province name first and then say the location you want.
- ✎ Some commands, such as "Cancel Route" or "Show Route," are available only when a destination is set.
- ✎ When **Use UVO Network** is selected in the **Setup ► Voice Recognition ► Use Network** menu, a UVO subscription is required to use voice commands for finding POIs or addresses. If you do not have a UVO subscription or do not want to use server-based voice recognition, deactivate the option.

Radio commands

Command	Function
FM <87.5 to 107.9>	Turn on the FM radio with that frequency.
AM <530 to 1710>	Turn on the AM radio with that frequency.
SiriusXM <0 to 999>	Turn on the SiriusXM radio with that channel number.

Other commands

Command	Function
Help	Move to the help screen.
Line <1 to 4>*	Select an item with the designated number on a list. Simple numbers, such as "One" or "Two," can be recognized.
Yes*	Accept a notification asking for your confirmation in an exceptional situation.

Command	Function
No*	Deny a notification asking for your confirmation in an exceptional situation.
Next*	If there are more than five items on a list, scroll to the next page.
Previous*	If you scroll to the next page of a list, scroll back to the previous page.
Manual Input*	When using the Dial Number command, open the keypad to enter a phone number manually.
Go Back*	Returns to the previous step.
Exit	End voice recognition.

* These commands are available only in certain situations.

POI names

Restaurants

POI name	POI name
Fast Food Restaurants	Long John Silver's
Arby's	McAlister's Deli
Boston Market	McDonald's
BURGER KING	Panda Express
Carl's Jr	Panera Bread
Chick-fil-A	Popeyes
Chipotle	Quiznos Sub
Church's Chicken	Schlotzsky's
Dairy Queen	SONIC
Firehouse Subs	SUBWAY
Hardee's	Taco Bell
IHOP	Taco John's
In-N-Out Burger	Waffle House
Jack in the Box	Wendy's
Jimmy John's	White Castle
KFC	Blimpie
Little Caesars	Checkers
	Culver's
	Five Guys Burgers and Fries
	Jamba Juice
	Jersey Mike's Subs

POI name	POI name
Smoothie King	Lone Star Steakhouse & Saloon
Steak n Shake	Longhorn Steakhouse
Whataburger	Luckys Cafe
Coffee Shops	Outback Steakhouse
Starbucks	Ponderosa
Dunkin' Donuts	Publix
Tim Hortons	Seasons 52
American Restaurants	Sheetz
Applebee's	Silver Fox
Bahama Breeze	Texas Roadhouse
Boston's Restaurant & Sports Bar	TGI Friday's
Cheeseburger in Paradise	The Capital Grille
Chili's Grill & Bar	A&W
Cool River	Bob Evans
Denny's	Buffalo Wild Wings
Frisch's Big Boy	Cracker Barrel Old Country Store
Good Eats	Golden Corral
III Forks	Red Robin
Lee Roy Selmon's	Ruby Tuesday

POI name	POI name
Wingstop	El Chico
Fleming's	Del Taco
Italian Restaurants	Moe's Southwest Grill
Bonefish Grill	Qdoba
Carrabba's Italian Grill	Toks
Chuck E Cheese's	Asian Restaurants
Domino's	Chinese Restaurants
Olive Garden	PF Chang's China Bistro
Papa John's	Japanese Restaurants
Papa Murphy's	Korean Restaurants
Pizza 73	Seafood Restaurants
Pizza Hut	Red Lobster
pizza pizza	Captain D's
Cici's Pizza	Vegetarian Restaurants
Godfather's	French Restaurants
Hungry Howie's Pizza	Continental Restaurants
Marco's Pizza	African Restaurants
Latin American Restaurants	Other Restaurants
Mexican Restaurants	Auntie Anne's
Cantina Laredo	Baskin-Robbins
Chevys	Haagen-Dazs

POI name	POI name
Hooters	CITGO
Roy's	Conoco
TCBY	Esso
VAN DER VALK	Exxon
Bojangles'	Fleetfuels
Cold Stone Creamery	GetGo
Zaxby's	Giant Gasoline

Automotive

POI name	
KIA Dealerships	
Gas Stations	
76	Ingles Gas Express
ampm	Marathon
ARCO	Martin's Gasoline
BP	Meijer Gas Station
Gas+	Mobil
Casey's General Store	Murphy Express
Cenex	Murphy USA
Chevron	Petro Stopping Centers
	PETRO-CANADA
	Phillips 66
	Pioneer

POI name	POI name
QuikTrip	AutoZone
Rutter's	BOSCH Car Service
Sheetz	Canadian Tire
Shell	Certigard
Sinclair	Chevron
Speedway	CITGO
Sunoco	Discount Tire
Sunoco Canada	Exxon
TEXACO	Firestone
TravelCenters of America	GOODYEAR
Ultramar	Gulf
Valero	Jiffy Lube
Wawa	Kal Tire
Hess Express	Midas
Irving	Mobil
Pemex	Napa
Parking	O'Reilly Auto Parts
Auto Services	PETRO-CANADA
AAA	Sears Auto Center
Advance Auto Parts	Shell
America's Tire	TEXACO

POI name	POI name
AAMCO Transmissions	CITGO
ACDelco	Costco
Big O Tires	Exxon
CARQUEST	Flying J
Meineke Car Care Center	Fred Meyer Fuel Center
Monro Muffler Brake & Service	Fry's Fuel Center
Napa Autocare Center	Fry's Marketplace Fuel Center
Pep Boys	Kroger Fuel Center
Quick Lane	Kum & Go
Safelite AutoGlass	Kwik Trip
Tires Plus	Meijer Gas Station
Valvoline Instant Oil Change	Murphy Express
Roadside Assistance	NISSAN
Auto Parts	QuikTrip
Car Washes	Shell
Automobile Dealerships	TEXACO
Motorcycle Dealerships	Valero
EV Charging Stations	Hydrogen Stations
Aloha	
Chevron	

Travel

POI name	POI name
	Days Inn
	DELTA
Airports	Doubletree
Hotels	Econo Lodge
Americas Best Value Inn	Embassy Suites
AmericInn	Grand Residences by Marriott
Andaz	Hampton Inn
Ascend Collection	Hawthorn Suites
Baymont Inn & Suites	Hilton
Best Western	Hilton Garden Inn
Cambria Suites	Hilton Grand Vacations
Canadas Best Value Inn	Holiday Inn
Candlewood Suites	Holiday Inn Express Hotel & Suites
Clarion Hotel	Homewood Suites
Comfort INN	Hotel Indigo
Comfort Suites	Howard Johnson
CONRAD	Hyatt Place
Country Inn & Suites by Carlson	Hyatt
COURTYARD by Marriott	Hyatt Summerfield Suites
Crowne Plaza	

POI name	POI name
Intercontinental	Ritz-Carlton
JW Marriott	Rodeway Inn
La Quinta Inn & Suites	Sheraton
Lexington	Sleep Inn
Mainstay Suites	SOFITEL
Marriott	Staybridge Suites
Marriott VACATION CLUB	Studio 6
Microtel Inns & Suites	Suburban Extended Stay
Motel 6	Super 8
NOVOTEL	Thriftlodge Canada
Omni Hotels	Travelodge
Park Inn	Travelodge Canada
Park Plaza	VAN DER VALK
QUALITY INN	WALDORF ASTORIA COLLECTION
Radisson	Wingate by Wyndham
Radisson SAS	Wyndham
RAMADA	Extended Stay America
Red Roof Inn	Fairfield Inn by Marriott
Regent Hotels & Resorts	Rental Car Agencies
Renaissance	Alamo
Residence Inn	

POI name
AVIS
Budget
Dollar Rent A Car
Enterprise
Hertz
National
Thrifty
Tourist Information
Tourist Attractions
Travel Agents
Rest Areas
City Centers
Campgrounds
Ferry Terminals
Bus Stations
Local Transit
Train Stations

Shopping

POI name
Department Stores
Canadian Tire
Dollar General
Dollar Tree
Family Dollar
JCPenney
Kmart
Kohl's
Nordstrom
Sears
Sears Hometown Store
Target
T.J. Maxx
Walmart
Big Lots
Macy's
Marshalls
Ross Dress For Less

POI name
Convenience Stores
7-Eleven
ampm
BP
Circle K
Fleetfuels
GetGo
GTO
Kangaroo Express
Murphy Express
Murphy USA
Petro Stopping Centers
QuikTrip
Rutter's
Sunoco Canada
TravelCenters of America
Wawa
Cumberland Farms
Hess Express

POI name
Mac's
Mini Mart
Quick Stop
Valero Corner Store
Shopping Centers
Grocery Stores
Giant Eagle
Giant Food Stores
IGA
Ingles Markets
Food Lion
Kmart
Kroger
Martin's Food Markets
Meijer
Publix
Sav-Mor Foods
Save-A-Lot
SuperValu

POI name	POI name
Albertsons	Sam's Club
ALDI	Electronics Stores
Piggly Wiggly	AT&T
Safeway	Best Buy
Winn-Dixie	GameStop
Pharmacies	Radioshack
CVS/pharmacy	Sprint
Giant Drugstore	Staples
Giant Eagle	T-Mobile
Ingles Pharmacy	OfficeMax
Kmart Pharmacy	US Cellular
Kroger Pharmacy	Verizon
Martin's Drugstore	Boost Mobile
Meijer Pharmacy	Cricket Wireless
Publix	metroPCS
Rite Aid	Home Specialty Stores
Shoppers Drug Mart	ABC Fine Wine & Spirits
Walgreens	Ace Hardware
Medicine Shoppe	Claire's
Safeway	Costco

POI name	POI name
Home Depot	Sam's Club
Lowe's	SEPHORA
Merle Norman	Sleepy's
PETCO	Sunglass Hut
PETSMART	Toys"R"Us
Sally Beauty Supply	Tuesday Morning
SHERWIN-WILLIAMS	Sporting Goods Stores
True Value	Dick's Sporting Goods
Bath & Body Works	Sports Authority
BED BATH & BEYOND	HIBBETT SPORTS
Carpet One	Music Stores
Do It Best	Bookstores
Family Video	Barnes & Noble Booksellers
GNC	Gift Shops
HOBBY LOBBY	Clothing Shops
Home Hardware	Mark's
Jo-Ann	Aeropostale
Michaels	American Eagle Outfitters
Party City	Cato
Pier 1 Imports	Chico's

POI name
Children's Place
Dressbarn
Famous Footwear
Finish Line
Foot Locker
GAP
Gymboree
Hot Topic
Journeys
Justice
Lane Bryant
Men's Wearhouse
Old Navy
PacSun
Rainbowshops
rue21
Victoria's Secret
Shoe Stores
Payless Shoesource
General Merchandise

Recreation

POI name
Amusement Parks
Museums
Cinemas
Golf Courses
Sports Complexes
Sports Activities
Wineries
Video & Game Rental
Ski Resorts
Recreation Areas
Other Recreation Areas

Financial Services

POI name
Banks
Bank of America
BB&T
Chase
Citibank
Citizens Bank
Fifth Third Bank
KeyBank
PNC Bank
RBC Royal Bank
Regions
SunTrust
TD Bank
TD Canada Trust
US Bank
Wells Fargo
Bank of the West
BBVA Compass
BMO Bank of Montreal
BMO Harris Bank

POI name
Caisse Populaire Desjardins
Capital One
CIBC
First Citizens Bank
First National Bank
M&T Bank
Santander
Scotiabank
The Huntington National Bank
Woodforest National Bank
ATMs
Bank of America
BB&T
Chase
Citibank
Citizens Bank
Fifth Third Bank
KeyBank
PNC Bank
RBC Royal Bank
Regions

POI name
SunTrust
TD Bank
TD Canada Trust
US Bank
Wells Fargo
Bank of the West
BMO Bank of Montreal
BMO Harris Bank
Caisse Populaire Desjardins
Capital One
CIBC
Commerce Bank
First National Bank
HSBC
M&T Bank
Santander
Scotiabank
State Employees' Credit Union
Check Cashing Services
Money Transfer


Community

POI name
Police Stations
Post Offices
Libraries
Schools
Fire Departments
Convention Centers
Churches
Synagogues
City Halls
Civic Centers
Court Houses
Government Offices
Waste & Sanitary Services
Utilities
Business Facilities

Services

POI name
Hospitals
Medical Services
Physicians
Tax Services
Attorneys
Funeral Homes
Hair & Beauty Services
Cleaning & Laundry Services
Social Services
Communication
Dentists
Photography Services
Tailors & Alterations
Movers

POI name
Nursing Homes
Optical Services
Personal Services
Repair Services
Veterinary Hospitals
Shipping Centers


 Available POI names may change when the system is updated.

Using the Siri Eyes Free

When you connect an Apple device that is compatible with Siri to your system via Bluetooth, you can use the Siri Eyes Free. This allows you to perform the functions on your system and Apple device with voice commands so that you can devote your attention to driving.

First, make sure that your Apple device supports Siri and that you have activated Siri.

- 1 Connect your Apple device to your system via Bluetooth.
- 2 On the steering wheel, press and hold the Voice Recognition button.
- 3 On the Siri screen, touch **Speak**.

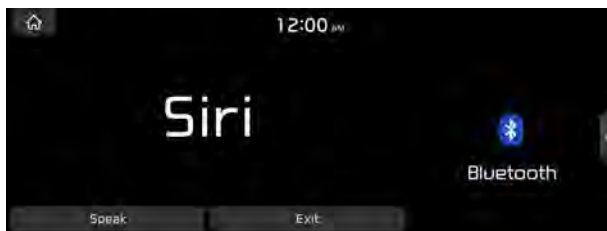

4 Say a command.

- ✎ You can perform the functions related to Bluetooth calls on the system and other functions on your Apple device.
- ✎ Press the Voice Recognition button to restart Siri.

5 To end Siri, press and hold the Voice Recognition button on the steering wheel.

Siri Eyes Free is enabled only while driving. When you shift to “P” (Park) or apply the parking brake, you can disable this function.

- ✎ Apple devices may have different functions enabled and may vary in the way how they respond to Siri commands, depending on the device type and iOS version.


Voice Memo

You can use the microphone on the vehicle to record and play voice memos.

Using the voice memos

On the All Menus screen, touch **Voice Memo**.

Voice memo screen

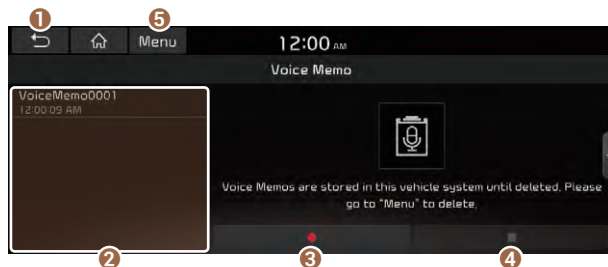



- ① Returns to the previous step.
- ② Displays the list of recorded voice memos.
- ③ Starts or pauses the recording.
- ④ Stops recording.
- ⑤ The list of menu items appears.
 - **Delete:** Can delete a voice memo.
 - **Save to USB Device:** Can record a voice memo to a USB storage device. You can delete voice memos in the USB storage devices formatted in FAT16/32.
 - **Storage Information:** Can see the file size of recorded voice memos.
 - **User's Manual on Web (QR Code):** Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen:** Can turn on or off the split screen mode.

Recording a voice memo


- 1 On the **Voice Memo** screen, touch .

It starts recording a voice memo.

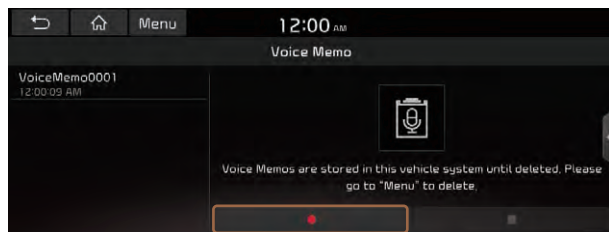

- 2 When recording is finished, touch  on the screen or press the End Call button on the steering wheel.


The voice memo is automatically saved.

- ✎ To temporarily stop recording, touch .
- ✎ When recording starts, the other audio functions are muted or playback is paused.
- ✎ When you make or receive a call while recording, the recording is paused.
- ✎ When you make an emergency call or you are connected to an emergency call after airbag deployment, the recording is stopped and the recorded voice memo is automatically saved.

Playing a voice memo

You can select and play a recorded voice memo.

From the list of Voice Memos, touch the desired voice memo.

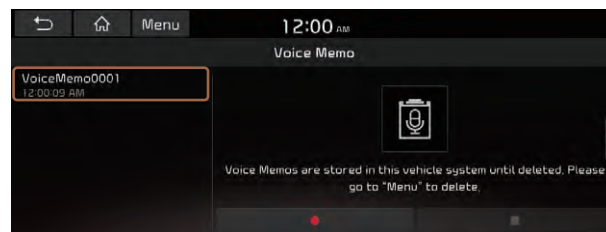

MEMO



08
UVO



UVO service
Running the UVO


UVO service

UVO provides connected car services, such as roadside assistance and emergency rescue, via the latest IT and communication technologies.

When you have subscribed to UVO, you can use the UVO service by using the [UVO] buttons. You can also access other useful features using the UVO menu on your system.

- ✍ You must be an active UVO subscriber or within the initial free trial period to receive UVO services, including Auto Crash Notifications.
- ✍ Depending on the conditions such as vehicle type, system type, and the subscribed service package, available services may differ.
- ✍ Some services may incur additional charges.
- ✍ Services may be modified, added, or deleted by changes in the company's policies.

Service restrictions

UVO services are provided via the mobile communication network. Accordingly, the service may be restricted depending on the mobile communication network condition. Use the network signal strength icon () at the top of the screen to check the mobile communication status.

- ✍ It is recommended to use the service when the number of signal bars in the icon is 4 or more.
- ✍ Depending on the network signal status, access to UVO may be restricted in the following locations:
 - Inside a building or tunnel
 - Mountain or forest area
 - Road close to a cliff
 - Area densely populated with tall buildings
 - Road under expressway or multi-level road
 - Communication shadow area according to the service provider's network coverage policy

Subscribing to the service

You must activate the service to use it on the system. An account with MyUVO.com is required to activate the service. When you do not have an account, create a new account to activate the service. When you already have an account, enter the verification code you received from MyUVO.com.

Caution


Do NOT turn off the vehicle when the service setting is in progress. It may cause system malfunction.


1 Park your vehicle in a safe place.

-  You cannot enter information for service activation while your vehicle is moving.


2 On the All Menus screen, touch **UVO ► UVO Settings ► Activate UVO**.

3 Enter your phone number or email address, and then touch **Submit**.

-  When you have a registered account and verification code, touch **I already have a code**.

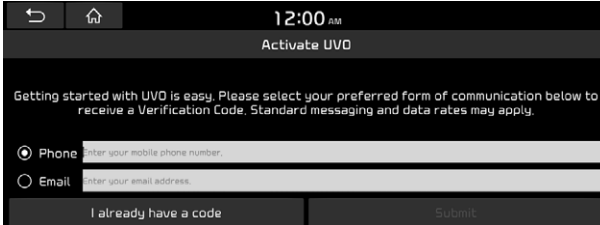

4 Enter the verification code you received from MyUVO.com and then touch **Submit**.

-  Now activation starts. While the activation is in progress, the system buttons are locked.

Caution

Do not turn off the vehicle while the activation is in progress. It may cause a system malfunction.

- ✎ When activation fails, contact the UVO Center at (844) UVO-9411.
- ✎ When your UVO service expires, you can reactivate the service by renewing your subscription on MyUVO.com and entering your verification code again in the **Activate UVO** menu.

Running the UVO

You can run the UVO in the system to use the service.

On the All Menus screen, touch **UVO**.




- 1 Returns to the previous step.
- 2 Call to the Roadside Assistance using the UVO service.
► See "Contacting for roadside assistance."
- 3 See the location information received from the UVO website or the UVO application. ► See "Using the received location information."
- 4 Check your vehicle's abnormal conditions and see the diagnosis result. ► See "Using the received location information."
- 5 See the information about the intervals for the last and next maintenance services (if equipped). ► See "Checking maintenance service intervals (if equipped)."
- 6 Access the UVO service to use it on the system, activate the automatic 911 connection feature, or access modem information.

7 Call the UVO Center to request help or make inquiries about using the UVO service.


8 The list of menu items appears.

- **User's Manual on Web (QR Code):** Displays the QR code that provides access to the online user manual for the system.

 The screen may differ depending on the vehicle model and specifications.

Warning


Driving while distracted may cause a loss of vehicle control that may lead to an accident, severe bodily injury, or death. The driver's primary responsibility is the safe and legal operation of the vehicle, and the use of any vehicle systems, including the touch screen and steering wheel controls that take the driver's eyes, attention, and focus away from safe driving or that are not permissible by the law, should never be used while driving.


 Use the UVO features on the system when the vehicle is stationary with the vehicle turned on.


Contacting for roadside assistance

When you encounter a disabled vehicle or other problems on the road, you can directly contact the UVO Center for roadside assistance and receive the service for vehicle towing.

Perform any of the following methods:

- On the All Menus screen, touch **UVO ► Roadside Assist**.
- Press the [] button on the vehicle.

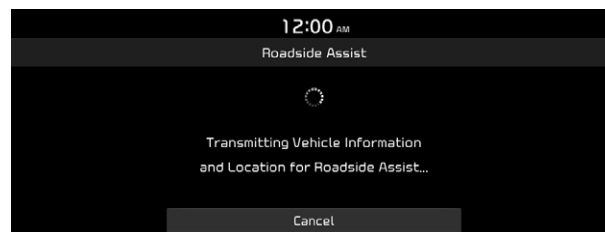


 Depending on the network status, this feature may not work correctly.


Using the received location information

You can view points of interest (POIs) received from the UVO website and the UVO application and set one of them as the destination.

- 1 On the All Menus screen, touch **UVO ► My POIs**.
- 2 From the list of received locations, select a place name.

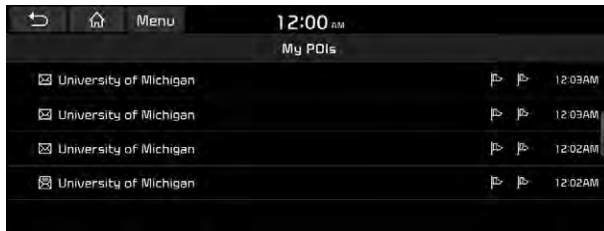

- 3 Check the location information.

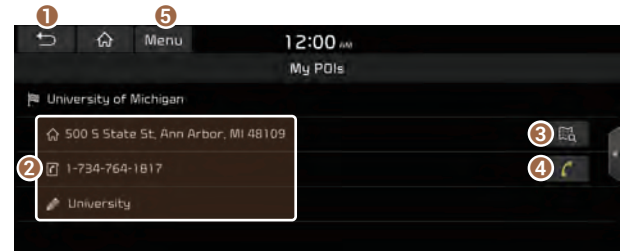

- 1 Returns to the previous step.
- 2 Displays the detailed information of the selected place including the address and contact number.
- 3 Displays the location of the selected place on the map.
- 4 Dials the phone number of the location. This option is available only when the phone number is included in the location.
- 5 The list of menu items appears.
 - **Delete:** Can delete a location from the list.
 - **User's Manual on Web (QR Code):** Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen:** Can turn on or off the split screen mode.

- ✎ When the storage space is not sufficient, data is automatically deleted from the oldest ones.
- ✎ To make a call to the selected location, make sure that your mobile phone has been connected to Bluetooth or Phone Projection.

Diagnosing the vehicle

If you are curious about whether or not there is a problem with your vehicle, you can diagnose your vehicle. With the diagnosis result, you can also reserve a maintenance service.

1 Park your vehicle in a safe location.

- ✎ The vehicle must be stationary because some components cannot be diagnosed while driving.


2 On the All Menus screen, touch **UVO ► Vehicle Diagnostics**.

Remote vehicle diagnosis starts.

- ✎ Keep the screen on until the diagnosed result appears. When you switch to another screen during diagnosis, the diagnosis service is canceled.

3 See the diagnosis results and perform a required function, as follows:

- To schedule a maintenance service at a preferred Kia dealership or the nearest one, touch **Schedule Service**.
- To call the UVO center for roadside assistance, touch **Roadside Assist**.

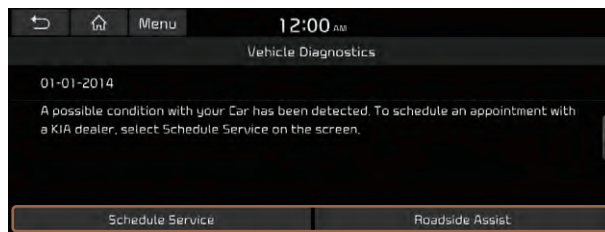


- ✎ A diagnosis result provided by this service is only an estimated result based on the signals from your vehicle. Visit a Kia Motors dealership for a detailed diagnosis.
- ✎ When a critical diagnostics issue is detected on your vehicle, an automatic diagnosis starts when a warning light illuminates on the instrument cluster. You are notified of the diagnosis result.
- ✎ Your preferred dealership must be registered on MyUVO.com for you to schedule a maintenance service with it.


Checking maintenance service intervals (if equipped)


You can see information about the intervals for the last and next maintenance services. This feature can help you maintain your vehicle on a regular basis.


1 On the All Menus screen, touch **UVO ► Maintenance**.

2 Check the maintenance information.

 You can see the distance driven and the number of days since your last maintenance service. Use the information to determine when to perform the next maintenance service.

 To reset the information, touch **Reset Service Intervals**.

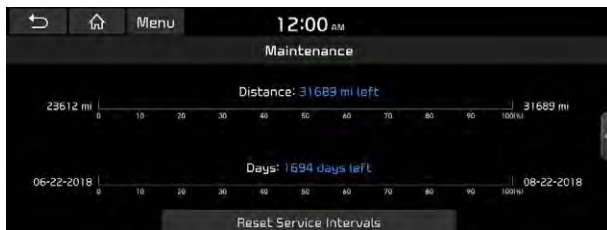

 To access the online user's manual on the Maintenance screen, touch **Menu ► User's Manual on Web (QR Code)** and then scan the displayed QR code.

Contacting the UVO Center

You can contact a UVO Center representative directly to request help or make inquiries about using the UVO services.

Perform any of the following methods:

- On the All Menus screen, touch **UVO ► Virtual Assistant**.
- Press the **[i]** button on the vehicle.

 To end the call, touch **End** on the screen or press the **[i]** button.

 This feature is not available during a Bluetooth call.

Using Voice Local Search


With UVO, you can search for locations from the online map database by using voice commands.

If you did not update the map or system or you cannot find your destination in the navigation, you can use the latest information from the online server to search for locations and receive guidance.

- 1 Press the [UVO] button on the vehicle.

Voice recognition starts with voice guidance.

- 2 After the voice guidance ends and you hear a beep, say the POI name or Address.

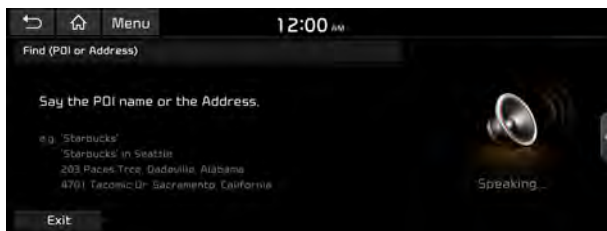

- ✎ Depending on the system language, voice recognition may not be supported.

Configuring the UVO settings

You can subscribe to the UVO service or see the modem information.


- ✎ For more information: ► see “Configuring the UVO settings.”

MEMO



09

Settings

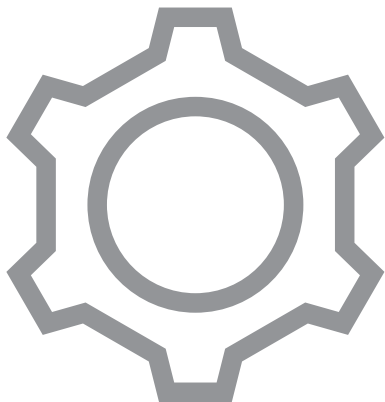

- Configuring the vehicle settings
- Configuring the device connection settings
- Configuring the advanced system settings
 - Configuring the sound settings
 - Configuring the voice recognition settings
 - Configuring the navigation settings
 - Configuring the UVO settings
- Configuring the user profile settings
- Configuring the general system settings
 - Configuring the display settings
 - Configuring the media settings
- Updating the system software and map

Configuring the vehicle settings (if equipped)

You can configure the functions for driving and related environments.

- ✎ Any changes to the settings of the vehicle should be done while the vehicle is safely parked.
- ✎ You can change vehicle environment settings only when the engine is running.
- ✎ Available settings may differ depending on the vehicle model and specifications.
- ✎ Depending on the climate control system, some functions may not be supported.

1 On the All Menus screen, touch **Setup ► Vehicle**.

The vehicle settings screen appears.

2 Configure the settings required:

Head-Up Display (if equipped)

You can set to use the head-up display that displays information such as driving speed and road-related information while driving.



Enable Head-Up Display (if equipped)

Can determine whether or not to use the head-up display.

Display Control (if equipped)

Adjust the head-up display position, video location & rotation, and its brightness.

Content Selection (if equipped)

Select the items to display on the head-up display.

Speedometer (if equipped)

Can set the driving speed items and colors to display on the head-up display.

Driver Assistance (if equipped)

You can set to use various systems that assist the driver for safety.



Warning

- Be sure to always check the road conditions while driving. The driving assist system helps you drive safely and conveniently. Relying solely on the driving assist system may cause violation of traffic rules and regulations, resulting in an accident.
- Be sure to control the vehicle by your judgment and keep traffic regulations for safety. When the driving assist system is active, drive the vehicle with keeping eyes forward and checking the surroundings.
- Not all driving assist system warnings or sub-features are necessary when they are active, and they do not replace the driver discretion under any circumstances. Stay focused on the road while driving.

Caution


Be sure to always check the vehicle surroundings while driving. The equipped cameras and sensors may not operate under all driving conditions.

SCC Reaction (if equipped)

Adjusts the responsiveness of Smart Cruise Control to the acceleration of a leading vehicle.

Driving Assist (if equipped)

You can set to use the safe driving options such as lane keeping assistance and speed limit warning.

-  The driving assist system operates based on the information from the navigation system so you must use the system only when the navigation system operates normally.

- **Highway Driving Assist:** When you are driving on an federal highway, the system helps you keep the correct lane according to the set speed and inter-vehicle distance.
 - ✍ The highway driving assist system operates only on a highway. When the vehicle exits from the highway, the system is turned off automatically.
- **Highway Auto Speed Zone Slowdown:** The driving speed automatically decreases in the expressway speed zone.
 - ✍ The highway auto speed zone slowdown system operates only on a highway. When the vehicle exits from the highway, the system is turned off automatically.
 - ✍ It operates considering the speed cameras located on the selected route.
- **Highway Auto Curve Slowdown:** The driving speed automatically decreases in the highway curve zone.
 - ✍ It operates based on the curve zones on the route. When the destination is not set, it operates based on the curve zones on the expected path.

Warning Timing (if equipped)

If necessary, set the time to output alerts when any alarm is generated by driver attention warning and forward safety system.

Warning Volume (if equipped)

You can adjust the volume of the alert sound upon danger of forward or blind spot collision

Driver Attention Warning (if equipped)

If necessary, set to output alerts to prevent accidents by analyzing the driving patterns.

- **Leading Vehicle Departure Alert:** When the leading vehicle departs, the notification is provided.



Warning

Be sure to always check the road conditions ahead or surroundings before departure. An accident caused by distracted driving can be prevented.

- **Safety Notice Call:** Used to set to make a call for checking your safety to Blue Link Center when suspected that vehicle movement is dangerous.
- **Inattentive Driving Warning:** Set the system to remind when it detects a distracted driving pattern and suggest to take rest if needed.

Forward Safety (if equipped)

You can set to help detect and monitor the vehicle ahead.

- **Active Assist:** Helps mitigate a collision by generating a warning sound and may provide braking assist. Ref. to owners' manual for details.



Warning

This system is only a supplemental system and it is not intended to, nor does it replace the need for extreme care and attention of the driver. The sensing range and objects detectable by the sensors are limited. Pay attention to the road conditions at all times.

- **Warning Only:** Produces a warning alarm in accordance with the collision risk level.
- **Off:** Turns off the forward safety function.

Lane Safety (if equipped)

Set to generate warning or provide assist to help the vehicle stay in its lane.

- **Lane Keeping Assist:** Helps prevent lane deviation by generating warning sound and help the vehicle between stay in its lane.



Warning

The Lane Keeping Assist (LKA) system is not a substitute for safe driving practices, but a convenience function only. It is the responsibility of the driver to always be aware of the surroundings and steer the vehicle.



Caution

When the lanes are not recognized well by front cameras, always check the surroundings because the lane keeping assist system may not work properly.

- **Lane Departure Warning:** When a danger of lane deviation is detected, the warning sound is generated.
- **Off:** Turns off the lane safety function.

Blind-Spot Safety (if equipped)

You can set to generate warning sound and may provide active assist if there is a possible collision with an approaching vehicle while changing lanes.

- **Blind-Spot View:** Displays the blind spot view on the instrument cluster when the turn signal lamp is blinking.
- **Safe Exit Assist:** Help prevent the passengers from opening a door by warning the passengers when an approaching vehicle from the rear area is detected after the vehicle stops.



Caution

- The Safe Exit Assist (SEA) system may not operate normally when a vehicle is coming rapidly two lanes over from your vehicle or a vehicle is approaching at a fast speed from the rear in the lane next to your vehicle.
- The Safe Exit Assist (SEA) system may not operate normally if there is any vehicle or obstacle at the rear area of your vehicle.
- The Safe Exit Assist (SEA) system may be activated later than normal or may not operate normally if a vehicle is approaching fast from the rear of your vehicle.
- The Safe Exit Assist system may not operate when the blind spot detection system malfunctions as follows:
 - The blind spot collision warning message appears on the instrument cluster.
 - The sensors of the blind spot detection system are contaminated or covered.
 - The blind spot detection system does not generate warning or generates a wrong alert.

- **Active Assist:** Helps prevent collision by generating warning sound and helping you adjust the vehicle speed if any suspected blind spot collision danger.



Warning

Always be aware of road conditions while driving and be alert for unexpected situations even though the Blind-Spot Collision Warning system and Blind-Spot Collision Avoidance Assist system are operating.

- **Warning Only:** When a danger of blind spot collision is detected, the warning sound is generated.
- **Off:** Turns off the blind spot safety function.

Parking Safety (if equipped)

You can set to generate warning sound and may provide assist when an obstacle is detected while parking.


- **Surround View Monitor Auto On:** Display the feed from the surround view monitor automatically when the parking distance warning is on (if equipped).
- **Parking Distance Warning Auto On:** Automatically turns on the alarming function depending on the distance to obstacles upon parking or driving in low speeds.
- **Rear Cross-Traffic Safety:** Assists to generate warning sound and may provide assist if a potential collision is detected when the vehicle is in reverse.
- **Active Assist:** Helps prevent collision by generating warning sound and may provide braking assist if a potential collision is detected while the vehicle reversing.
- **Warning Only:** The warning sound is generated if a danger of collision is detected when reversing the vehicle.
- **Off:** Turns off the parking safety function.

Warning

- Even though the vehicle is equipped the parking safety system, be sure to check any obstacles in the rear while driving. Relying solely on the driving assist system may cause an accident. Accordingly, be sure to control the vehicle by your judgment.
- When the sensors cannot detect any obstacles due to the detection limit, it may cause an accident. Be sure to always check the surroundings while parking.

Drive Mode (if equipped)


You can change the vehicle settings for driving conditions.

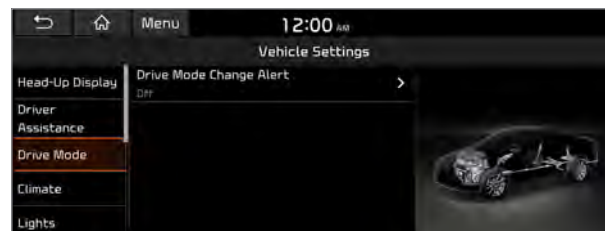

Type A



Type B (EV only)

 The screen may differ depending on the vehicle model and specifications.

ECO (EV only)

This is a drive mode for increasing the vehicle's fuel efficiency. You can change the climate control mode, the active coast energy regeneration level, and speed limit settings.

NORMAL (EV only)

This is a drive mode focused on the driver and passenger's comfort. You can change the climate control mode and the active coast energy regeneration level.

SPORT (EV only)

This drive mode enables a more dynamic driving performance. You can change the climate control mode and the active coast energy regeneration level.

Drive Mode Change Alert (if equipped)

You can set how to display the notification message when the drive mode is changed.

- **Detailed Alert:** Displays a detailed notification message along with the vehicle image when the drive mode is changed.
- **Simple Alert:** Displays the notification at the top or on the split screen when the drive mode is changed.
- **Off:** When the drive mode changes, no notification is provided.

Reset ECO/NORMAL/SPORT (EV only)


You can reset the drive mode settings to the default values.

- ✎ The display may differ depending on the vehicle model and specifications.
- ✎ See how to improve ECO potential by touching the **Help** button from an EV(Electric Vehicle). In most cases, a vehicle can travel a longer distance when its ECO potential score is higher (EV only).

Climate (if equipped)

You can configure the operation environment for climate control system.



 The screen may differ depending on the vehicle model and specifications.

Recirculate Air (if equipped)

You can set to keep the inside air pleasant by blocking inflow of outside air.

- **Activate upon Washer Fluid Use:** Sets to automatically switch to the inside air circulation mode to prevent inflow of washer fluid scent when spraying washer fluid.

Automatic Ventilation (if equipped)

You can set to prevent condensation inside and keep inside air pleasant using this feature.

- **Auto Dehumidify:** Once the inside air circulation mode has been used for a long time, it is switched to the outside air inflow mode to prevent condensation.

Defog/Defrost Options (if equipped)


You can set to enable the defogger to secure driver visibility.

- **Auto Defog:** When the sensor detects fog on the windshield, the automatic ventilation is run for defogging.

Climate Features (if equipped)

You can set or change the settings for the climate system.

- **Rear Climate Controls:** Used to move to the climate control screen for the rear seat. You can check or set the climate status for the rear seat.

 For more information about controlling the rear-seat climate control system: ► see [“Using the rear-seat climate control system \(if equipped\)”](#)

Lights (if equipped)

You can configure the settings for vehicle lights.



✎ The screen may differ depending on the vehicle model and specifications.

Ambient Light (if equipped)

You can set the brightness and color of the ambient light.

One Touch Turn Signal (if equipped)

You can set the number of turn signal lamp flashes when the lamp lever is operated.

Headlight Delay (if equipped)

You can set to turn off the taillights and headlights in 15 seconds after turning off the vehicle to ensure visibility.

High Beam Assist (if equipped)

You can set to automatically control the high beam when an oncoming vehicle is approaching to decrease the high beam glare.

Door (if equipped)

You can configure the operation environment for the trunk and doors.



Auto Lock (if equipped)

You can set the time to automatically lock all doors.

Auto Unlock (if equipped)

You can set the time to automatically unlock all doors.

2 Press Unlock (if equipped)

You can set to unlock all doors by pressing the door unlock button twice.

✍ When you press the door unlock button once, only the driver's seat door is unlocked.

Smart Trunk (if equipped)

Opens the trunk automatically when approaching the trunk with the smart key.

Cluster (if equipped)

You can set the data to display on the instrument cluster and the volume and type for guiding beep.



Service Interval (if equipped)

You can set to guide you when to perform the vehicle inspection.

- **Enable Service Interval:** Sets the service inspection interval. When it exceeds, the notification is provided.
- **Distance:** Sets the driving distance for a service.
- **Duration:** Sets the service cycle.
- **Reset:** Initializes the settings for distance and duration.

Energy Consumption Reset (if equipped)

You can set to automatically initialize the average fuel economy.

- **After Ignition:** The average fuel economy is automatically initialize whenever you drive the vehicle.
- **After Refueling:** The average fuel economy is automatically initialize whenever you refuel the vehicle.
- **Off:** The average fuel economy initialize is unavailable.

Content Selection (if equipped)

You can set the content to display on the instrument cluster.

- **Gear Position Pop-up:** When the gear is shifted, the information pop-up appears.
- **Wiper/Lights Display:** When the wiper or light lever operates, the operation mode appears.
- **Traffic Signs:** Displays the road information such as speed bumps and speed limits.
- **Icy Road Warning:** When the outside temperature drops below 4 °C (39 °F), the possibility of road icing appears.

Cluster Voice Guidance Volume (if equipped)


You can adjust the volume of guiding beep.

Welcome Sound (if equipped)

You can set to generate the notification sound when turning on or off the instrument cluster.

Convenience (if equipped)

You can configure the features for convenience such as welcome sound and wireless charging.

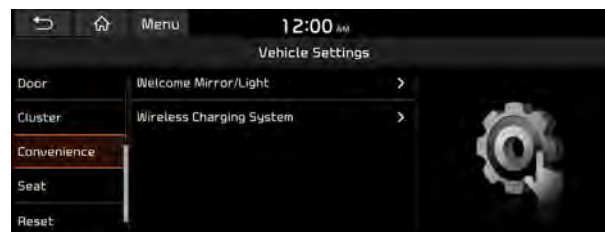

Welcome Mirror/Light (if equipped)

You can set the welcoming time on the outside rear-view mirrors.

- **Enable on Driver Approach:** When the driver with the smart key approaches, the welcome feature is enabled.

Wireless Charging System (if equipped)


You can set to charge your smartphone wirelessly.

- ✎ This feature is available only in smartphones that can be charged wirelessly.

Seat (if equipped)

You can configure the settings of the steering wheel or seats, such as seat position change notification and automatic control of the steering wheel warmer.



 The screen may differ depending on the vehicle model and specifications.

Seat Position Change Alert (if equipped)

You can set the system to display a notification message along with the seat image on the screen when a seat position is changed.

Smart Posture Care (if equipped)

You can see the recommended driving posture according to your physical data, and the clinical inspection result for your waist.

Heated/Ventilated Features (if equipped)

You can manage the driving environment pleasantly by linking the climate controls to the steering wheel warmer and driver's seat warmer/ventilation.

- **Auto. Controls That Use Climate Control Settings:** Automatically controls the heating wire or ventilation for the driver's seat and steering wheel, in sync with the climate control function.
 - **Steering Wheel Warmer:** Steering Wheel Warmer adjusts automatically based on Climate settings.
 - **Seat Warmer/Ventilation:** Seat Warmer/Ventilation adjusts automatically based on Climate settings.

Seating Easy Access (if equipped)

For convenience upon getting on and off, you can adjust the position of the driver's seat or steering wheel to secure space inside the vehicle.

- **Steering Easy Access:** The steering wheel moves upward when getting on and off.
- **Seat Slide Easy Access:** The seat moves forward or backward by a certain distance when getting on and off.

Rear Seat Heating Control (if equipped)

You can set to enable the warmer for the rear-left and rear-right seats.

Reset (if equipped)

You can initialize all system settings in the vehicle.



✎ The required features cannot be initialize.

Configuring the device connection settings

You can manage Bluetooth devices or configure their operation settings. You can also activate the phone projection so that you can control the smartphone applications on the system screen after connecting the smartphone to the system.

- ✎ For more information on how to use the Bluetooth functions:
 - ▶ see “Connecting a Bluetooth device.”
- ✎ Some setting options appear when a smartphone is connected to the system
- ✎ To edit or delete a message, pull over the vehicle at a safe place and access the messaging function on your smartphone. You cannot edit or delete a message from the system.
- ✎ When an iPhone is connected to the system, there are some restrictions when receiving messages as follows:
 - Only the sender name appears when the sender information is saved.
 - Only the phone number appears when the sender information is not saved.
 - You cannot use the auto-reply message function.
 - When the incoming message notification or lock-screen view option is off, messages cannot be received.
- ✎ The message reader function may not be supported depending on the system language.

1 On the All Menus screen, touch **Setup ► Device Connections**.

The device connection settings screen appears.

2 Configure the settings required:

Device Connections

You can register or delete a Bluetooth and phone projection devices for the system and connect or disconnect a registered device.



- ✍ You can add one Bluetooth hands-free kit or up to two Bluetooth audio devices.
- ✍ With any device connected for phone projection, only a Bluetooth audio device can be connected.
- ✍ You can connect registered devices up to 2.

Auto Connection Priority

Can set the Bluetooth or phone projection connection priorities for devices to automatically connect when starting the vehicle.



Bluetooth

You can change the settings of the Bluetooth connections.



Message Notification

Displays a notification message when a message is received.

✎ Message settings are available only when the messaging function is enabled.

Predefined Messages

You can edit the auto-reply message that is automatically sent out after receiving a text message or receiving a phone call.

✎ This option may not be available in some phone models.

✎ Message settings are available only when the messaging function is enabled.

Bluetooth Voice Prompts

You can determine whether or not to be notified by voice when a notification for Bluetooth connection is received.

Privacy Mode

Enable or disable Privacy Mode. Hide data including contacts and call history from showing up on the system screen to protect privacy.

✎ The privacy mode is available when the Bluetooth Hands-free function is connected.

System Info

You can check and modify the vehicle name and authentication code displayed upon device registration.

<div><div></div><div></div><div>Menu</div></div>		Status Bar	
<div><div>Q</div></div>		Device Connections Settings	
Device Connections	1	Device Name	<div><div>Icon</div><div>AA/CP</div><div>1.000</div><div>1.000</div></div>
Auto Connection Priority	2	Device Name	<div><div>Icon</div><div>Music</div><div>1.000</div><div>1.000</div></div>
Bluetooth	3	Device Name	<div><div>Icon</div><div>Music</div><div>1.000</div><div>1.000</div></div>
System Info	4	Device Name	<div><div>Icon</div><div>Music</div><div>1.000</div><div>1.000</div></div>
Reset	Add New	Delete	

Reset

You can delete all registered Bluetooth and phone projection devices and initialize the device connection settings. After a reset, the system deletes all data such as calls, favorites, contacts, and messages downloaded to the system as well as Bluetooth devices.

<div><div></div><div></div></div>		Menu		Status Bar	
<div><div></div></div>		Device Connections Settings			
Device Connections	1	Device Name	<div><div></div><div>Icon (AA/CP)</div></div>	<div><div></div><div>1 min</div></div>	<div><div></div><div>1 min</div></div>
Auto Connection Priority	2	Device Name	<div><div></div><div>Icon (Music)</div></div>	<div><div></div><div>1 min</div></div>	<div><div></div><div>1 min</div></div>
Bluetooth	3	Device Name	<div><div></div><div>Icon (Music)</div></div>	<div><div></div><div>1 min</div></div>	<div><div></div><div>1 min</div></div>
System Info	4	Device Name	<div><div></div><div>Icon (Music)</div></div>	<div><div></div><div>1 min</div></div>	<div><div></div><div>1 min</div></div>
Reset	Add New		Delete		

Configuring the data/network settings (if equipped)

You can change the network settings such as UVO and Wi-Fi Hotspot.

- 1 On the All Menus screen, touch **Setup ► Data/Network**.


The data/network settings screen appears.

- 2 Configure the settings required:

Wi-Fi Hotspot

You can activate the Wi-Fi Hotspot that connects multiple devices to the wireless network.

✎ When wireless phone projection is connected, you cannot set the Wi-Fi Hotspot. To use the Wi-Fi Hotspot, disconnect the wireless phone projection.

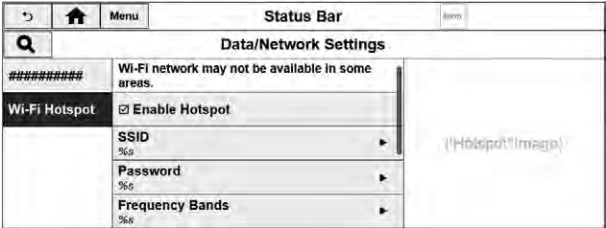

Enable Hotspot

Can enable or disable the Wi-Fi Hotspot. Check to use the Wi-Fi Hotspot.

SSID

Can set the vehicle's network SSID.

Password

Can enter the password for security upon Wi-Fi Hotspot connection.

Frequency Bands

Can set the frequency band to use for Wi-Fi Hotspot connection.

Connected Devices

The connected devices appear.

✎ You can connect up to 5 devices.

How to Use

You can see how to connect the Wi-Fi Hotspot.

- ✎ Use the Wi-Fi Hotspot after setting the password for privacy and security.
- ✎ Use of the Wi-Fi Hotspot may be restricted depending on the Wi-Fi network conditions.

Configuring the advanced system settings

You can configure the settings for notification and button actions.

- 1 On the All Menus screen, touch **Setup ► Advanced**.

The advanced settings screen appears.

- 2 Configure the settings required:

Return to Map: Set Time


You can set the system to automatically display the map screen after a specified period of time when switched to the Radio/Media mode screen while using the navigation.

- ✎ This function works while driving once a destination has been set.
- ✎ This feature is not available on the phone projection screen.



TUNE Knob Function

You can change the [TUNE/FILE] knob's function on the map.

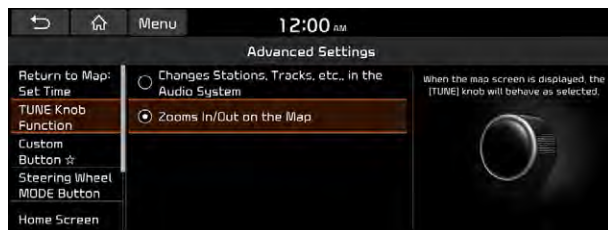

Changes Stations, Tracks, etc., in the Audio System

You can search music or adjust the radio frequency by using the [TUNE/FILE] knob on the map.

Zooms In/Out on the Map

You can zoom in or out the map by using the [TUNE/FILE] knob on the map.

Custom Button ☆


You can set the frequently used functions by pressing the custom button on the control panel. Set the frequently used functions as custom buttons to access them easily.



 The screen may differ depending on the vehicle model and specifications.

Steering Wheel MODE Button

You can select the media mode to run when the [MODE] button on the steering wheel is pressed.

 You can add **AM** or **Phone Projection** function on each **MODE** button to perform easily.



Home Screen

You can change the layout of the Home screen.



Edit Home Widgets

You can edit the types and arrangement of home widgets.

 For more information: ► see "Editing widgets on the Home screen."


Edit Home Icons


You can edit the arrangement of home icons.

 For more information: ► see "Editing icons on the Home screen."

Split Screen (if equipped)

You can specify the items to display on the Split Screen.

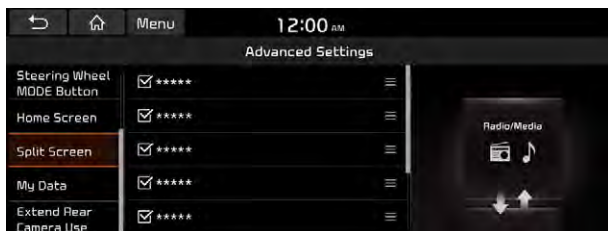

- ✎ The screen may differ depending on the vehicle model and specifications.
- ✎ This option is only available when the display supports Split Screen.
- ✎ On the screen list, touch  on the right and drag the item to reposition.

My Data

You can import location data from a USB device to the system, or export the data on the system to a USB device.

- ✎ When importing or exporting the location data, you can use only the USB device formatted in exFAT, FAT16/32, or NTFS.



Import Address Book from USB Device

You can import the location data on a USB device to the system.

- ✎ The previous location data on the system is to be deleted.
- ✎ While importing from a navigation system that uses a different coordinate system, the locations may appear differently.

Export Address Book to USB Device

You can export the location data on the system to a USB device.

- ✎ The location data on the USB device is deleted.

Extend Rear Camera Use (if equipped)

You can set to display the rear camera display even when you change the shift position other than "R" (Reverse) after reversing.

- ✎ When you shift to "P" (Park) or drive at a predetermined speed or faster, the rear view display disappears to display the previous screen.


Configuring the sound settings

You can change the sound settings such as speaker volume and sound effects.

- ✎ Available settings may differ depending on the vehicle model and specifications.
- ✎ Some functions may not be available depending on the infotainment system and amplifier specifications on the vehicle.

- 1 On the All Menus screen, touch **Setup ► Sound**.
The sound settings screen appears.
- 2 Configure the settings required:


Position

You can select a position where sound is more audible in the vehicle. By touching the desired point on the seat image or touching the arrow buttons, you can finely adjust the position. To concentrate the sound to the center of the vehicle, touch .



Volume

You can adjust the volume for each system function including phone projection.

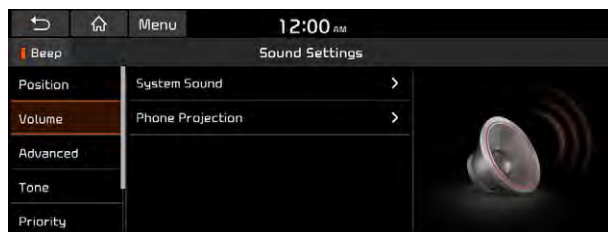


System Sound

You can adjust the volume for each system function and initialize all volume settings.

 To initialize all system sound settings, touch **Reset**.


Phone Projection


You can adjust the volume of the phone projection and initialize all volume settings.

 To initialize all system sound settings of the phone projection, touch **Reset**.

Advanced

You can change the system sound settings and apply various sound effects.

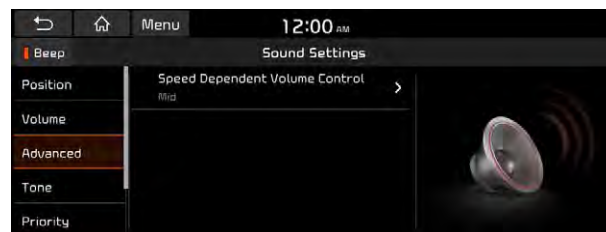

 Available sound effects may differ depending on the specifications of the amplifier.

Speed Dependent Volume Control

Automatically adjusts Audio volume according to vehicle speed.

Live Dynamic (if equipped)

Provides natural and vivid sound like real performance.

Bass Boost (if equipped)

Provides magnificent and dynamic sound by amplifying the bass.

Quantum Logic Surround (if equipped)

Provides the surround sound that can give spatial depth of field as on an actual stage.

Clari-Fi (if equipped)

Provides sound close to the original after recovering the sound lost during compression.

BOSE Centerpoint (if equipped)


Provides rich surround sound after converting the sound sources such as digital files and satellite radio to stereophonic sound.

BOSE Dynamic Speed Compensation (if equipped)

Provides a stable listening environment by adjusting the audio volume depending on the vehicle speed.

Tone

You can adjust the sound by adjusting the strengths (output levels) for each audio band: Bass, Midrange, and Treble. You can also initialize the output levels for all audio bands.

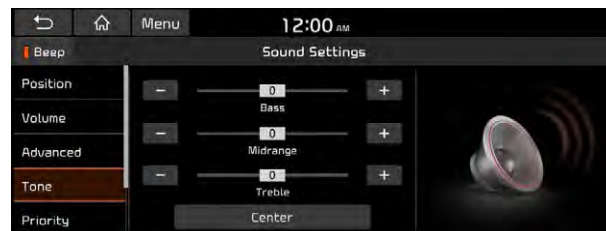

 To initialize the output levels for all audio bands, touch **Center**.

Priority

You can configure the settings so that a specific sound is more audible over other sounds.



Navigation Guidance

You can set to enable the navigation sound to be heard first when using both the navigation system and Radio/Media system.

Proximity Warning

Lowers all other audio volumes when the camera view is active.

Navigation Guidance During Calls

Even during a call, the navigation sound is heard.

Start-up Volume Limit

You can set to automatically decrease the audio volume to an adequate level when turning on the vehicle.

Navigation Volume

You can select a method to adjust the navigation volume.



Mute Navigation Guidance (if equipped)

Press the Mute button on the steering wheel when the navigation guidance is being output to set to mute the guidance volume for 10 seconds.

Use Map Screen Volume Buttons

You can adjust the navigation volume by using the volume control button on the map screen.

Use Map Screen Volume Buttons or Volume Knob

By using the volume control button on the map screen or using the Volume knob on the control panel, you can adjust the navigation volume.

Reset

You can initialize all the sound settings.



Turning on/off the screen touch sound

To turn on or off the touch sound on the screen, touch **Beep** at the top of the screen.

Configuring the voice recognition settings

You can change the settings for voice recognition.

- 1 On the All Menus screen, touch **Setup ► Voice Recognition**.

The voice recognition settings screen appears.

- 2 Configure the settings required:

Use Network (if equipped)

When UVO is activated, press the button in the vehicle to initiate network Navigation searches. Network searches can provide a greater variety of results, but rely on network signal strength. Audio samples are collected and stored anonymously for further quality improvements.



Guidance

You can set whether to hear the voice recognition guidance briefly or in detail. You can also turn off the voice guidance.



Configuring the navigation settings

You can configure the navigation settings for navigation operations, screen display, voice guidance, etc. You can also export or import the location data.

✎ For details on how to use navigation functions, see the "Navigation" chapter. ▶ See "Navigation."

1 On the All Menus screen, touch **Setup ▶ Navigation.**

The navigation settings screen appears.

2 Configure the settings required:

Display

You can specify the information to display on the navigation map screen.




✎ The screen may differ depending on the vehicle model and specifications.

Map

You can specify the items to display on the map.

- **Map Font Size:** You can set the size of the screen font on the navigation map.
- **Map Color:** You can set the navigation map background color.
- **Map Display:** You can specify the items to display on the map.
 - **Map View:** Set the navigation map display mode. To automatically rotate the map screen based on the driving direction, select **2D Heading Up**. To fix the top of the map screen to north, select **2D North Up**. If you select **3D Map**, the map screen is displayed in 3D mode and automatically rotates based on the driving direction.

- **Display Traffic:** Displays nearby traffic information on the map.
 - **3D Buildings:** Displays major buildings on the map in three dimensions.
 - **Auto-scale:** Automatically changes the scale of the map.
 - **POI Display:** You can specify the icon type to display nearby places on the map.
- ✎ Touch  on the right side of Gas/LPG Station to select display options for fuel prices.
- Gas and LPG stations on the Map screen will also show their fuel prices if they are lower than the set price.
 - Select **Display Fuel Price Info on Map** to view recommended fuel prices based on the prices offered in the area.
 - Fuel prices on the map may differ from actual ones.

Information

You can specify the information to display on the navigation map screen while driving.

- **Route Guide Line:** Used to display the route guide line in different colors depending on the traffic conditions. To display the route color with a fixed one, uncheck **Show Traffic Colors on Route** and select a color.
- **Vehicle Symbol:** You can specify the icon type to display your current location on the map.
- **Unit:** You can set the distance unit of the navigation map to **Kilometers (km)** or **Miles (mi)** (if equipped).
- **Show Vehicle Speed:** Displays the vehicle speed on the map.

- **Detailed Guidance View:** You can set to display detailed information on the Map screen, such as moving directions and lane change.
- **Speed Limits:** Sets whether or not to display the speed limits on the screen.

Map Auto-scale Settings

You can set the scales for each vehicle speed zone.

- ✎ For example, when you select "100 m" for the "21–50 km/h" zone and "200 m" for the "51–80 km/h" zone, the unit interval for the map scale on the navigation screen becomes 100 m when the vehicle speed is 50 km/h and 200 m when the vehicle speed is 51 km/h.

Return to Map: Set Time

You can set the system to automatically display the map screen after a specified period of time when switched to the Radio/Media mode screen while using the navigation. ► See "Return to Map: Set Time."

- ✎ This function works while driving once a destination has been set.
- ✎ This feature is not available on the phone projection screen.

Auto Re-center Map

You can set the system to automatically display the current position when the specified period of time elapses after changing to another position on the map.

Guidance

You can configure the navigation guidance settings.



✍ The screen may differ depending on the vehicle model and specifications.

Show Guidance Distance

You can configure settings for displaying the distance to the destination during guidance.

- **Interval Distance:** Displays the distance as the one between different zones.
- **Cumulative Distance:** Displays the distance as the one between the current position and target position.

Border Crossing Info.

You can set whether or not to display the border crossing information on the screen.

Show Route Overview While Stopped.

You can set to display the route overview from the start point to the destination when the vehicle is stationary.

Others

You can configure navigation options, e.g., turning on or off fuel prices, exporting or importing places from and to Address Book.



✍ The screen may differ depending on the vehicle model and specifications.

Previous Destinations Settings

You can set to automatically save the previous destination and display the previous destinations when the navigation system starts.

- **Save Previous Destinations:** The previous destination is automatically saved.
- **Show Previous Destinations after Navigation Start-up:** When the navigation system starts, the list of recent destinations appear on a pop-up window.

Fuel Price Information (if equipped)

When displaying gas stations or LPG charging stations on the map, the fuel prices below a specific range can be displayed.

- ✎ Select **Display Fuel Price Info on Map** to view recommended fuel prices based on the prices offered in the area.
- ✎ Fuel prices on the map may differ from actual ones.


User Data

You can import location data from a USB device to the system, or export the data on the system to a USB device.

- ✎ When importing or exporting the location data, you can use only the USB device formatted in exFAT, FAT16/32, or NTFS.
- **Import Address Book from USB Device:** You can import the location data on a USB device to the system.
 - ✎ The previous location data on the system is to be deleted.
 - ✎ While importing from a navigation system that uses a different coordinate system, the locations may appear differently.
- **Export Address Book to USB Device:** You can export the location data on the system to a USB device.
 - ✎ The location data on the USB device is deleted.

GPS Information

You can see the GPS satellite status and coordinates of the current position.

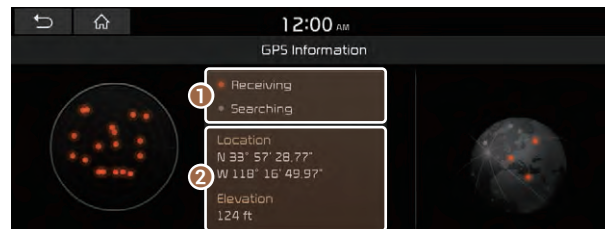

The following information appears:

- 1 Can see the reception status of the satellite signals.
 - **Receiving:** Satellite signals are being received and the current position is recognized.
 - **Searching:** The system is scanning the satellite signals.
- 2 Can see the current location.

Reset

You can initialize all the settings of the navigation system.

Configuring the UVO settings

You can subscribe to the UVO service or see the modem information.


- 1 On the All Menus screen, touch **Setup ► UVO**.

The UVO settings screen appears.

- 2 Configure the settings required:

Activate UVO

You can subscribe to the UVO service by using the UVO settings menu.

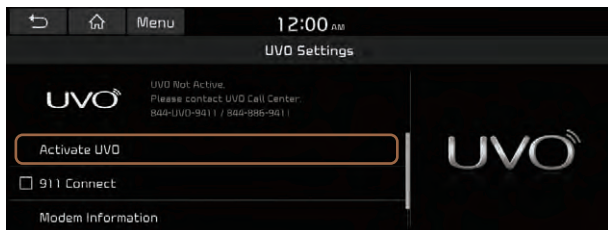

 For more information: ► see “Subscribing to the service.”

911 Connect


This feature provides you with immediate assistance when an accident occurs and an airbag is deployed.


- 1 On the All Menus screen, touch **Setup ► UVO**.

- 2 Touch **911 Connect** to activate it.




3 Read the terms of use and touch **Accept**.

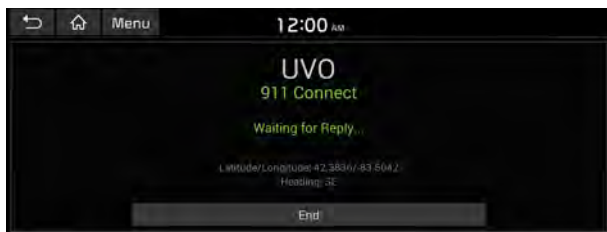

- ✎ The feature is activated and  appears at the top right of the screen.
- ✎ When an airbag is deployed, the system automatically makes a call to 911 and sends your location to the 911 operator.


Modem Information

You can check the modem information for use of the UVO service.

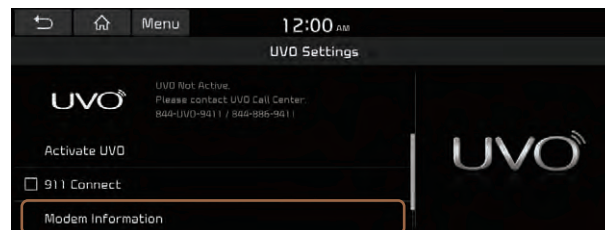

Modem Status

You can check the modem status for use of the UVO service.

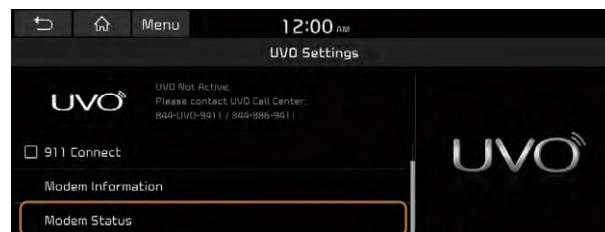

Configuring the user profile settings (if equipped)

You can additionally set profiles for each driver after First Run Setup.

1 On the All Menus screen, touch **Setup ► User Profile**.

2 Touch the user to change its profile.


The User Profile Settings screen appears.

✎ Touch **Change User** to switch to another user's profile.

✎ When you log in as guest, you cannot set the profile items additionally. To set a different profile, select another user.

Profile Settings

You can specify the details and operation environment for a registered user.

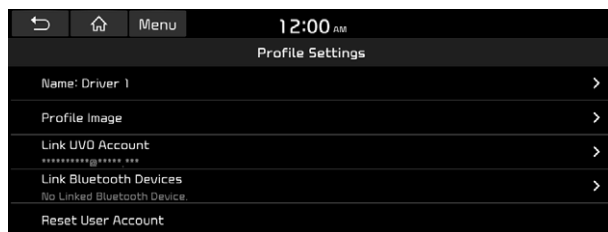

Name

You can specify the name of the user to display on the profile.

Profile Image

You can specify the image to display on the user profile.

Link UVO Account (if equipped)

You can use various services and convenient management features when linked to the registered UVO service.

✎ Subscribe to UVO to check the function. ► See “[Subscribing to the service.](#)”

Link Bluetooth Devices

You can connect any registered Bluetooth device.

► See “[Connecting a Bluetooth device.](#)”

Reset User Account

You can initialize all account settings.

Configuring the general system settings

You can configure general settings for date, time, language, and the like. You can also check information of the system.

1 On the All Menus screen, touch **Setup ► General**.

The general settings screen appears.

2 Configure the settings required:

Date/Time

You can set the system date and time automatically or manually. You can also set the time display mode.



GPS Time

After receiving the time from GPS, it sets the system date and time automatically.

✎ To manually set the date and time, uncheck **GPS Time**, touch the current date and time below **GPS Time**, and then set the date and time.

24 Hours

The system time is displayed in the 24-hour format.

✎ For example, when **24 Hours** is checked and the current time is 01:08 pm, the system screen displays the time as "13:08." When the checkbox is deselected, the time display changes to "01:08 PM."

Daylight Saving Time

Displays the system time in the format of Daylight Saving Time.

Language

You can set the system display language.



- ✎ Once the language has been changed, it takes a while to apply the new language to the system. The notification pop-up window appears as soon as the new language is applied to the system. When you wait a while or touch anywhere outside the pop-up window, the window automatically disappears.
- ✎ When you change the system language, it does not affect the display of other unique data such as MP3 music file name.
- ✎ Depending on the system language, the Bluetooth phone message view and voice recognition may not be supported.

Keyboard

You can change the keyboard type for each language to use when entering the text.



English Keyboard


You can select the keyboard type to use when entering the English text.

Default Keyboard

You can select the default keyboard type.

Units (if equipped)

You can specify the units to display on the system screen.

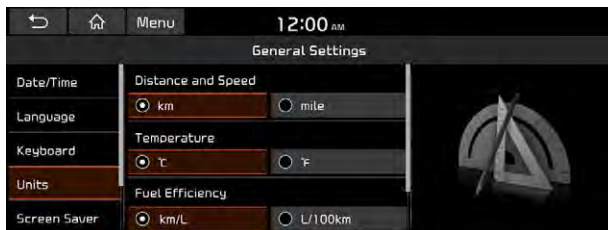

Distance and Speed

You can select the units for distance and vehicle speed to display on the screen.

Temperature

You can select the temperature unit to display on the screen.

Fuel Efficiency

You can select the unit for fuel economy to display on the screen.

Tire Pressure

You can select the unit for tire pressure to display on the screen.

Screen Saver

You can select the items to display on the screen saver in standby mode.



Digital Clock

Displays the digital clock on the system screen saver.

Analog Clock

Displays the analog clock on the system screen saver.

None

Displays nothing on the system screen saver.

SW Info/Update

You can see the versions of system components. You can also update the system to the latest version.


Perform any of the following methods:

- Setting in the **General** screen: On the All Menus screen, touch **Setup ► General ► SW Info/Update**.
- Setting in the **System Info** screen: On the All Menus screen, touch **Setup ► General ► System Info ► SW Info/Update**.

The SW Info/Update screen appears.



Type A

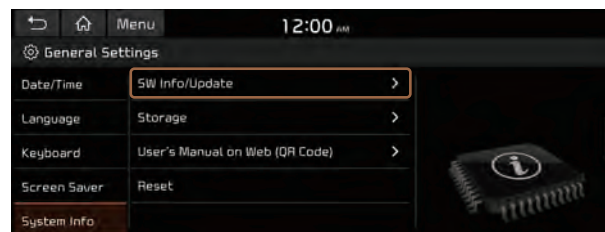


Type B

- ✎ The screen may differ depending on the vehicle model and specifications.
- ✎ For details on how to update the system software:
 - see "Updating the system software and map."

System Info

You can check the system storage space. You can also use your smartphone to access the online user's manual of the system, or initialize all system settings to default values.



 The screen may differ depending on the vehicle model and specifications.

Storage

You can check the storage space of the system memory where voice memos can be saved.

User's Manual on Web (QR Code)

You can access the online user's manual of the system by scanning the QR code with your smartphone.

Reset

You can initialize all system settings including general settings and navigation settings.



Caution

- When initialization is performed, all user data in the system including the location data is deleted.
- When phone projection is active, you cannot reset the system settings. To reset the settings, remove the USB cable from your system.

Configuring the display settings

You can change the system display settings such as display brightness.

1 On the All Menus screen, touch **Setup ► Display**.

The display settings screen appears.

2 Configure the settings required:

Mode

You can set the system to automatically adjust the display brightness depending on the ambient light intensity. You can also set the system to keep the display bright or dark all the time.



Automatic

The display brightness is automatically adjusted based on the surrounding environment.

Daylight

It can be activated when **Automatic** is turned off. It keeps the display always bright regardless of the surrounding environment.

Night

It can be activated when **Automatic** is turned off. It keeps the display always dark regardless of the surrounding environment.

Illumination

You can set the system to automatically adjust the display brightness depending on the cluster illumination. You can also set the level of display brightness to use while using the daytime or night mode.



Link to Cluster Illumination Control

The display brightness is automatically adjusted based on the cluster illumination.

Daylight

You can set the display brightness when **Daylight** is selected under **Mode**. Uncheck **Link to Cluster Illumination Control** and then set to the desired brightness.

Night

You can set the display brightness when **Night** is selected under **Mode**. Uncheck **Link to Cluster Illumination Control** and then set to the desired brightness.

Blue Light Filter

Enable blue light filtering to adjust the screen light to reduce the level of eye strain.



Use Blue Light Filter

Enable or disable blue light filtering.

Blue Light Filter Settings

Set to activate blue light filtering automatically based on the ambient light or pick the time range manually.

- **Automatic:** Enable blue light filtering based on the ambient light.
- **Scheduled Time:** Enable blue light filtering during the set time range.

Reset

You can initialize all display settings such as brightness.



Configuring the media settings

Set to receive a notification when the information changes during playback or to include sub-folders when playing a folder on repeat.

- 1 On the All Menus screen, touch **Setup ► Media**.

The media settings screen appears.

- 2 Configure the settings required:

Media Change Notifications

You can set to briefly display media information at the top of screen while playing the next item when you move from the media player screen to another.



Repeat Folder

Set to include sub-folders when playing a folder on repeat.



Updating the system software and map

You can update the navigation map and infotainment system.
Please visit your local dealership to update your system.

- ✍ Any changes made after the update file is created are not reflected in the map. As a result, certain roads, buildings, and speed limits on the map may not be up to date.
- ✍ Depending on the total data amount, an update may take several minutes.
- ✍ Do not turn off the system or remove the storage device while the update is in progress. When power supply is cut off or the storage device is removed from the system, it may damage the data or cause a system malfunction.

MEMO



10

Driver assistance



Driver Assistance

Driver Assistance (if equipped)

You can set to use various systems that assist the driver for safety.

- **Smart Cruise Control:** A driving convenience system that helps driving at the desired speed while maintaining a safe distance to the car in front of you.
- **Lane Following Assist:** A driving convenience system that helps following the lane.
- **Highway Driving Assist:** A driving convenience system that helps maintaining the center of the lane at an appropriate speed while keeping a safe distance to the car in front of you on a highway.
- **Navigation-based Smart Cruise Control:** A driving convenience system that helps driving at the appropriate speed on a highway using navigation.
- **Forward Collision-Avoidance Assist:** A driving safety system that helps prevent collision with obstacles in front of the car by providing warning and assist.
- **Lane Keeping Assist:** A driving safety system that helps prevent a car from deviating from the lane by providing warning and assist.
- **Blind-Spot View Monitor:** A driving safety system that shows the blind-spot area which cannot be seen on the side mirrors.
- **Safe Exit Assist:** A driving safety system that assists safe exit when there is a risk of collision while exiting the car.

- **Blind-Spot Collision-Avoidance Assist:** A driving safety system that helps prevent collision with obstacles in the blindspot of the car by providing warning and assist.
- **Remote Smart Parking Assist:** A parking convenience system that helps parking in narrow parking spaces.

1 On the All Menus screen, touch **Setup ► Vehicle ► Driver Assistance**.



2 Configure the settings required:

Warning

- Be sure to always check the road conditions while driving. The driving assist system helps you drive safely and conveniently. Relying solely on the driving assist system may cause violation of traffic rules and regulations, resulting in an accident.
- Be sure to control the vehicle by your judgment and keep traffic regulations for safety. When the driving assist system is active, drive the vehicle with keeping eyes forward and checking the surroundings.
- Not all driving assist system warnings or sub-features are necessary when they are active, and they do not replace the driver discretion under any circumstances. Stay focused on the road while driving.

Caution


Be sure to always check the vehicle surroundings while driving. The equipped cameras and sensors may not operate under all driving conditions.

SCC Reaction (if equipped)

Adjusts the responsiveness of Smart Cruise Control to the acceleration of a leading vehicle.

Driving Assist (if equipped)

You can set to use the safe driving options such as lane keeping assistance and speed limit warning.


 The driving assist system operates based on the information from the navigation system so you must use the system only when the navigation system operates normally.

Smart Cruise Control (if equipped)

According to the speed of a leading vehicle, it assists to keep the safety distance at a set speed.

Highway Driving Assist (if equipped)

When you are driving on an federal highway, the system helps you keep the correct lane according to the set speed and inter-vehicle distance.

 The highway driving assist system operates only on a highway. When the vehicle exits from the highway, the system is turned off automatically.

Highway Auto Speed Zone Slowdown (if equipped)

The driving speed automatically decreases in the expressway speed zone.

- ✍ The highway auto speed zone slowdown system operates only on a highway. When the vehicle exits from the highway, the system is turned off automatically.
- ✍ It operates considering the speed cameras located on the selected route.

Highway Auto Curve Slowdown (if equipped)

The driving speed automatically decreases in the highway curve zone.

- ✍ It operates based on the curve zones on the route. When the destination is not set, it operates based on the curve zones on the expected path.

Warning Timing (if equipped)

If necessary, set the time to output alerts when any alarm is generated by driver attention warning and forward safety system.

Warning Volume (if equipped)

You can adjust the volume of the alert sound upon danger of forward or blind spot collision

Driver Attention Warning (if equipped)

If necessary, set to output alerts to prevent accidents by analyzing the driving patterns.

Leading Vehicle Departure Alert (if equipped)

When the leading vehicle departs, the notification is provided.



Warning

Be sure to always check the road conditions ahead or surroundings before departure. An accident caused by distracted driving can be prevented.

Safety Notice Call (if equipped)

Used to set to make a call for checking your safety to Blue Link Center when suspected that vehicle movement is dangerous.

Inattentive Driving Warning (if equipped)

Set the system to remind when it detects a distracted driving pattern and suggest to take rest if needed.

Forward Safety (if equipped)

You can set to help detect and monitor the vehicle ahead.

Active Assist (if equipped)

Helps mitigate a collision by generating a warning sound and may provide braking assist. Ref. to owners' manual for details.



Warning

This system is only a supplemental system and it is not intended to, nor does it replace the need for extreme care and attention of the driver. The sensing range and objects detectable by the sensors are limited. Pay attention to the road conditions at all times.

Warning Only (if equipped)

Produces a warning alarm in accordance with the collision risk level.

Off (if equipped)

Turns off the forward safety function.

Lane Safety (if equipped)

Set to generate warning or provide assist to help the vehicle stay in its lane.

Lane Keeping Assist (if equipped)

Helps prevent lane deviation by generating warning sound and help the vehicle between stay in its lane.



Warning

The Lane Keeping Assist (LKA) system is not a substitute for safe driving practices, but a convenience function only. It is the responsibility of the driver to always be aware of the surroundings and steer the vehicle.



Caution

When the lanes are not recognized well by front cameras, always check the surroundings because the lane keeping assist system may not work properly.

Lane Departure Warning (if equipped)

When a danger of lane deviation is detected, the warning sound is generated.

Off (if equipped)

Turns off the lane safety function.

Blind-Spot Safety (if equipped)

You can set to generate warning sound and may provide active assist if there is a possible collision with an approaching vehicle while changing lanes.

Blind-Spot View (if equipped)

Displays the blind spot view on the instrument cluster when the turn signal lamp is blinking.

Safe Exit Assist (if equipped)

Help prevent the passengers from opening a door by warning the passengers when an approaching vehicle from the rear area is detected after the vehicle stops.



Caution

- The Safe Exit Assist (SEA) system may not operate normally when a vehicle is coming rapidly two lanes over from your vehicle or a vehicle is approaching at a fast speed from the rear in the lane next to your vehicle.
- The Safe Exit Assist (SEA) system may not operate normally if there is any vehicle or obstacle at the rear area of your vehicle.
- The Safe Exit Assist (SEA) system may be activated later than normal or may not operate normally if a vehicle is approaching fast from the rear of your vehicle.
- The Safe Exit Assist system may not operate when the blind spot detection system malfunctions as follows:
 - The blind spot collision warning message appears on the instrument cluster.
 - The sensors of the blind spot detection system are contaminated or covered.
 - The blind spot detection system does not generate warning or generates a wrong alert.

Active Assist (if equipped)

Helps prevent collision by generating warning sound and helping you adjust the vehicle speed if any suspected blind spot collision danger.



Warning

Always be aware of road conditions while driving and be alert for unexpected situations even though the Blind-Spot Collision Warning system and Blind-Spot Collision Avoidance Assist system are operating.

Warning Only (if equipped)

When a danger of blind spot collision is detected, the warning sound is generated.

Off (if equipped)

Turns off the blind spot safety function.

Parking Safety (if equipped)

You can set to generate warning sound and may provide assist when an obstacle is detected while parking.

Surround View Monitor Auto On (if equipped)

Display the feed from the surround view monitor automatically when the parking distance warning is on.

Parking Distance Warning Auto On (if equipped)

Automatically turns on the alarming function depending on the distance to obstacles upon parking or driving in low speeds.

Rear Cross-Traffic Safety (if equipped)

Assists to generate warning sound and may provide assist if a potential collision is detected when the vehicle is in reverse.

Active Assist (if equipped)

Helps prevent collision by generating warning sound and may provide braking assist if a potential collision is detected while the vehicle reversing.

Warning Only (if equipped)

The warning sound is generated if a danger of collision is detected when reversing the vehicle.

Off (if equipped)

Turns off the parking safety function.



Warning

- Even though the vehicle is equipped the parking safety system, be sure to check any obstacles in the rear while driving. Relying solely on the driving assist system may cause an accident. Accordingly, be sure to control the vehicle by your judgment.
- When the sensors cannot detect any obstacles due to the detection limit, it may cause an accident. Be sure to always check the surroundings while parking.

Parking Convenience (if equipped)

Remote Smart Parking Assist (if equipped)

Remotely assists for parking or departing by using a smart key.

11

Appendix



Solutions

System status indicator icons

FAQ

Product specifications

Important information

Index

Trademarks

Open Source Information

Solutions


Before reporting a malfunctioning system, refer to the following table and see if you can identify and fix the problem. If the problem persists or you are unable to locate your specific need, contact your place of purchase or dealer.

Sound and display

Symptom	Possible cause	Solution
A blank screen appears and sound is not audible.	The system is turned off.	<ul style="list-style-type: none">• Check that the start switch is in “ACC” or “ON.”• Press the Power button on the control panel to turn on the system.
	Sound volume is too low.	Turn the Volume knob on the control panel to adjust the volume.
	Sound is muted.	Press the Mute button on the steering wheel to unmute.
Sound is audible from only one side of the speakers.	Sound is imbalanced.	On the All Menus screen, touch Setup ► Sound ► Position and adjust the sound outputs for the left and right speakers. ► See “Position.”
The sound is cut off or noise is heard.	Vibration occurs in the system.	When the system vibrates, the sound may be cut off or noise may occur. This is not a system failure. The system is restored as soon as the vibration stops.

Symptom	Possible cause	Solution
The image quality is poor.	Screen adjustment is required.	On the All Menus screen, touch Setup ► Display ► Illumination , and then adjust the brightness. ► See "Illumination."
	Vibration occurs in the system.	The images may get distorted when vibration occurs in the system. This is not a system failure. The system is restored as soon as the vibration stops.
	The display is aged or the system performance is degraded.	If the problem persists, contact your place of purchase or dealer.
Small red, blue, and green dots are shown on the screen.		LCD has very high-density pixels. For this reason, there may be dead pixels (that are always off) or lit pixels (that are always on) within 0.01 percent of the total pixels.

USB playback

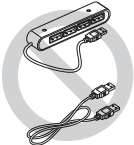Symptom	Possible cause	Solution
Files in a USB device cannot be played.	There are no compatible files for playback	Copy the files that can be played by the system to the USB device and connect the device again. ► See "USB mode."
	Poor connection is found.	Remove the USB device from the USB port and then reconnect it properly.
	The USB device is dirty.	Remove foreign materials from the surface that contacts the USB device and USB port.
	A USB hub or extension cable is used.	Connect the USB device directly to the USB port on the vehicle.
		
		The USB device is non-standard. Use a USB device that is compatible with the system. ► See "USB mode."
		The USB device is damaged. Use your computer to format the USB device and then connect the device again. Format the device in FAT16/32 format.

Bluetooth connection

Symptom	Possible cause	Solution
The system is not detected by a Bluetooth device.	Registration mode needs to be run.	On the All Menus screen, touch Setup ► Device Connections ► Bluetooth ► Bluetooth Connections ► Add New to run the registration mode and perform search again from the Bluetooth device. ► See "Connecting a Bluetooth device."
The Bluetooth device is not connected.	The Bluetooth function should be activated.	Activate the Bluetooth function on the Bluetooth device to connect.
	Any error occurs while using the Bluetooth function.	<ul style="list-style-type: none">• Turn the Bluetooth function OFF / ON on the Bluetooth device and then connect the device again.• Turn the Bluetooth device off and on and then connect the device again.• Remove the battery from the Bluetooth device and attach it back, turn on the device, and then connect the device again.• Delete the system and Bluetooth device from the registration lists respectively, and then connect the device again.

Phone projection

Symptom	Possible cause	Solution
The phone projection function is not performed when a smartphone is connected using a USB cable.	Phone projection is not supported.	<p>Visit the website to check whether your smartphone supports the phone projection.</p> <ul style="list-style-type: none"> Android Auto: https://support.google.com/androidauto Apple CarPlay: http://www.apple.com/ios/carplay
	The function is inactive.	<ul style="list-style-type: none"> On the All Menus screen, touch Setup ► Device Connections, select the function to use, and then turn on the phone projection option. Make sure that the phone projection is not disabled in the application settings or block-out settings on your smartphone.
	Smartphone is encountered with poor operation or malfunction.	<ul style="list-style-type: none"> Check that the smartphone battery level is not too low. Recognition may not work properly when the battery level is too low. The phone projection may not work properly when the signal strength is weak. When the smartphone is locked, first unlock it. Initialize the smartphone and connect the device again.
A black screen appears when the phone projection is activated or in use.	The smartphone malfunctions.	<ul style="list-style-type: none"> Remove the USB cable from the smartphone and connect the device again. Initialize the smartphone and connect the device again.

System operation

Symptom	Possible cause	Solution
The previous media mode does not appear when the system is turned off and on.	It is encountered with poor media connection or playback error.	When the media source is not connected or played normally, the previous mode appears. Connect the media source again or play it again.
The system slows down or does not operate at all.	An internal error occurs in the system.	<ul style="list-style-type: none">• Restart the system by pressing the reset button with a sharp object such as pen or clip.• If the problem persists, contact your place of purchase or dealer.
The system is not turned on.	Fuse-related issues	<ul style="list-style-type: none">• Visit an auto service shop and replace the fuse with a new one of appropriate capacity.• If the problem persists, contact your place of purchase or dealer.

Navigation system operation

Symptom	Possible cause	Solution
The destination is not searched.	Outdated map data	To update your system, visit your local dealership.
Route guidance of the navigation system does not match the actual road conditions.	Outdated map data	To update your system, visit your local dealership.
	There have been changes in the road after a map update.	Route guidance of the navigation system may not match the actual road conditions even after the map is updated to the latest version because the update depends on the creation date. Be sure to drive according to actual road conditions and regulations.
Guidance is made by bypassing the route or the speed camera alerts are not followed.	The update for the system and map data is required.	To update your system, visit your local dealership.
The real-time traffic information is not received.	Poor signal reception	<ul style="list-style-type: none">• Reception of traffic information may not be made smoothly in mountain and island areas. Check the reception status again in a region with strong signals.• If the problem persists, contact your place of purchase or dealer.

System status indicator icons

You can see the system status by checking the status indicator icons at the top right of the system screen.

Different status indicator icons appear when each function is performed. The meanings of the icons are as follows:



Mute/memo recording



Nav	Navigation sound muted
Audio	Radio/Media sound muted
Nav Audio	All sound outputs muted
Recording	Recording a voice memo

Bluetooth/call



	Connecting a phone via Bluetooth
	Connecting an audio device via Bluetooth
	Connecting a phone and an audio device via Bluetooth
	Making a call via a Bluetooth phone
	Bluetooth phone's microphone off
	Downloading the contact and list of recent calls from the connected Bluetooth phone

Data (if equipped)



	Connected to a Wi-Fi network
--	------------------------------

UVO



	Talking with a UVO phone
	UVO phone's microphone off
	Vehicle location sharing
	Sending the vehicle location
	Receiving the vehicle location
	Sending/receiving the vehicle location
	UVO network's signal strength

System update



	Scheduling the update
	Updating

Available functions in the rear seat (if equipped)




	Rear-seat remote control locked
	Rear-seat sleep mode On
	Front-seat driver is having a conversation with a rear-seat occupant

Wireless charging



	Wireless charging in progress
	Wireless charging complete
	Wireless charging failure

 Some icons may not appear depending on the vehicle model and specifications.

FAQ

Navigation

Q How can I update the map?

A You can download the latest map data to a USB device and use the device to update the map. ► See “Updating the system software and map.”

Q Guidance is made by bypassing the route or the speed camera alerts are late.

A Select another route after setting the route options. On the map screen, touch **Menu ► Route ► Route Options** to change the settings and resume navigation. ► See “Changing the route search criteria.”

When the system is not updated, update the software and map and then perform search again. ► See “Updating the system software and map.”

Bluetooth

Q Which functions can I use via Bluetooth?

A You can use the hands-free call function with a mobile phone connected. You can also play music after connecting an audio device such as MP3 player or mobile phone. ► See “Making a call via Bluetooth.”, “Listening to music via Bluetooth.”


Q How can I register a Bluetooth device?

A On the All Menus screen, touch **Setup ► Device Connections ► Bluetooth ► Bluetooth Connections ► Add New**. From the Bluetooth device to be connected, search for the vehicle system and register it. Use the Bluetooth device to enter or approve the authentication number displayed on the system. Then the device is added to the list of Bluetooth devices in the system and automatically connected to the system. ► See “Connecting a Bluetooth device.”

Q I bought a new mobile phone and want to replace my old phone with the new one to connect the system. How can I register the new phone to the system?

A An additional device can be registered in the same way as in registration of a new device. You can register up to 6 devices in the list of Bluetooth devices. To delete a previously registered device, touch **Delete Devices** from the list of Bluetooth devices, select the device to delete, and then touch **Delete**. ► See "Deleting a registered device."

Q How can I access the list of contacts while using a Bluetooth phone?

A Approve access to the contacts when connecting your mobile phone to the system via Bluetooth. The list of contacts on the phone is downloaded to the system. To see the downloaded list of contacts, press the Call button on the steering wheel and touch  on the call screen. You can search for a contact and make a call to the contact, or add the contact to the favorites. ► See "Dialing from the contacts."

Broadcast reception

Q I turned on the radio while driving but I heard no sound but noise.

A Depending on the location, obstacles may cause reception to deteriorate.

Radio reception rate may also drop when an on-glass antenna is mounted on the rear window and the window is tinted with metallic window films.

Self-inspection method upon failure

Q The system does not operate properly. What shall I do?

A Inspect the system after referring to Troubleshooting Guide. ► See "Solutions."

When the system failure persists after inspection, press and hold the Reset button to reset the system.

If the problem persists, contact your place of purchase or dealer.

Product specifications

Media player

USB mode

Music files

Item	Specifications
File format	MPEG-1/2 Layer3, OGG (Vorbis), FLAC, WMA (Standard/Professional), WAV
Bit-rate and sampling frequency	MP3 8–320 kbps (CBR/VBR), up to 48 kHz (ID3 tag version: Ver. 1.0, Ver. 1.1, Ver. 2.2, Ver. 2.3, Ver. 2.4)
	OGG Q1 to Q10, up to 48 kHz
	FLAC 8/16/24-bit, up to 48 kHz
	WMA Standard (0x161): up to L3 Profile, up to 385 kbps, up to 48 kHz Professional (0x162): up to M0b, up to 192 kbps, up to 48 kHz
	WAV 8/16 to bit, up to 48 kHz

Item	Specifications
Specification details	<p>Max. number of directory layers: 20 layers</p> <p>Max. folder/file name length: 255 Bytes</p> <p>Valid characters that can be used in a folder/file name: 2,350 Alphanumeric characters/4,888 Chinese characters</p> <p>Max. number of folders: 2,000 (including the root)</p> <p>Max. number of files: 8,000</p>

- ✎ The following files are not played.
 - Modified files (format-changed files)
 - Variant files (e.g. MP3 files encoded by WMA audio codec)
 - DRM (Digital Rights Management)-protected files
 - Files with no index
- ✎ Sound quality is not guaranteed in case of music files that use the bit-rate exceeding 192 kbps.
- ✎ With the files that do not use the fixed bit rate, some functions may not work properly or the playback time may not appear accurately.
- ✎ When a trouble occurs while playing or you want to play an incompatible format file, use the latest encoder software to change the format before using the file.

■ USB storage devices

Item	Specifications
Byte/Sector	64 KB or less
Format system	FAT16/32 (recommended), exFAT, NTFS

- ✎ With the USB storage devices that are not equipped with a plug-type connector (metal cover type), proper operation is not guaranteed.
- USB storage devices with a plastic plug may not be recognized.
 - USB memory cards (e.g. CF cards, SD cards) may not be recognized.
- ✎ Problems that are caused by using USB storage devices (not specified in the following list), are not covered by the warranty.

Product name	Manufacturer
XTICK	LG
BMK	BMK Technology
SKY-DRV	Sky Digital
TRANSCEND JetFlash	TranScend
Sandisk Cruzer	SanDisk
Micro ZyRUS	ZyRUS
NEXTIK	DIGI Works

- ✎ USB hard drives may not be recognized.
- ✎ When using a USB mass storage device divided into logical drives, only the files saved in the first drive can be played.
- ✎ When a USB storage device has some applications, media files may not be played.

Common specifications

Item	Specifications
Power supply	DC 14.4 V
Operating voltage	DC 9-16 V
Dark current	Below 1 mA in average within 45 days
Operating temperature range	-20 to +70 °C
Storage temperature range	-40 to +85 °C
Electric current consumption	2.5 A

Radio

Item	Specifications
Available channels	FM: 87.5–107.9 MHz (step: 200 kHz) AM: 530–1710 kHz (step: 10 kHz)
Sensitivity	FM: Within 10 dBuV AM: Within 35 dBuEMF
Distortion factor	Within 2 %

Bluetooth

Item	Specifications
Frequency range	2400-2483.5 MHz
Supported Bluetooth version	4.1
Supported profiles	Hands-free (1.7), A2DP (1.3), AVRCP (1.6), PBAP (1.1), MAP (1.2)
Bluetooth Power Class 2	-6 to 4 dBm
Antenna power output	2.5 mW (max.)
Number of channels	79

Wi-Fi (if equipped)

Item	Specifications
Frequency	2401 to 2473 MHz, 5735 to 5815 MHz
Specification	IEEE802.11a/b/g/n/ac
Supported bandwidth	20/40/80 MHz
Operating temperature	-20 to +70 °C (-4 to +158 °F)
Maximum WLAN output power	<ul style="list-style-type: none">• 2.4 GHz: 10 dBm• 5 GHz: 10 dBm

LTE RF

Item	Specifications	
LTE	Reception	Frequency: 1930 MHz to 1990 MHz(B2), 2110 MHz to 2155 MHz(B4), 869 MHz to 894 MHz(B5), 746 MHz to 756 MHz(B13) Sensitivity: -94.3 dBm under@10 M(B2,5), -96.3 dBm under@10 M(B4), -93.3 dBm under@10 M(B13) (Throughput ≥95 %)
	Transmission	Frequency: 1850 MHz to 1910 MHz(B2), 1710 MHz to 1755 MHz(B4), 824 MHz to 849 MHz(B5), 777 MHz to 787 MHz(B13) Maximum RF output power: Power Class3(B4, B13), 20.3 dBm to 25.7 dBm (conducted)

Item	Specifications	
CDMA	Reception	Frequency: 869 MHz to 894 MHz(BC0), 1930 MHz to 1990 MHz(BC1) Sensitivity: -104 dBm under(FER = 0.5 % under)
	Transmission	Frequency: 824 MHz to 849 MHz(BC0), 1850 MHz to 1910 MHz(BC1) Maximum RF output power: Power Class3(BC0), Power Class2(BC1), 23.01 dBm to 30 dBm(conducted)

Important information

Before using your system, read and follow all instructions and safety information provided in this user's guide ("User's Manual"). Not following precautions found in this guide can lead to an accident or other serious consequences.

Keep this guide in your vehicle

When kept in the vehicle, this guide will be a ready reference for you and other users unfamiliar with the system. Ensure that before using the system for the first time, all persons have access to this guide and read its instructions and safety information carefully.

Warning

Operating certain parts of this system while driving can distract your attention away from the road, and possibly cause an accident or other serious consequences. Do not change system settings or enter data non-verbally (using your hands) while driving. Stop the vehicle in a safe and legal manner before attempting these operations. This is important since setting up or changing some functions as you drive may distract your attention away from the road and removing your hands from the steering wheel may cause you to lose control of the vehicle.

General operation

Voice command control

Features within the system may be executed using only voice commands. Using voice commands while driving allows you to operate the system without removing your hands from the steering wheel.

Prolonged views of screen

Do not access any function requiring a prolonged view of the screen while you are driving. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Even short views of the screen may be hazardous if your attention has been diverted away from your driving.

Volume setting

Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.

Navigation features

Navigation features included in the system are intended to provide detailed instructions to get you to a desired destination. Ensure that all persons using this system carefully read and follow all instructions on safety information.

Distraction hazard

Some navigation features may require manual (non-verbal) setup. Attempting to perform such setup or inputting data while driving can seriously distract your attention and could cause an accident. Stop the vehicle in a safe and legal manner before attempting these operations.

Let your judgment prevail

Any navigation features are provided only as an aid. Make your driving decisions based on your observations of local conditions and existing traffic regulations. Any such feature is not a substitute for your personal judgment. Any route suggestions made by this system should never replace any local traffic regulations or your personal judgment or knowledge of safe driving practices.

Route safety

Do not follow the route suggestions if doing so would result in an unsafe or illegal maneuver, if you would be placed in an unsafe situation, or if you would be directed into an area that you consider unsafe. The driver is ultimately responsible for the safe operation of the vehicle and must evaluate whether it is safe to follow the suggested directions.

Potential map inaccuracy

Maps used by this system may be inaccurate because of changes in roads, traffic controls or driving conditions. Always use good judgment and common sense when following the suggested routes.

Emergency services

Do not rely on any navigation features included in the system to direct you to emergency services. Ask local authorities or an emergency services operator for these locations. Not all emergency services such as police, fire stations, hospitals and clinics are contained in the map database for navigation features.

Use of speech recognition functions

Speech recognition software is inherently a statistical process which is subject to errors. It is your responsibility to monitor any speech recognition functions included in the system and address any errors.

Index

A

Advanced system settings 9-18

Android devices

Android Auto 2-4, 2-10

Apple devices

Apple CarPlay 2-6, 2-12

B

Battery warning 1-6

Bluetooth

Bluetooth phone

Answering a call 6-15

Call 6-7

Contacts list 6-11

Dial pad 6-13

Favorites settings 6-9

Options during a call 6-16

Recent calls list 6-7

Switching to another call 6-17

Text message 6-18

Specifications 11-16

Bluetooth connection

Adding a device 6-3

Deleting a device 6-6

Device connection 6-4

Disconnecting a device 6-6

C

Charge Management 2-37

Climate

Climate control system 2-18

Component Names and Functions

Control panel

Custom button 1-2

MAP button 1-2

MEDIA button 1-2

NAV button 1-2

POWER button/VOLUME knob 1-2

RADIO button 1-2

SEEK/TRACK button 1-2

SETUP button 1-2

System Reset button 1-3

TUNE knob/FILE knob/ENTER
button 1-3

Steering wheel remote control

Call button 1-4

End Call button 1-4

MODE button 1-3

Move button 1-4

Voice Recognition button 1-3

Volume lever/Mute button 1-3

Contacts list 6-11

Control panel 1-2

D

Date and time settings 9-35

Deleting a location 5-26

Destination search 5-3

Driving assist display 2-14

E

- ECO Driving 2-40
- Editing a location 5-26
- Editing a route 5-18
- Electric Vehicle 2-44
 - Charging management features 2-48
 - Battery level 2-51
 - Charge and climate controls 2-49
 - Charging current 2-52
 - Location-based charging 2-51
 - Drivable range 2-45
 - Nearby charging stations 2-46
 - Eco-driving information 2-52
 - Environmental contribution information 2-53
 - EV economy history 2-53
 - Electric Vehicle screen 2-44
 - Energy information 2-47
 - Energy information screen 2-47
 - EV settings 2-54
 - EV Route 2-54
 - Warning 2-54
 - Winter Mode 2-54
- Energy Flow 2-30, 2-42
- Energy Information 2-36
- EV charging stations 5-28
- EV Range 2-34

F

- FAQ 11-11
 - Bluetooth 11-11
 - Broadcast reception 11-12
 - Navigation 11-11
 - Self-inspection method upon failure 11-13
- Finding a route easily 5-3
 - Destination search 5-3
- Finding the route
 - Adding a waypoint 5-18
 - Address search 5-10
 - Detour 5-20
 - Displaying POIs on the map 5-16
 - Frequently visited places 5-24
 - Gas stations 5-27
 - Location registration
 - Deleting a POI 5-26
 - Editing a POI 5-26
 - Registration after search 5-22
 - Map 5-6
 - Map update 9-43
 - Previous Destinations 5-12
 - Saving the current position 5-23
 - Searching for POIs 5-14
 - Volume adjustment 5-8
- Fuel Economy 2-29

H

- HD Radio Data 2-24
- HD Radio™ 3-7
- Home screen 1-10
- Hybrid menu 2-28

K

- Keyboard settings 9-37

L

- Language settings 9-36
- Listening to music
 - Bluetooth audio 4-7
- Location registration 5-22

M

- Map 5-6
 - POI display 5-16
- Map update 9-43
- Media device connection 4-2
- Media player
 - Bluetooth audio 4-8
 - USB music 4-2
- Messages 6-18
- Microphone 7-2
- Multi-page Home screen 1-10

N

- Navigation 5-2, 5-10
- Navigation settings 9-28
- Notifications 2-27

P

- Phone 6-7
- Phone projection
 - Android Auto 2-4, 2-10
 - Apple CarPlay 2-6, 2-12
- Plug-in Hybrid menu 2-33
- Previous Destinations 5-12
- Product specifications
 - Bluetooth 11-16
 - Common specifications 11-15
 - LTE RF 11-17
 - Media player 11-13
 - Radio 11-15
- Proximity Warning 2-15, 9-25

R

- Radio
 - Changing the channel 3-4
 - Changing the radio mode 3-4
 - Deleting a channel 3-6
 - Registering a channel 3-5
 - Scanning channels 3-5
- Rear view display 2-14
- Recent calls list 6-7
- Reset
 - Screen settings 9-42
 - Sound settings 9-26
 - System settings 9-40

S

- Save searched place 5-22
- Saving frequently visited places 5-24
- Saving the current position 5-24
- Screen saver settings 9-38
- Screen settings 9-40
- Screen touch sound settings 9-26

Settings

- Advanced settings 9-18
- Date and time 9-35
- Device connection 9-15
- Keyboard 9-37
- Screen saver settings 9-38
- Screen touch sound 9-26
- System display settings 9-40
- System Info 9-39
- System language 9-36
- System Sound 9-23
- User profile settings 9-34
- UVO settings 9-32
- Vehicle settings 9-2
- Voice recognition settings 9-26

SiriusXM™ 3-8

- Changing to SiriusXM mode 3-8
- Featured Favorites channels 3-11
- Searching for channels 3-10
- Seeing the program schedule 3-11
- Selecting channels 3-10

Sound Mood Lamp 2-22

Sound settings 9-22

Sounds of Nature 2-23

Split screen 1-12

Steering wheel remote control 1-3

Surround view monitor

- Door opening/mirror folding alert 2-17
- Rear view video 2-17
- Screen settings 2-18
- Screen view 2-16

System Info 9-39

System status indicator icons 11-9

T

Troubleshooting 11-2

- Bluetooth connection 11-5
- Navigation operation 11-8
- Phone projection 11-6
- Sound and display 11-2
- System operation 11-7
- USB playback 11-4

TUNE Knob Function 9-19

Turning the system on or off 1-4

U

Update 9-43

USB file specifications 11-13

USB music 4-2

USB port 4-2

USB storage device specifications 11-14

Using the Driver talk mode in the rear seat 2-20

Using the Quiet mode in the rear seat 2-21

Using the rear-seat climate control system 2-19

Using the sound mood lamp 2-22

Using the touch screen 1-6

UVO

Service 8-2

UVO menu

- Diagnosing the vehicle 8-7
- Driving Information 2-27
- My POIs 8-6
- Roadside Assistance 8-5
- Settings 8-9, 9-32
- Virtual Assistant 8-8
- Voice Local Search 8-9

V

Vehicle settings 9-2

Voice memo 7-19

Voice recognition

- Help 7-4

- Microphone 7-2

- Navigation commands 7-7

- Other commands 7-10

- POI name 7-11

- Radio commands 7-10

- Using the voice recognition 7-2

- Volume setting 7-4

Voice recognition settings 9-26

Trademarks

- **Bluetooth® Wireless Technology**

A compatible Bluetooth® Wireless Technology-enabled cell phone is required to use Bluetooth® Wireless Technology. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license. Other trademarks and trade names are those of their respective owners. A Bluetooth® enabled cell phone is required to use Bluetooth® Wireless Technology. Bluetooth® Wireless Technology phone compatibility can be checked by visiting <https://www.kia.com>.



- The Wi-Fi CERTIFIED™ Logo is a certifiemark of Wi-Fi Alliance.
- Google, Android, Android Auto, and Google Play are registered trademarks of Google LLC. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.



- Apple®, Apple CarPlay™, iPad®, iPad mini™, iPhone®, iPod®, iPod classic®, iPod nano®, iPod touch®, iTunes®, and Siri® are trademarks of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- HD Radio™ Technology is manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. For patents, see <http://patents.dts.com/>. HD Radio and the HD, HD Radio™, and "ARC" logos are registered trademarks or trademarks of iBiquity Digital Corporation in the United States and/ or other countries.
- Sirius, XM, SiriusXM and all related marks and logos are trademarks of Sirius XM Radio Inc.
- Other trademarks and trade names are those of their respective owners.



Open Source Information

This system contains open source software.

To download the open source codes installed on this product developed under GPL, LGPL, Apache, and other open source licenses, please visit <http://en.mobis.co.kr/opensource/list.do>. All notified license content, including the source code, is available for download.

If you request the open source code of a software mounted on this product by sending an email to MOBIS_OSSrequest@mobis.co.kr within 3 years of purchasing this product, you will receive it on a CD-ROM or another storage media at a minimal cost, such as the costs of the medium and delivery.

FCC Notices

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum 20 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter unless authorized to do so by the FCC.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.