TELESIN

Travel Phone Holder

旅行手机支架

P1-HSS-01

Instruction Manual 使用说明书



iPhone 用户使用蓝牙遥控器前重要提示。 Important notices before iPhone users use Bluetooth remote controls.





CHS

iOS用户使用蓝牙遥控器前,请在手机 设置 --> 辅助功能 --> 缩放 --> 打开缩放;

注意:打开"缩放"时, 画面会放大, 三指轻点两下恢复。

ΕN

Before iOS users use the Bluetooth remote control, please go to "Settings" --> * Accessibility" --> * Zoom" --> turn on "Zoom" on your mobile

phone.

Note: When "Zoom" is turned on, the screen will be enlarged. Double-tap with three fingers to restore

Thank you for purchasing Telesin products.

Important Precautions

- Please read this user manual carefully.
- Please keep the user manual properly. When handing the product to others, please be sure to attach this user manual.
- Please pay attention to all warning prompts and follow all instructions in the user manual.
- Do not disassemble or damage this product. If it is deformed or gets wet, please stop using it immediately.
- Please place this product where children canno reach it.

Warning 🛦

Do not disassemble the product or replace the battery. If you suspect any problem with the product, please contact the purchasing platform and apply for after-sales treatment.

Packaging Contents



Product Introduction



- Magnetic suction ring
- 360-degree rotating shaft
- Bluetooth remote control (detachable)
- Table clamp
 Hanging rope hole
- 1/4 inch screw hole

Bluetooth remote control

- Hanging rope hole
- Mode button
- Indicator light
- Power/Shutter/ Play/Pause button
- Type-C charging port



Specification Parameters

Model	P1-HSS-01
Material	Plastic + Metal
Phone clamping range	60 to 90mm
Maximum table clamping	40mm
Battery capacity	55 mAh
Charging interface	Type-C

Power On/Off

Power On

Press and hold on the remote control for 3 seconds to power on. The green indicator light will flash and enter the Bluetooth pairing mode.

Power Off

- 1. In the powered-on or sleep mode, press and hold (a) for 3 seconds, the green indicator light will flash 3 times and then turn off, indicating that the remote control has been powered off.
- The remote control will automatically power off after 30 minutes in sleep mode to save power.
- 3. After powering on, if no pairing is performed within 3 minutes, the device will enter sleep mode. It will automatically power off after 30 minutes.

Sleep Mode

Entering Sleep Mode

After pairing is completed, if there is no operation within 15 minutes, the device will automatically enter sleep mode.

2. When the Bluetooth remote control is connected to the phone, if the pairing is manually cancelled on the phone, the device is disconnected due to distance, or the Bluetooth function of the phone is turned off, the Bluetooth remote control will enter sleep mode. After 30 minutes in sleep mode, the Bluetooth remote control will automatically access of it is superpower.

Waking Up from Sleep Mode: Just press any button to wake up the device from sleep mode.

1. If the Bluetooth on the previously paired phone is still on, the device will automatically reconnect.

2. If the Bluetooth on the previously paired phone is off, the green indicator light will stay on for 3 seconds and then turn off, and then the green indicator light will flash for 3 minutes. If no pairing is performed during this period, the device will enter sleep mode and automatically power off

Mode Switching (Camera / TikTok)

- The default mode after powering on is the camera mode. After the phone's Bluetooth is paired, the green light will stay on for 3 seconds and then turn off.
- Double-click (a) to switch the camera mode to the TikTok mode, and the blue light will flash 3 times and then turn off.
- 3. Double-click of to switch the TikTok mode to the camera mode, and the green light will flash 3 times and then turn off.

Bluetooth Connection

Press and hold on the remote control for 3 seconds to turn it on, and then click the Bluetooth name (TELESIN-BS01) to connect.



After connecting Bluetooth, the Bluetooth remote control can perform the following operations:

- Double-click : Switch between camera and TikTok modes.
- In the camera mode (green light), single-click
 to take a photo / shoot a video; single-click
 to select the shooting mode of the native camera left and right.
- In the TikTok mode (blue light), single-click
 o to play / pause the video; single-click
 to scroll the video up and down, long-press to increase or decrease the volume.

Indicator Light Functions

Connection State	Indicator Light State
Before Bluetooth connection	Green indicator light flashes
After Bluetooth connection	Green light stays on for 3 seconds and then turns off
When using the buttons	Green indicator light flashes once
When charging	Red indicator light flashes
When charging is completed	Green indicator light stays on
Low battery reminder	Red indicator light flashes quickly

Usage Method

Hold the top cover of the travel bracket and slowly pull the phone clip out of the rod body.





1. Table clamping mode 2. Selfie stick mode





3. Briefcase Mode



4. 1/4" threaded expansion mode



FCC Caution

conditions: (1) This device may not cause harmful interference, and (2) this device must accept any infterference received, including interference that may cause undesired operation. 15.21 Information to user.

Any Changes or modifications not expressly approved by the partyresponsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.
These limits are designed to provide reasonable

protection againsamful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver in

-Connect the equipment into an outlet on a circu different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV * RF warning for Portable device:

IC Caution

transmitter(s)/receiver(s) that comply with Innovation, Science and Economic

Operation is subject to the following two

(1) This device may not cause interference.

(2) This device must accept any interference. including interference that may cause undesired operation of the device. Cet appareil contient des émetteurs/récepteurs

exemptés de licence qui sont conformes aux flux

Declaration of Conformity



Disclaimer

this product, it is deemed that you fully recognize and accept this statement. Before each use. please carefully check the product. If it is damaged or deformed, do not use it. By using this will be fully responsible for the actions and promise to use this product only for legitimate to as "Telesin") will not be liable for any abuse. caused by the use of this product. Users should follow the usage precautions mentioned herein service.

