

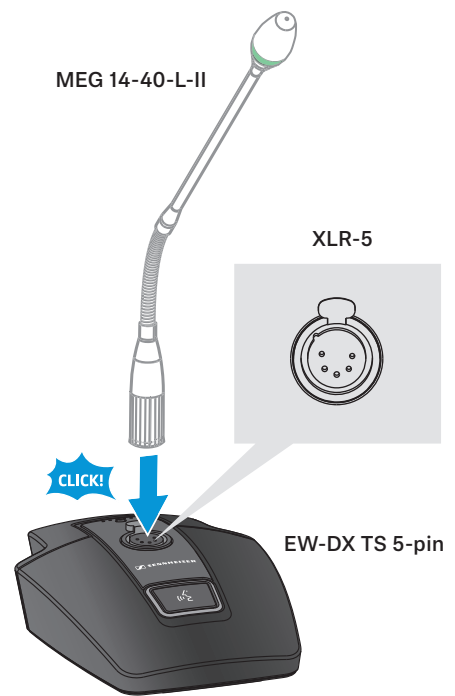


Setup

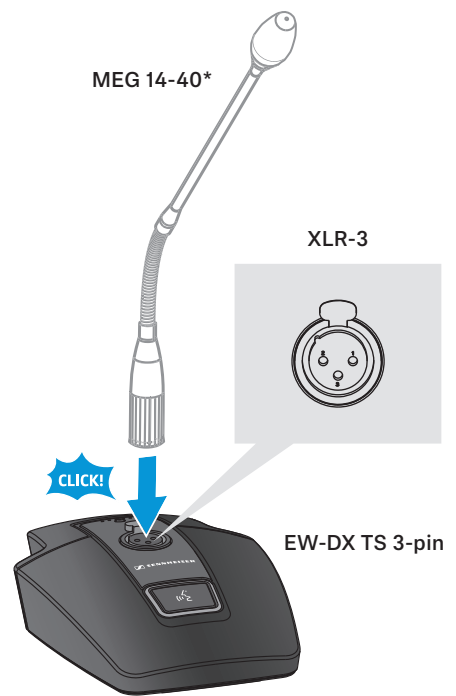

*see product specification sheet for more compatible XLR-3 gooseneck microphones

Battery/Charging

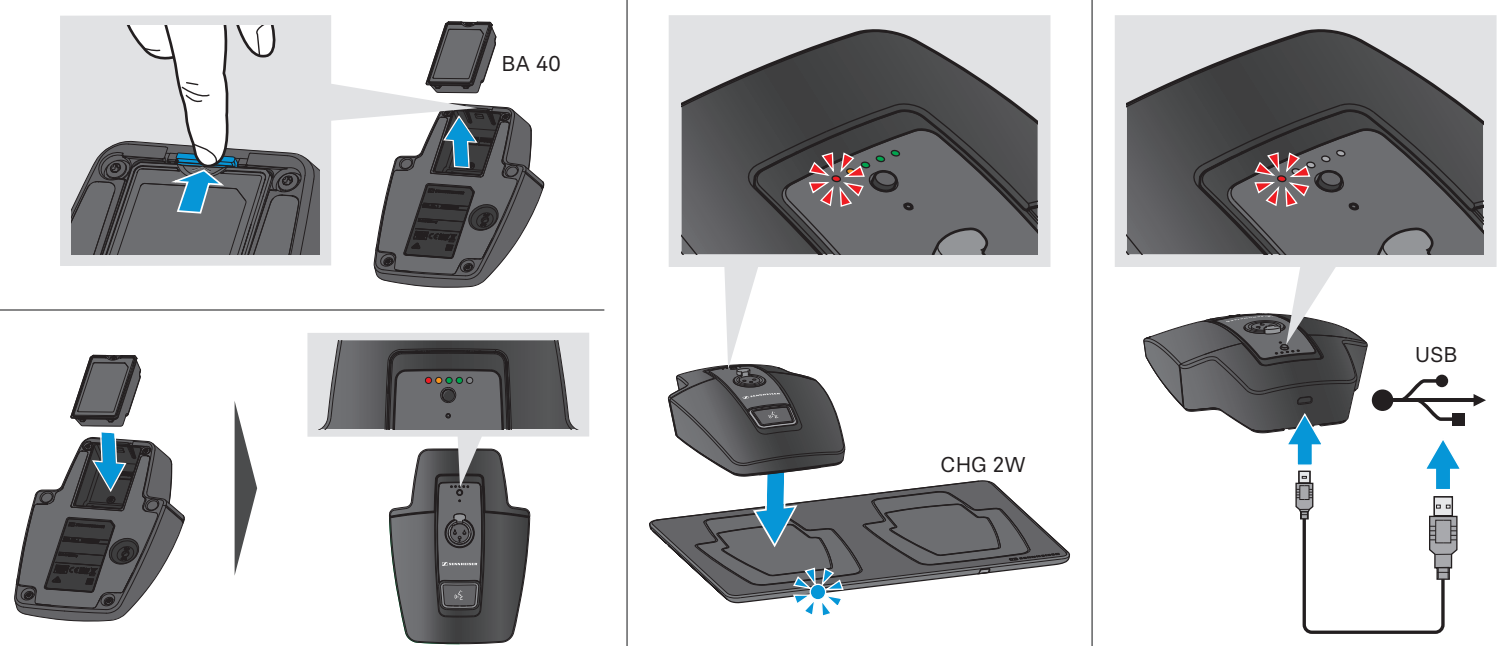

Operating time with BA 40 accupack

	100 %	11:00 h
	80 %	
	60 %	
	40 %	
	20 %	
	Low Batt	

Charging time (until fully charged)

	On	7:00 h	5:00 h
	Off	5:30 h	4:30 h
	On	7:30 h	5:30 h
	Off	5:30 h	4:30 h



www.sennheiser.com/download

EW-D Smart Assist



Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Printed in Germany
Publ. 04/22, 587469/A01




Evolution Wireless Digital

EW-DX TS


Quick Guide
Kurzanleitung
Guide rapide
Guida rapida
Guía de inicio rápido
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide

Kort vejledning
Pikaohje
Γρήγορος οδηγός
Kısa Kılavuz
Краткая инструкция
快速指南
クイックガイド
퀵 가이드


On/Off

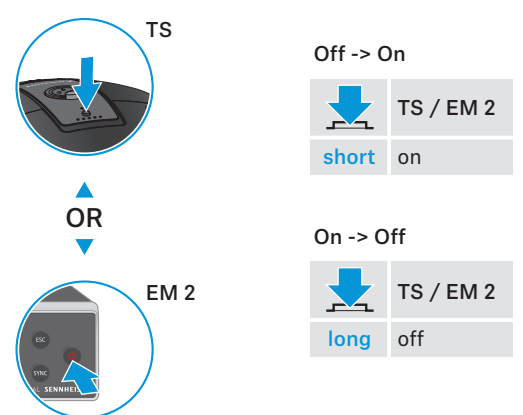


In the box

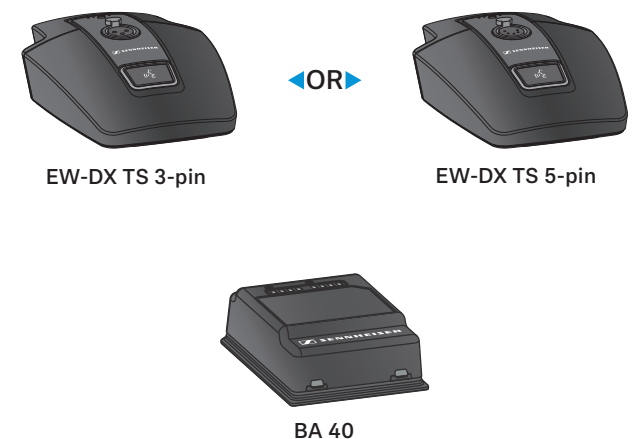

EW-DX TS 3/5-pin

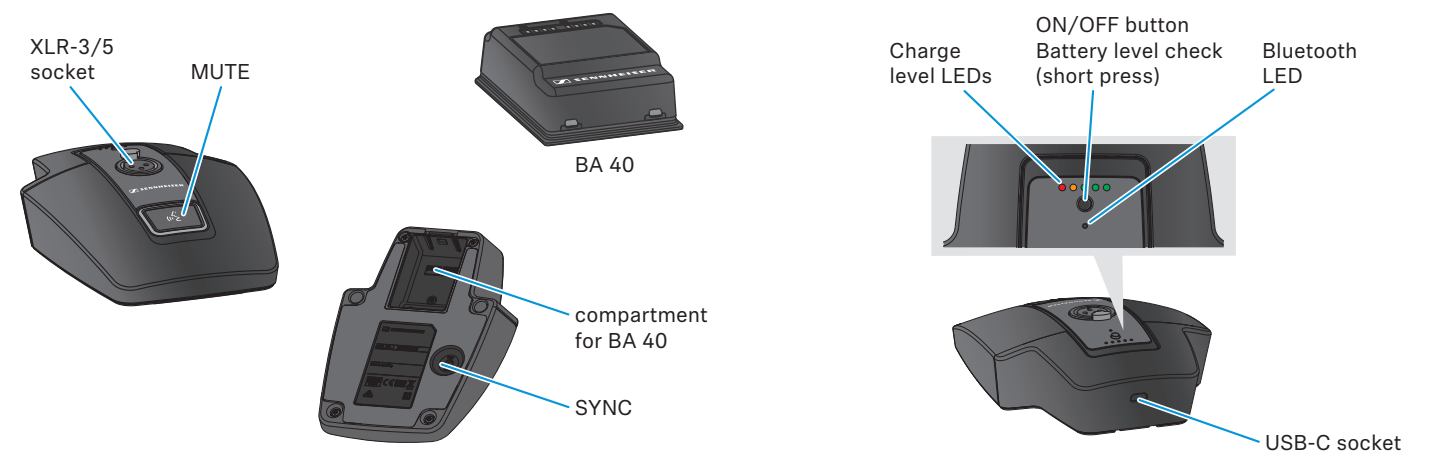

EW-DX EM 2

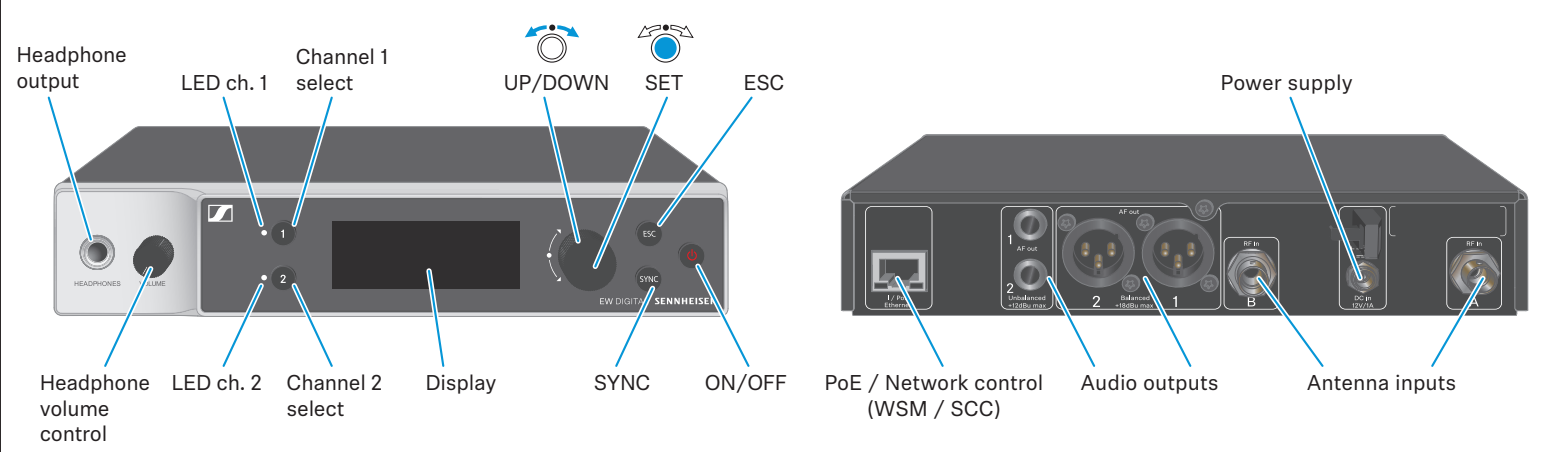

Display

System Home Screen

Frequency (Channel 1)

Link name (Channel 1)

Link name (Channel 2)

Frequency (Channel 2)

Transmitter battery (Ch.1)

Transmitter battery (Ch.2)

Radio frequency level and link quality (Channel 1)

Mute mode (Channel 1)

Radio frequency level and link quality (Channel 2)

Transmitter audio level (Channel 1)

System icons (see instruction manual)

Transmitter audio level (Channel 2)

Channel 1 Home Screen

Link name

Frequency

Radio frequency level and link quality

Transmitter audio level

Mute mode

Transmitter battery

Audio settings

Channel 2 Home Screen

Frequency

Link name

Audio settings

Transmitter battery



Radio frequency level and link quality

Transmitter audio level

LEDs

LED Ch.1/2	
	- Link ok - audio active
	- Link ok - audio muted or no capsule on SKM
	- Link ok - audio clip
	- No link
	- Link ok - Low transmitter - battery
	- No link - Device switched off
	Bluetooth active to - sync with transmitter - connect with app
	Firmware update in progress

 EM 2

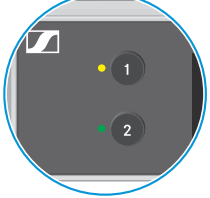

Sync

1 select channel & set parameters

2 short press

Ch 1

Press SYNC on mobile device

3 press

4

Ch 1

Sync successful

Mute

short press

MUTE

OR

1 select Mute Mode

2 set value

- Disabled
- AF Mute
- PTT
- PTM



www.sennheiser.com/download

Instruction manual | Bedienungsanleitung | Notice d'emploi | Istruzioni per l'uso |
Instrucciones de manejo | Manual de instruções | Gebruiksaanwijzing |
Instrukcja obsługi | Bruksanvisning | Betjenings vejledning | Käyttöohje |
Οδηγίες λειτουργίας | Kullanım kılavuzu | Инструкция по эксплуатации | 使用说明书 |
取扱説明書 | 사용 설명서 |

EW-D Smart Assist

