



CF76 Open Battery Cover





CF76 Disassembly Step 1





CF76 Disassembly Step 2







CF76 Antenna Disassembly





CF76 Disassembly Step 3






CF76 Disassembly Step 4



Page 7 of 7

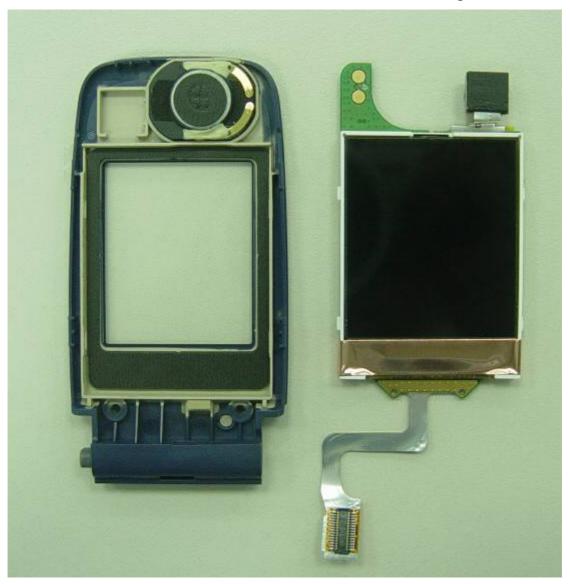

CF76 Disassembly Step 5