

User's Manual

Product name : KEYLESS TRANSMITTER

Type : TWB1G0084

Keyless Function

When the user pushes LOCK, UNLOCK, and the PANIC button of HAND UNIT, the RF electric wave is output, and TUNER receives it, and an open lock, the close lock of the door, and the signal of the trunk opening are output.




LOCK Button
UNLOCK Button

Operation Voltage	DC 3.0V
Battery	Lithium battery CR1620
Operating temperature range	-20~+60 degree C Keyless
Weight	7.8g
Operation of frequency	433.92MHz

How to confirm the certification marking

The label is attached inside of the cover which is readily removed, thus FCC ID and CE marking can be easily recognized by users.

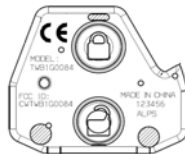

CAUTION

Pay attention to the following.

- It may not be operated when using the equipment of the same frequency band in the vicinity.

Please DO NOT the following. Engine is not started by failure of electronic parts. (Product can not receive the signal correctly)

- Give a shock.
- Get it wet. If it got wet, wipe and dry up
- Disassembly and modification.

-CAUTION - Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type

-CAUTION - Do not exposed to excessive heat such as sunshine, fire or the like.

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.