# SelfieGrip

Collapsible Grip with Shutter Button

USER MANUAL



# ONCORE

# INSTRUCTIONS FOR USE:

1. Remove adhesive liner from base **2.** Place adhesive base on clean surface.

Use caution when placing, as adhesive is very strong. **3.** To pair with your device, switch the "on/off switch to 'on'.

**4.** Search for "selfie Grip" in your phones Bluetooth settings and follow the prompts to pair.

5. Open your camera app and press the Selfie Grip to capture photos/videos.

6. Twist off and use as a remote shutter button from up to 32' away.



### BATTERY REPLACEMENT:

- 1. Twist off the shutter button by firmly holding the grip, and turning the shutter button counterclockwise
- 2. Slide the cover out to replace the battery. Uses a CR2025 3V lithium manganese button battery



#### SAFEGUARDS:

- water or moisture.
- flammable objects and excessive heat.

device in any way. Doing so may cause permanent damage to the device and violates any warranty in place.

## **PRODUCT SPECIFICATIONS:**

• Battery Type: CR2025 3V lithium manganese button battery Bluetooth distance: 32'



# FCC/IC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

#### user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- -- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### **RF EXPOSURE COMPLIANCE STATEMENT**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



CU.1366

Mo Rothstein Creoh USA, LLC 1750 Cedarbridge Ave Suite 4 Lakewood, NJ 08701 info@creoh.com

Lot number- 0522

• This device is not waterproof. Do not expose to

This device contains batteries. Keep away from

• Do not attempt to disassemble or modify the

